



XCSoar 6.6

the open-source glide computer

User Manual

July 11, 2013
For XCSoar version 6.6.4
<http://www.xcsoar.org>

Contents

1	Introduction	4
1.1	Organization of this manual	4
1.2	Notes	5
1.3	Platforms	5
1.4	Technical support	6
1.5	Training	7
1.6	Using XCSoar safely	7
2	Installation	9
2.1	Compatibility	9
2.2	Software installation	11
2.3	Data files	12
2.4	Running XCSoar	12
3	User Interface	16
3.1	The main button menu	17
3.2	Menu item overview	19
3.3	Default menu buttons	21
3.4	InfoBoxes and screen pages	22
3.5	Status messages	24
3.6	Dialogue windows	24
3.7	Acoustic alert and sound feedback	26
3.8	Screen visuals	27
3.9	Help system	27
3.10	Interfacing with gestures	27
4	Navigation	29
4.1	Map display elements	29
4.2	Glider symbol, map orientation	30
4.3	Zoom and map scale	30
4.4	Panning the map	31
4.5	Waypoints	32
4.6	Active task	33
4.7	Terrain and Topography	33
4.8	Trail	35
4.9	Markers	36
4.10	Thermals	36
4.11	Glide range line	36
4.12	Status tabs ‘ <i>Flight</i> ’ and ‘ <i>Time</i> ’	38
4.13	Route	39

5	Cross Country Tasks	41
5.1	Goto tasks	41
5.2	Editing tasks	41
5.3	Waypoint Information	42
5.4	Waypoint selector dialogue	45
5.5	Task manager	46
5.6	Task types	49
5.7	Task rules	51
5.8	Advancing and restarting tasks	52
5.9	Alternate starts	54
5.10	Abort/resume the task and Alternates	54
5.11	Task status	55
5.12	Assigned Area Tasks	56
5.13	OnLine Contest	61
5.14	Logger	61
5.15	Flight analysis	64
5.16	Sunlight and time	65
6	Glide Computer	66
6.1	Flight modes	66
6.2	MacCready setting	67
6.3	Glide polar	67
6.4	Flight setup dialogue	69
6.5	Speed command display	70
6.6	Speed to fly	70
6.7	Speed to fly with risk	71
6.8	Safety heights	72
6.9	Final glide calculator	74
6.10	Display of altitude required	75
6.11	Task speed estimation	76
6.12	Optimal cruise track	77
6.13	Auto MacCready	79
6.14	Analysis dialogue	80
6.15	Flight notifications	82
7	Atmosphere and Instruments	83
7.1	Variometer	83
7.2	Audio Variometer	84
7.3	Air data inputs	84
7.4	Wind display	84
7.5	Wind estimation	85
7.6	Wind settings dialogue	87
7.7	Thermal profile	87
7.8	Thermal locator	88
7.9	Thermal assistant	88
7.10	Convection forecast	89
7.11	Analysis dialogue	90

7.12	Weather forecast	91
8	Airspace, Traffic and Team Flying	96
8.1	Airspace display	96
8.2	Airspace warnings	97
8.3	Airspace query and details	100
8.4	Analysis dialogue	100
8.5	FLARM traffic	101
8.6	Team flying	104
9	Avionics and Airframe	106
9.1	Battery life	106
9.2	GPS connection	107
9.3	Switch inputs	107
9.4	Vega switch dialogue	108
9.5	Slave mode	109
9.6	System status	109
9.7	Multiple devices	109
9.8	Managing external devices	110
10	Quickstart	111
10.1	Local flight	111
10.2	FAI Task	112
10.3	AAT Task, Manual Arm	113
11	InfoBox Reference	117
11.1	Altitude	117
11.2	Aircraft state	118
11.3	Glide ratio	118
11.4	Variometer	119
11.5	Atmosphere	120
11.6	MacCready	121
11.7	Navigation	122
11.8	Competition and assigned area tasks	122
11.9	Waypoint	123
11.10	Team code	124
11.11	Device status	125
11.12	Alternates	125
11.13	Obstacles	125
12	Configuration	126
12.1	Scope of configuration	126
12.2	Modifying settings	126
12.3	Site Files / Site Files	127
12.4	Map Display / Orientation	128
12.5	Map Display / Elements	129
12.6	Map Display / Waypoints	130

12.7	Map Display / Terrain	131
12.8	Map Display / Airspace	133
12.9	Glide Computer / Safety Factors	134
12.10	Glide Computer / Glide Computer	135
12.11	Glide Computer / Wind	135
12.12	Glide Computer / Route	136
12.13	Gauges / FLARM, Other	136
12.14	Gauges / Vario	137
12.15	Gauges / Audio Vario	137
12.16	Task Defaults / Task Rules	138
12.17	Task Defaults / Turnpoint Types	139
12.18	Look / Language, Input	139
12.19	Look / Screen Layout	140
12.20	Look / InfoBox Pages (or just Pages)	140
12.21	Look / InfoBox Modes (or InfoBox Sets)	141
12.22	Setup / Devices	142
12.23	Setup / Polar	143
12.24	Setup / Logger	143
12.25	Setup / Logger info	144
12.26	Setup / Units	144
12.27	Setup / Time	145
12.28	Setup / Tracking	145
13	Data Files	147
13.1	File management	147
13.2	Map Database	148
13.3	Waypoints	148
13.4	Airspace	149
13.5	Airfield details	149
13.6	Glide polar	150
13.7	Profiles	151
13.8	Checklist	152
13.9	Tasks	152
13.10	Flight logs	152
13.11	FLARM Identification	152
13.12	Input events	153
13.13	Status	153
14	History and Development	155
14.1	Product history	155
14.2	Get involved	157
14.3	Open source philosophy	157
14.4	Development process	158
14.5	User base	158
14.6	Credits	159
A	GNU General Public License	163

Preface

Warnings and precautions



IT IS THE USER'S RESPONSIBILITY TO USE THIS SOFTWARE PRUDENTLY. THIS SOFTWARE IS INTENDED TO BE USED ONLY AS A NAVIGATION AID AND MUST NOT BE USED FOR ANY PURPOSE REQUIRING PRECISE MEASUREMENT OF DIRECTION, DISTANCE, LOCATION, OR TOPOGRAPHY. THIS SOFTWARE SHOULD NOT BE USED AS AN AID TO DETERMINE GROUND PROXIMITY FOR AIRCRAFT NAVIGATION. THIS SOFTWARE SHOULD NOT BE USED AS A TRAFFIC COLLISION AVOIDANCE SYSTEM.

Legal notices

Software license agreement

This software is released according to the GNU General Public License Version 2. See [Appendix A](#) for the full text of the agreement and warranty notice.

Limited liability

In no event shall XCSoar, or its principals, shareholders, officers, employees, affiliates, contractors, subsidiaries, or parent organizations, be liable for any incidental, consequential, or punitive damages whatsoever relating to the use of the Product.

Disclaimer

This product, and all accompanying files, data and materials, are distributed "as is" and with no warranties of any kind, whether express or implied. This product is used entirely at the risk of the user. Although great care has been taken to eliminate defects during its development it is not claimed to be fault-free. No claims are made regarding its correctness, reliability or fitness for any particular purpose. The XCSoar project developers and contributors shall not be liable for errors contained herein or for incidental or consequential damages, loss of data or personal injury in connection with furnishing, performance, or use of this material.

1 Introduction

This document is a pilot's manual for XCSoar, an open-source glide computer originally developed for Pocket PC devices. The audience is assumed to have a sound knowledge of the fundamental theory of flight for gliders, and at least a basic working knowledge of cross-country soaring.

Updates to the XCSoar software may result in some of this manual being out of date. You should read the release notes distributed with the software to keep track of changes. Updates to the manual and software are available from

<http://www.xcsoar.org/download>

1.1 Organization of this manual

This manual is broadly organized into the major functions of the software from a pilot's perspective. The remainder of this chapter deals with how to download, install and run the software on various platforms. Chapter 3 introduces the user interface concepts and gives an overview of the display.

Chapter 4 describes the moving map part of the display in greater detail and describes how the software can assist in general navigation. Chapter 5 describes how cross-country tasks are specified and flown, and presents some of the analysis tools available to pilots to help improve their performance. Chapter 6 goes into further detail on the glide computer functions as it is important for pilots to be aware of how the computer performs its calculations.

Chapter 7 describes how the computer can interface to variometers and other air data sensors, and how it uses these measurements to provide various models of the atmosphere, in particular on winds and thermal convection. Chapter 8 describes how XCSoar can assist in managing flight in special use airspace and the FLARM collision awareness system. Chapter 9 deals with systems integration and systems diagnostics, the integration of XCSoar with communications devices and with airframe switches.

The remainder of the manual contains mainly reference material. Chapter 11 lists the types of information that can be displayed in the grid of InfoBoxes next to the map display. The configuration of the software is described in detail in Chapter 12. The formats of the various data files that program uses, as well as where to obtain them from and how to edit them, is described in Chapter 13.

Finally, a short history and discussion of XCSoar's development process is presented in Chapter 14.

1.2 Notes

Terminology

A variety of terms may be used to describe embedded devices like the Pocket PC platform, including 'organiser', Portable Digital Assistant (PDA) and Personal Navigation Assistant (PNA). XCSoar is also available on Triadis Engineering's Altair glide computer, which is formally an Electronic Flight Instrumentation System, and several other platforms. Throughout this document, these terms are used interchangeably to refer to whatever hardware XCSoar is running on.

Screenshots

Throughout this manual are several screenshots of XCSoar. These are taken from the program running on a variety of hardware platforms and possibly even different versions. Each platform and version may have different screen resolutions, layouts and fonts, and so there may be slight differences in the appearance of the display. Most of the screenshots in this manual are taken of XCSoar running in landscape orientation.

1.3 Platforms

Windows PC : It is possible to run XCSoar on an ordinary computer with the Windows operating system. This setup can be used for training yourself in using XCSoar. A simulation mode is included in XCSoar as well as a IGC replay function, that can be used when not connected to a valid GPS source.

Windows Mobile PDA/PNA : Devices powered by Microsoft Pocket PC 2000 up to Windows Mobile 6 are supported by XCSoar. Windows Mobile 7 will not be supported as Microsoft decided to skip support for native applications from this version on.

Unix/Linux PC : XCSoar can be run on Unix using the Wine emulator. A native Unix port has been released with the 6.0 version of XCSoar, but is still considered experimental.

Android Devices : XCSoar runs on Android 1.6 or newer.

Altair : The Altair glide computer by Triadis Engineering is a glide computer factory installed with XCSoar. The Altair PRO version also contains an internal GPS.

1.4 Technical support

Troubleshooting

A small team of dedicated developers produces XCSoar. Although we are happy to help with the use of our software, we cannot teach you about basics of modern information technology. If you have a question about XCSoar in particular please email us at:

xcsoar-user@lists.sourceforge.net

Any frequent questions will be added to this document and to the Frequently Asked Questions (FAQ) section of the XCSoar website.

You may also find it useful to subscribe to the XCSoar users mailing list so you will be kept up to date with latest developments. You can find more information about the XCSoar mailing lists on our website:

<http://www.xcsoar.org/discover/maillinglist.html>

A log file of the startup progress of XCSoar is generated in the file `xcsoar-startup.log`. This can be sent to the XCSoar developers to help determine the cause of any startup related problems.

For Altair users, the startup file is transferred to the 'FromAltair' directory by AltairSync if a USB drive is plugged in when Altair is first switched on.

Updates

You should periodically visit the XCSoar website to check for program updates. The installation procedure described above can typically be repeated in order to upgrade the software. All user configuration settings and data files will be preserved during the re-installation/upgrade.

It is also recommended to periodically check for updates to data files, particularly Special Use Airspace, which may be subject to change by the national civil aviation authority.

Updating XCSoar on Altair

Updating XCSoar on Altair involves downloading the latest program file `XCSoarAltair-YYY-CRCXX.exe`, copying it to a USB memory stick, then using the AltairSync utility on the Altair device to complete the installation. Refer to the *Altair Owner's Manual* for details.

Other data and program files can be transferred to Altair in a similar way.

Feedback

Like any complex software program, XCSOar may be subject to software bugs, so if you find any, please report them to the XCSOar developers by using our bug tracker portal at:

<http://www.xcsoar.org/trac>

or by sending an email to

xcsoar-devel@lists.sourceforge.net

1.5 Training

For the safety of yourself and others, pilots using XCSOar are advised to train themselves in using XCSOar on the ground and become familiar with its interface and features prior to flight.

Using XCSOar on the PC

The PC versions of XCSOar may be used to become familiar with XCSOar's interface and functionality in the comfort of one's home. All files and configuration used by this version are identical to the embedded versions, so it can be helpful to try out customisations on the PC version before using them in flight.

The PC versions can also be connected to external devices and operate just as the embedded versions do. Suggested uses include:

- Connect the PC to a FLARM device to use XCSOar as a ground station display of FLARM-equipped traffic.
- Connect the PC to an intelligent variometer such as Vega to test configuration settings of the variometer.

Using XCSOar with a flight simulator

A good way to learn how to use XCSOar is to connect the Pocket PC device to a PC running a flight simulator that can output NMEA sentences to the serial port. Suitable simulators include Condor and X-Plane.

The benefit of this form of training is that XCSOar can be used in FLY mode, so it behaves exactly as if you were really flying, and you can get a good feel for how the program works while you are flying the simulator.

1.6 Using XCSOar safely

The use of an interactive system like XCSOar in flight carries with it certain risks due to the potential distraction of the pilot from maintaining situational awareness and eyes outside the cockpit.

The philosophy guiding the design and development of the software is to try to reduce this distraction by minimising the need for user interactions as much as possible, and by presenting information in a clear fashion able to be interpreted in a glance.

Pilots using XCSoar must take responsibility for using the system safely. Good practice in the use of XCSoar includes:

- Becoming familiar with the system thoroughly through training on the ground.
- Performing clearing turns before interacting with XCSoar in flight in order to ensure there is no collision risk with other traffic.
- Setting up the system to take advantage of automatic functions and input events so that user interactions can be minimised. If you find yourself mechanically performing certain interactions frequently, ask yourself (or other XCSoar users) if the software can be made to do these interactions for you.

2 Installation

To run XCSoar, you need to obtain the following:

- a device to run XCSoar on
- XCSoar
- a GPS receiver
- a waypoint file
- an airspace file (optional)
- a map file (optional)

2.1 Compatibility

Devices for running XCSoar

XCSoar runs on the following platforms:

- mobile phones and tablets with Android 1.6 or newer
Example: Dell Streak, Samsung Galaxy S II, HTC Desire HD, Motorola Xoom
- PDAs with Pocket PC 2000, 2002, 2003
Example: iPaq 3800, iPaq 3900
- PDAs with Windows Mobile
Example: iPaq hx4700, Dell Axim x51v
- PNAs with Windows CE 3.0 or newer
Example: HP314, Mio400
- Triadis Altair
- LX MiniMap
- Windows 2000 or newer
- Linux
- Mac OS X

GPS, Logger, Vario

XCSoar is compatible with any GPS emitting NMEA data. Most modern Android devices have a built-in GPS, but sometimes it is favorable to connect to an external device:

- an airspeed indicator allows quick and exact wind estimates without circling
- a vario improves the thermal assistant
- a task can be declared to an IGC logger, and after landing, the flight log can be downloaded
- some varios allow synchronising the MacCready setting with XCSoar

Supported external devices and features

NMEA Device	Supported:			-Features					-Stream Data			
	Declaration	Remote ctrl.	Download	Airspeed	Vario	Baro. altitude	Wind	G-Sensor				
Borgelt B50		✓		✓	✓	✓						
CAI 302	✓	✓	✓	✓	✓	✓	✓	✓				
CAI GPS Nav												
Condor				✓	✓	✓	✓					
Digifly Leonardo				✓	✓	✓	✓					
EW Logger	✓					✓						
EW microRecorder	✓					✓						
FLARM	✓		✓			✓						
Flymaster F1					✓	✓						
Flytec 5030				✓	✓	✓						
GTAItimeter					(✓)	✓						
ILEC SN10					✓	✓	✓					
IMI ERIX	✓		✓									
LX20, Colibri	✓		✓			✓						
LX Vario ¹	✓	✓	✓	✓	✓	✓	✓	✓				
LXNAV Nano	✓		✓									
LXNAV V7		✓		✓	✓							
PosiGraph	✓					✓						
Triadis Altair (pro)	✓					✓						
Triadis Vega		✓		✓	✓	✓						
Volkslogger	✓		✓			✓						
Westerboer VW1150		✓		✓	✓	✓						
Westerboer VW921, 922		✓		✓	✓	✓						
Zander / SDI		✓		✓	✓	✓	✓					

While most Windows CE based devices have a serial port, such legacy hardware is not present in modern Android devices. Those

¹ LX Navigation offers a variety of intelligent vario devices such as LX1600, LX5000, LX7000. They all share their NMEA functionality. The offered functionality in connection to XCSoar depends on last not least e.g. the vario's firmware revision.

can either use Bluetooth or the Android IOIO board. To use Bluetooth, you need to connect the external device to a Bluetooth-to-Serial adapter, such as the K6-Bt or the Glidertools VFBT-1.

2.2 Software installation

The software is available as a free download from the XCSoar website <http://www.xcsoar.org>. This section describes which file should be downloaded, and how to install it.

On Android

Obtain XCSoar from Google's Android market, or install the apk file manually. Copy the data files on the SD card in the directory XCSoarData.

On a PDA (Windows Mobile, PocketPC)

Choose one of the targets:

PPC2000 : Pocket PC 2000/2002, Windows CE 3.0

PPC2003 : Pocket PC 2003, Windows CE 4.0

WM5 : Windows Mobile 5 or newer

WM5X : Windows Mobile 5 or newer with XScale CPU or better (e.g. hx4700)



Download the program file XCSoar.exe to a SD card. You can launch it with the File Explorer. Another method to install XCSoar on a PDA is the CAB file. Download it to the SD card. Use the File Explorer to install it. After the installation, the XCSoar 'FLY' and 'SIM' launcher icons will be visible on the Today screen.

On a PNA (Windows CE)

Download the program file XCSoar.exe (target "WM5") to a SD card. You can launch it with the File Explorer.

On a Windows PC

Download the program file XCSoar.exe (target "PC") to your hard disk.

On Unix/Linux

The file downloaded is xcsoar_XXX.deb, where XXX includes the version number and platform, e.g. xcsoar_6.0.4_i386.deb. The is a Debian package and can be installed using

```
sudo dpkg -i xcsoar_XXX.deb.
```

Use `dpkg-query -L xcsoar` to see where the executable and other files are installed. Additional data files must be placed in the directory `~/xcsoar`. If `~/xcsoar` does not exist, it will be created the first time that `xcsoar` is run.

2.3 Data files

To be able to use XCSoar's advanced features, additional data files, such as terrain, topography, special use airspace, waypoints etc. are needed. The files that can be used with XCSoar are described in Chapter 13.

All data files should be copied into the directory `XCSoarData`. This directory must be in a specific place so that XCSoar knows where to look for data files:

Windows PC : `XCSoarData` is in your personal folder ("My Documents")

Windows Mobile PDA/PNA : If there is a directory named `XCSoarData` in the same directory as `XCSoar.exe`, then this one will be used. `XCSoarData` is on the SD card. If there is no SD card, then XCSoar looks for it in My Documents.

Unix/Linux : The directory is called `.xcsoar` in the user's home directory.

Android Devices : `XCSoarData` is on the SD card.

Altair : If `XCSoarData` exists on an USB drive, that one is used, otherwise the internal storage is used.

XCSoar will generate a number of additional files at run time. These will be placed in the `XCSoarData` directory (Windows PC and Windows Mobile devices), or the `.xcsoar` directory (Unix/Linux PC). At first run, XCSoar will create the files `Default.tsk` (Default Task), `xcsoar-registry.prf` (configuration settings), `xcsoar-startup.log` (log of the startup progress), plus three directories: `cache`, `config` and `logs`. Additional files may be created/modified while XCSoar is running, such as task files (`*.tsk`) and flight logs.

2.4 Running XCSoar

Two modes are available inside the XCSoar application:

FLY : This mode is used when actually flying. The simulator is disabled and serial communications are active.

SIM : This starts XCSoar in simulator mode, no serial communications are attempted.

Altair version

XCSoar starts up automatically when Altair is powered on. The PWR/ESC button (top left) has multiple functions:

- Powering on : Press and hold the PWR/ESC button for one second. The LED in the button will light up, and XCSoar will start after Altair has booted.
- Powering off : Press and hold the PWR/ESC button for 3 seconds. Altair will switch off.
- Escape : Pressing the PWR/ESC button quickly acts as an Escape key, typically used to close dialog pages or as a cancel function.

The Altair version of XCSoar does not include a simulator mode.

XCSoar PC version

The program can be run by opening the explorer window, finding the directory that has the XCSoar.exe executable, and double clicking on that program file.

The program command line options allows the screen orientation of the display to be defined:

- portrait : The screen is 480 pixels wide, 640 pixels high.
- square : The screen is 480 pixels wide, 480 pixels high.
- landscape : The screen is 640 pixels wide, 480 pixels high. This is the usual setting. If you don't specify this parameter the landscape version will be loaded automatically.
- small : Draws the screen at half size. This is useful for using XCSoar in conjunction with flight simulators e.g. Condor.


To change the screen orientation, it is convenient to create a shortcut to the program, then right click on the shortcut icon and click on "Shortcut". In the field "Target" add one of the desired options listed above.

XCSoar Unix/Linux PC version

Run `xcsoar` from a command line, or create a shortcut on the desktop. The location of the executable file may be found using `which xcsoar`. Only landscape mode is supported for now.

Loading data files

The first time that XCSoar is run, it does not automatically load the data files that you placed in the XCSoarData directory. To tell XCSoar which files to load, double click/tap the map (the large,

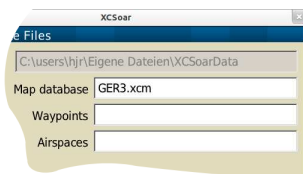

blank white part with the glider symbol in the center), choose the menu **Config 2** (click/tap it twice), then select the item **System**. The Configuration screen should be displayed: The first page allows you to choose the map, waypoint and airspace files, by clicking/tapping on the text boxes. Many other features of XCSoar may be configured here. These are described in detail in Chapter 12. Once completed, XCSoar reloads those files; from now on, the data files will be loaded automatically at run time.

Start-up and user profiles

When XCSoar starts up, it will check for existing profiles. If multiple profiles are detected it will display a small window asking you which profile to load. To proceed, choose the desired profile and press Enter. If no profile is chosen the settings from the last session are loaded again. Profiles can be useful for example in the following cases:

- Different pilots
- Competition versus casual flying
- Flying in different locations

SIM mode

The simulator contains a simple interface allowing the user to fly the glider about. On the map screen, clicking/touching the glider symbol (with touchscreen or mouse) and dragging causes the glider to move in the direction of the drag, the speed being proportional to the length of the drag.

In the PC version and for embedded devices with buttons, the aircraft speed, altitude and direction may be changed using the InfoBoxes. These features are not available for touchscreen devices. The aircraft altitude can be adjusted by selecting the GPS altitude InfoBox (marked **Alt GPS**), and pressing the up or down key. The airspeed can be adjusted by selecting the ground speed InfoBox (marked **V Gnd**), and pressing the up or down key. The glider's track can be adjusted by selecting the track InfoBox (marked **Track**), and pressing the up or down key. With either of the InfoBoxes **Alt GPS** or **V Gnd** selected, the glider's direction may be changed using the left/right keys.

Other controls, buttons and menus work the same as in FLY mode.

Splash screen

When XCSoar starts up, shuts down, or loads large files, such as airspace, waypoints, terrain, etc., a progress screen is presented

while the data is being loaded. This screen has a progress bar which indicates the data loading activity, and a short line of text describing the action that is being performed.

This screen also displays the software version information.

Exiting the program

For PDA and PC versions, XCSoar is shut down from the menu. The menu can be opened by double-clicking on the map or the InfoBoxes.


A rectangular button with the word "QUIT" in a sans-serif font.

For PC versions, XCSoar can also be shut down by clicking the close icon on the XCSoar window.

For Altair, XCSoar is shut down by holding the PWR button for two seconds or more.

3 User Interface

This chapter describes the fundamental user interface concepts used by XCSoar, and is intended as an overview. More detailed descriptions are given in following chapters.

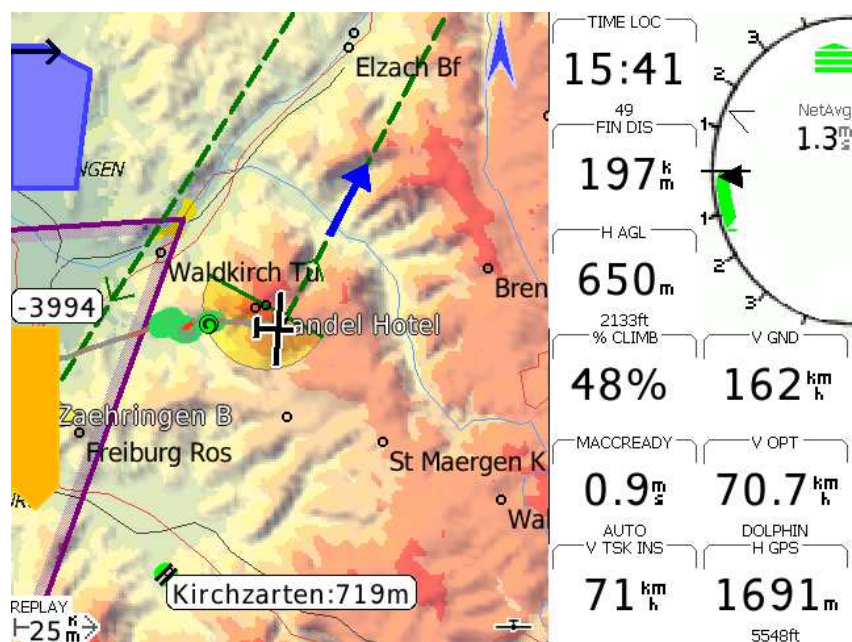


The XCSoar display is composed of several parts:

- Map area :** The bulk of the screen is dedicated to the GPS moving map display. Various symbols relating to glide computer information are overlaid on the map area. Icons and text may appear along the lower edge of the screen to indicate status of connected devices, operating modes etc.
- InfoBoxes :** A grid of data values is displayed usually either along the top and bottom of the screen (portrait display) or to the right of the screen (landscape display). These so-called InfoBoxes display data from the GPS and other input devices as well as data calculated by XCSoar.
- Gauges :** Gauges provide instrumentation displays. All gauges are optional and some may only have meaningful information displayed when XCSoar is connected to a supported instrument.
- Button labels and menus :** Hardware buttons on the device running XCSoar can be used to bring up and navigate smaller on-screen menus that

are typically laid out such that menu items can be selected by pressing the button adjacent to the item. If the device has a touch screen, the menu items can be selected by touching them. These buttons are drawn in black text on a grey background.

Status messages : Text is displayed over the map area in status message boxes. This text is used to present detailed information to the pilot when certain events occur.

 Dialogue windows : Larger dialogue windows, usually containing graphics and buttons, are used to present detailed data to the pilot regarding waypoint details, statistics and analysis etc.



Main menu : The main menu is accessible by double tapping the map area or InfoBoxes as well as through gesture. If the menu buttons are not pressed after a specified time, they disappear again so as to not obscure the map area.

There are several ways to interact with XCSoar:

- Touching certain map elements
- Touching InfoBoxes and on-screen menu buttons
- ‘Gesturing’, by e.g. drawing a dash from the left to the right on the screen (see Section 3.10 below).
- ‘Dragging’ the screen (touching the screen and moving before releasing).
- Pressing application buttons on the device.
- Pressing the cursor keys on the device.
- Pressing keys or switches on an instrument connected to XCSoar.

Depending on the particular hardware used with XCSoar, not all of these methods of interaction are possible and there may be different numbers or assignments of buttons.


For the PC version of XCSoar, clicking the mouse over an item is equivalent to touching it.

Since the Altair does not have a touch screen, all user interaction is performed via physical buttons, switches or other external interface devices if connected.

3.1 The main button menu

The button menu is a set of buttons drawn on the screen and activated by touch or hardware button presses. Using buttons and the button menu is the primary way the user interacts with XCSoar.

Interface basics

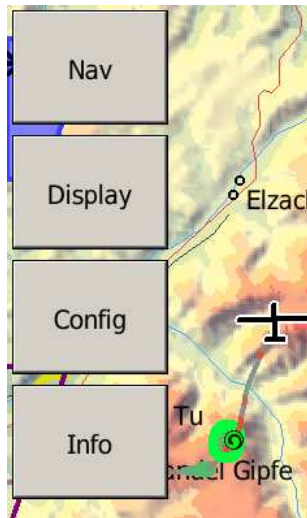

The menu is organised into four different groups of functions, usually in the form of a hierarchy. The specific menu layout depends on the hardware button configurations and platform, and may also be customised by the user.

XCSoar can also accept input from external keyboards, gamepads, joysticks, stick grip switches etc. A wide variety of functions can be assigned to these inputs.

For Altair, there are four major menus, activated by pressing one of the vertical strip of hardware buttons on the left of the display. When a menu is activated, a strip of on-screen buttons appear along the bottom of the display. Pressing the particular menu button again will cycle through several pages of items. Pressing the corresponding horizontal button will activate that item. At the last page, pressing the menu button again will turn that menu off and the horizontal strip of on-screen buttons disappear.

On the PC version, these mode buttons are activated by the 1, 2, 3 and 4 keys. The 6, 7, 8, 9 and 0 keys correspond to the horizontal strip of buttons.

On the PDA version, the mode buttons are activated by the keys to the side of the joystick/rocker button.

If the user doesn't interact with the computer for some time, the menu will close automatically. This menu time-out is configurable. The escape key on PC, or the PWR/ESC button on Altair, can also be used to close the current menu.

Menu buttons appear greyed out if the corresponding function is not available. For example, the "Waypoint list" function will appear grey if there are no waypoints loaded.

Several menu button labels have dynamic text based on context, in order to make it clearer as to what happens when the button is pressed. The convention is used that a button's label describes what will happen when the button is pressed. For example, if the button says **MC Auto**, then pressing the button will turn on 'Auto MacCready', and the button label will then change to **MC Manual**. In the menu list described below, generic labels are used.

Menu function groups

This section describes the default layout of the menu system on all platforms. The functions performed by each button are explained more fully in following chapters.

The primary menu buttons are activated by each of the vertical strip of buttons on Altair, from top to bottom:

- Nav
- : Actions for navigation control, primarily cross-country gliding tasks.
- Display
- : Actions to control the display.
- Config
- : Configuration of XCSoar, connected devices, and in-flight settings.
- Info
- : Activates various informational dialogue windows.

For the PC version, the keys 1, 2, 3 and 4 activate the corresponding menu. The following menu item list has on the left side of most of the menu buttons links to the respective section. Follow them to get to all related details.

3.2 Menu item overview

Navigation menu

Nav 1	5	Task	Previous Turnpoint	Next Turnpoint	5.4	Waypoint List	5.10	Alternates
Nav 2	5.10	Task Abort	4.9	Mark Drop		Target	5.3	Waypoint Details

You should not start using XCSoar without knowing about the ‘Alternates’ feature. Any ‘Task’ related item in the navigation menu are used for planned cross country flight and certainly the second step.

Display menu

Display 1	4.3	Zoom In	Zoom Out	Zoom Auto	Info Cruise	4.4	Pan On			
Display 2	4.7	Labels All/...	4.8	Trail Full/...	4.7	Terrain On/Off	4.7	Topo. On/Off	4.7	Airspace On/Off

Most of the display menu items are available on gestures, or special key short-cuts of your device. Once you are familiar with XCSoar you probably will use those menu items less frequently.

Configuration menu

Config 1	MacCready +	6.6	MacCready —	6.13	MacCready Auto	6.4	Flight	7.6	Wind
Config 2	12	System		Plane	12.22	Devices	File Manager	5.14	Replay
Config 3	5.14	Logger Start	5.14	Raw Logger	8.3	Airspace			Vega

The configuration menu is typically part of the ground interaction with XCSoar. You are not expected to spend much time in-flight with tweaking the configuration, except you manually adjust wind or MacCready settings. The ‘Vega’ item gives control over the Vega intelligent variometer. This comprises a sub-menu.

Information menu

Info 1	8.5	FLARM Radar		METAR TAF		What's here?	3.6	Check list	5.15	Analysis
Info 2	4.12	Status	7.12	Weather	8.6	Team Code		FLARM Details	8.6	Thermal Assistant
Info 3	14.6	Credits								Message Repeat


The information menu is always a good address, when not only a clue on how to set MacCready is requested, but rather more elaborate help on a larger scope tactical decision on your flight is requested.

The Vega variometer sub-menu of the configuration menu

Vega 1	Airframe Switches	Setup Audio	Manual Demo	Setup Stall	Accel
Vega 2	ASI Zero	Accel Zero	Store	Cruise Demo	Climb Demo

The functions in this sub-menu require the Vega intelligent variometer. The menu can only be accessed if ‘Vega’ is selected as the connected device.

 
The pan mode sub-menu of the Display menu



This sub-menu unfortunately overlays the full-screen map view of the pan mode. It's functions are quite evident, although the menu could be replaced by multi-touch technology or knobs (like on Altair). Besides the essential 'exit pan mode' function the 'What's here?' button offers brilliant access to the variety of information of the map.

3.3 Default menu buttons

When no menu is active, (so-called default mode), the horizontal row of buttons in Altair perform the following functions (from left to right):

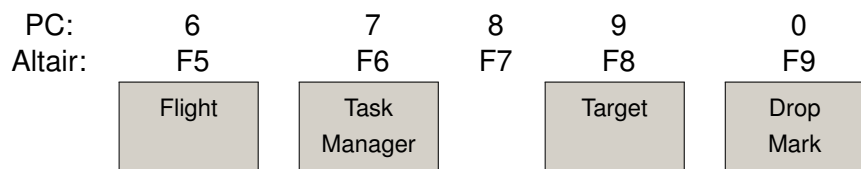

Pressing ESC on Altair displays labels for these default menu buttons.

For all other versions in the default mode, the cursor keys perform the following functions:

- Up key : Zoom in
- Down key : Zoom out
- Left key : Drop marker
- Right key : Toggle through normal/aux. InfoBoxes and full-screen
- Enter : Clear status message or suppress FLARM gauge if open and no warning active

For the Altair version in the default mode, the rotary knob performs the following functions:

- Outer knob counter-clockwise : Zoom in
- Outer knob clockwise : Zoom out
- Inner knob counter-clockwise : (No function assigned)
- Outer knob clockwise : (No function assigned)
- Knob button press : Clear status message or acknowledge airspace warning

In dialogue forms, the rotary knob in Altair performs the role of the cursor and enter keys:

- Outer knob counter-clockwise : Up cursor
- Outer knob clockwise : Down cursor
- Inner knob counter-clockwise : Left cursor

Inner knob clockwise : Right cursor

Knob button press : Enter key

For Altair, the buttons along the edge of the display can be used as alternate ways of navigating in dialogues. The F4 key (directly above the rotary knob) can be used as an alternate ENTER key (instead of pressing the rotary knob) in dialogues. The F6 and F7 keys (directly to the right of the rotary knob) can be used to select the next or previous page in multi-page dialogues.

Dynamic menu labels

Certain menu items have dynamic labels to make it clearer what happens when the menu item is selected. Furthermore, items that are not available are greyed out to indicate that selecting the menu item will not do anything.

The convention used for dynamic menu labels is for the labels to display the action that will be performed once the menu item is selected. For example “Lights On” will turn the lights on, and the menu will be updated to display “Lights Off”, which would then if pressed turn the lights off. This convention is used throughout XCSoar.

A selection of key dynamic menu items is presented below:

Next Turnpoint : Greyed out if the task is cleared, or if the active turnpoint is the finish. If the currently active turnpoint is the turnpoint prior to the finish, this displays “Waypoint finish”.

Previous Turnpoint : Greyed out if the task is cleared, or if the active turnpoint is the start and there are no multiple start points. If there are multiple start points and the active turnpoint is the start, then this displays “Cycle start” to allow selection between the various start points. If the active turnpoint is the first turnpoint after the start, this displays “Waypoint Start”.


Labels All : This will turn on all labels available on the map. There are more options to only show a reduced set of labels like “Labels Task”, thus not cluttering the screen too much.

Target : Greyed out if the task is cleared or in task abort.



3.4 InfoBoxes and screen pages

The information displayed in the InfoBox fields can be selected from a wide variety of options (listed in Chapter 11). These fields can also be used to change for example the MacCready setting.

The specific number and layout of the InfoBox grid depends on the screen orientation and the device’s display size.

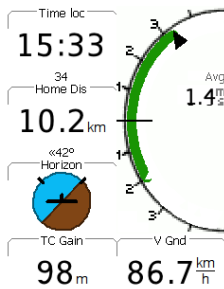

Pages with different InfoBox sets

 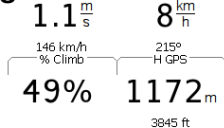

For a 320x240 display Pocket PC in portrait mode, there are four InfoBoxes above and four InfoBoxes below the map display.

A typical landscape layout has 9 InfoBoxes and the variometer gauge to the right of the map display.

For larger displays are up to 24 InfoBoxes on one screen page possible.

XCSoar allows the pilot to define various sets of InfoBoxes that are appropriate to various stages of flight (e.g. when circling in a thermal, flying between thermals, on final glide, etc.). XCSoar can be configured to automatically switch from one screen page to another based on the mode of flight, or you can manually roll through the various pages, including one with a full-screen map and no InfoBoxes at all. Thus a screen page consists of a InfoBox set and specific map appearance, that includes map orientation and scale.

To toggle through the various InfoBox pages, using the left/right cursor keys (Altair), or by gestures (touch-screen).

Modifying InfoBox content

(This section applies only when a touch-screen or mouse is present.)

Some InfoBox values can be changed by the user by selecting (i.e. long-pressing) the InfoBox with the touch-screen or mouse. This brings up a small tabular dialogue:

Edit : Allows the pilot to adjust the InfoBox setting (e.g. raise or lower the MacCready setting)

Setup : Allows you to change the behaviour of the setting related to the InfoBox (for example, changing from auto to manual MacCready mode); or to change the InfoBox itself by pressing 'Switch InfoBox', then choosing from a list of all available InfoBoxes.

Examples of InfoBoxes that can be adjusted include MacCready setting, wind speed, and altitude (QNH).

Changing InfoBox sets

An entire set of InfoBox can be composed by the 'Setup System' configuration dialogues on the 'Look / InfoBox Modes' and 'Look / InfoBox Pages' [12.21](#) setup page. The dialogues give a wide variety to setup the look and feel of the XCSoar pages.

3.5 Status messages

Status messages appear over the map area to present text for a short period of time. The message disappears after the time period has elapsed, and different types of message have different periods. Additionally, status messages can be made to disappear by acknowledging the message. Acknowledgement is achieved by either pressing the enter key (rotary knob on Altair), touching the status message (on touch-screen devices) or clicking the screen (mouse enabled devices).

Takeoff

Additional user buttons may be assigned to a status message repeat function, which brings up the last message again.

Typical status messages include:

- Airspace queries
- Airspace warnings
- User interface events (e.g. changing display modes)
- Glide computer events (e.g. take-off, turning waypoints)

Note that status messages do not appear while a dialogue is on screen, the messages are buffered and displayed as soon as the dialogue is exited.

3.6 Dialogue windows

XCSoar contains several dialogue windows that can be activated to bring up additional information and are also used for more complex interactions with the user, such as editing tasks and configuring settings.

Some dialogues simply display information, and require no user input. Other dialogues contain data fields that can be modified or buttons that can be pressed.

A cursor appears over the active button or data field. Pressing the up/down arrow keys (or rotating the outer knob on Altair), the cursor will cycle through the next or previous items. For list items and scrollable text, the up/down arrow key moves the cursor up or down the list or text, and the left/right arrow keys move the cursor up or down by one page in long lists.

For PDAs and PC versions, list items can be selected by touching the item (or left-clicking with the mouse). Once a list item is selected, another touch (left click) is equivalent to pressing the enter key.

Pressing the right/left arrow keys (or rotating the inner knob on Altair), the data field value under the cursor can be modified. Press-

ing the enter key (or pressing the rotary knob on Altair) activates the button or makes a selection from a list.

Dialogues are typically started from the button menu.

Many of the dialogue windows have multiple pages of information and are controlled in a consistent fashion. Press the  or  buttons to select the next or previous page of the dialogue and the  button to make the dialogue disappear.

The escape key on a PC or the PWR/ESC button on Altair, can also be used to close dialogues.

The user must close the dialogue to return to the map view. When a dialogue has been opened, the main button menu is disabled until the dialogue is closed.

In some dialogues, items that are not relevant or valid (such as AAT details when flying a non-AAT task) are not displayed.

 

A summary of the major dialogues is presented below.

- Flight setup : Used to modify the polar of the glider both before and during flight, as well as to set the QNH pressure
- Wind : Used to modify or adjust the estimated wind magnitude and direction
- Waypoint details : Describes a waypoint in detail and has navigation functions such as 'GoTo' and 'Insert in Task'
- Waypoint list : Used to select a waypoint from the waypoint database
- Task manager : Used to create, modify and view cross country tasks
 - Analysis : Shows several pages of analysis and statistics about the flight
 - Status : The status dialogues give summaries of the situation of the aircraft, system, task, start and times
- Configuration : Allows XCSoar and certain connected devices to be configured
- Airspace filter : Controls enabling and disabling the display and warnings of each airspace class
- Team code : Allows transfer of coordinates between FLARM team mates via a code
- Devices : Selection of various external devices (e.g. smart variometers, FLARM, etc.).
- Setup Plane : Easy reconfiguration of the plane-dependant settings (e.g. polar, competition ID, etc.) by choosing from a list of previously-created plane profiles.

These dialogues are described in later chapters. with the exception of the check-list, status and text entry dialogues, which are described below.

Check-list (dialogue example)

The checklist dialogue can display several pages of user-defined free text. Typically this is used for check-lists. It can be accessed via the menu.

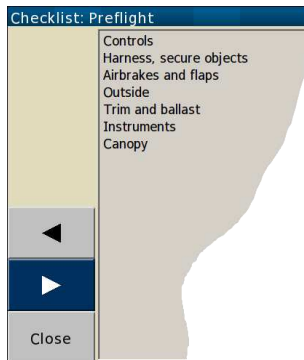


These check-lists may include: daily inspection, preflight, out-landing, pre-landing, radio procedures, and aircraft rigging and de-rigging instructions. Since the check-lists may be long, the up/down keys (or rotary knob on Altair) may be used to scroll through the text. Clicking the  and  buttons selects the previous/next checklist.


Text entry

A text entry dialogue is used for entering text. This is used for team code entry, setting file names, waypoint editing, as well as entering other configuration options, such as pilot name for the logger.

 Two ways of entering text are provided.



To enter text in 'high score style', use the A+/A- buttons to adjust the character under the cursor (underlined character). Clicking the  and  buttons move the cursor left/right.

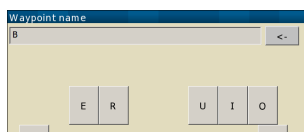

To enter text with the touch screen keyboard, press the letters of choice one after the other. In some dialogues (e.g. waypoint editing) only the next letters matching to an entry in the database will be shown. For deleting the last letter use the  button.

The  button deletes all input.

Press  to take over, or  to exit.

3.7 Acoustic alert and sound feedback

XCSoar generates sounds for different events, and can be configured to have custom sounds for any event. See Section 13.13 for details on customisation.

When XCSoar is connected to the Vega intelligent variometer, it sends commands to Vega's speech system, to give verbal clues and warnings such as:


- Final glide through terrain

- Approaching/passing a task waypoint
- Airspace warnings

The XCSoar user interface also can connect sound feedback to the completion of any command like:

- Marker dropped

3.8 Screen visuals

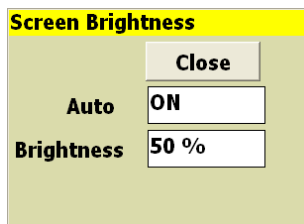

Certain aspects of the look of items on the screen can be adjusted. The most noticeable of these is whether to display InfoBoxes and gauges in white on black (called inverse colours) or black on white.

For Altair the control of the screen hardware brightness can be controlled from the brightness dialogue.

Display 2 > Bright

Refer to the *Altair User's Manual* for details of the brightness dialogue.

 
3.9 Help system

A help system now provides descriptive text for properties in most dialogues. When a property is selected, for Altair, press and hold the enter button for two seconds, then release. A window will open with help text describing the property.

3.10 Interfacing with gestures

As of version 6.0, XCSoar supports so-called 'gestures'.

To use this feature hold down the finger on the touch-screen (or mouse button at the PC), draw a certain figure and release the touch-screen / mouse button. Depending on the figure that was drawn a certain function is activated. A list of generally available gestures is shown below.



A figure is defined by movements of the cursor in the four directions Up, Down, Left and Right. This means if you drag your finger down and afterwards to the right over the screen, the gesture "DR" is detected, which stands for "Down-Right". It will bring up the waypoint list. The manual indicates an available gesture as shown here on the left side of the text body.

Generally available gestures on the map screen:


- U: Zoom in
- D: Zoom out

- L: Toggle map mode pro-grade (Normal, Aux. InfoBoxes, Full-screen)
- R: Toggle map mode retrograde (Normal, Full-screen, Aux. InfoBoxes)
- DU: Show the menu
- DR: Show the Select Waypoint dialogue
- RD: 'T' opens the task dialogue

4 Navigation

This chapter describes the moving map display as an aid to navigation, and also describes some of the task and glide related overlays on the map display.

4.1 Map display elements

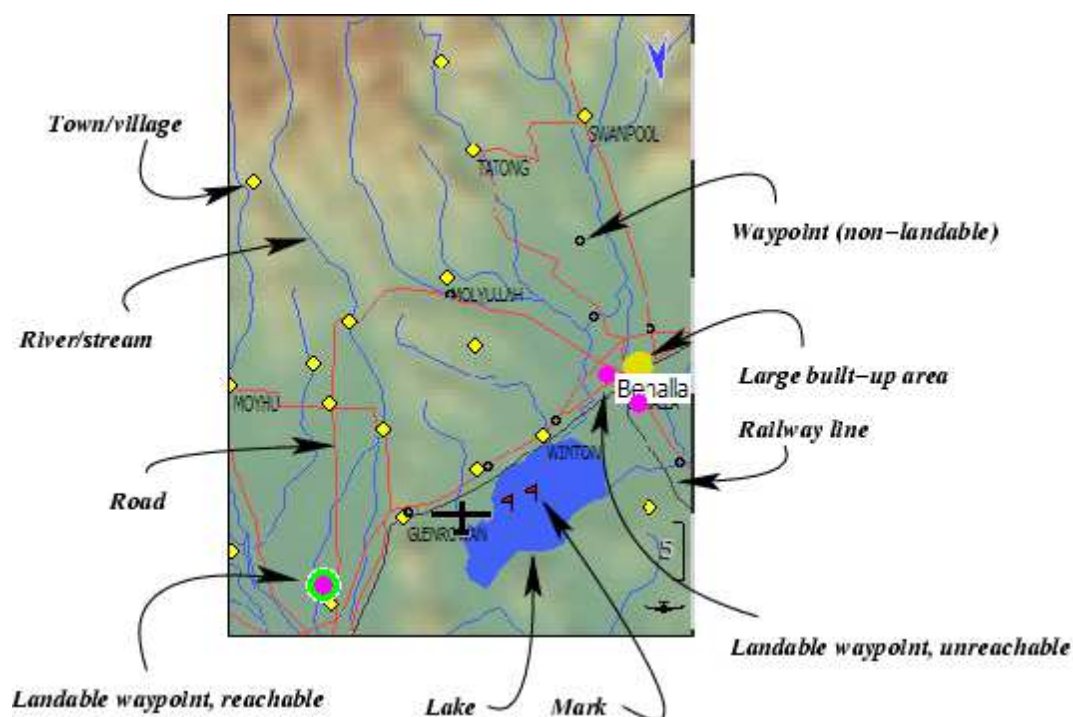

The moving map shows:

1. Glider, wind indicator, thermal profile, final glide indicator
2. Terrain, relief and height of the terrain
3. Topography, rivers, roads, towns
4. Waypoints, airports, landables
5. The active task, observation zones, turnpoints
6. The bearing (or route¹) to the next waypoint, heading
7. Airspaces

¹ The line to the next waypoint may be a *route*, as described in Section 4.13.

8. Markers, thermals history, snail trail

9. Glide range²

The map is drawn in a projected coordinate system (not latitude and longitude), and the scale can be changed (zooming in and out), as well as panned. All navigation functions take the curvature of the Earth into account.

4.2 Glider symbol, map orientation

The glider symbol shows the position of the glider on the map. The orientation of the glider indicates the estimated heading of the glider.



The map is oriented in one of three ways: North up, Track up, or Target up. Configuration settings can be used to specify a different map orientation when in circling mode. This is useful to prevent disorientation when looking at the map while circling. Target-up when circling makes it easy to determine which direction to exit the thermal.

When Track or Target-up is used in circling mode, the glider symbol is centred on the screen, even if the symbol position is configured differently. In cruise mode the Track and the Target-up orientation allows the glider symbol to be positioned (e.g.) 20% from the bottom of the screen, giving a good view of the map ahead of the glider. This position is adjustable in the configuration settings.



4.3 Zoom and map scale

To change the scale of the map, for PC, PNA, or Pocket PC:

1. Tap/click on a blank part of the map to highlight the map if it is not already selected. Then use mouse wheel, or the Pocket PC up/down key to either zoom in or out.
2. A PNA with a button wheel let you also change the zoom.
3. Android devices have the +/- rocker that let you change the zoom.
4. You can also gesture to change the zoom level. Gesture 'Up' zooms in, 'Down' zooms out.
5. Or select the function from the menu.



Display 1 > Zoom In and Zoom Out

6. On Altair, the rotary knob can be used to zoom in and out.

 
² The glide range is also referred to as the *reach*, as described in Section 4.11.



The map scale is displayed in the lower left corner of the moving map display. The indicated distance is measured from the left to the right boarder of the map display.

Compaq Aero Users. If you enable the Compaq Aero Game Keys (On the Q-menu) the centre two front buttons become the up/down keys.

12.4



There is a facility to have two zoom settings; one when the glider is in circling mode, and one in the cruise or final mode. This is the 'Circling zoom' option in the configuration settings. By default, the circling zoom is set to about 2.5 km - 5.0 km, depending on the display size. When the user zooms in or out, it affects the current mode's zoom setting only, so when leaving the mode the previous mode's zoom setting is used. If 'Circling Zoom' is not enabled, there is only a single zoom level.

'Auto Zoom' automatically zooms in when approaching a waypoint to keep the waypoint at a reasonable screen distance. When 'Auto Zoom' is active, 'AUTO' appears next to the map scale. The user can still zoom in and out if desired, zoom will be switch to manual control automatically.


When a waypoint changes (automatically, via the task selector, or by manually switching waypoints), 'Auto Zoom' adjusts the zoom level automatically so that the next waypoint is visible on the map.

During circling, if a thermal has been detected, then the map is centered about the thermal or part-way such that the glider is still visible.

4.4 Panning the map



Up - Right - Down - Left

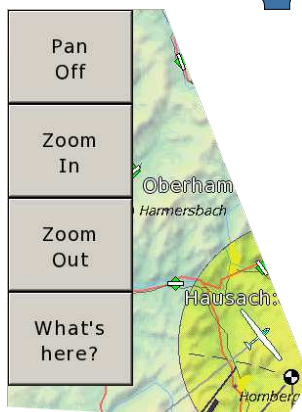

A pan mode allows the user to explore areas beyond the glider. This is particularly useful when task planning.

1. Enable pan mode by button menu, by gesture, or, on Android devices, by a two finger touch and swish over the map.
2. The map can then be panned by dragging the screen or using the cursor keys. For Altair, panning is performed with the inner/outer rotary knob.
3. When done, pan mode has to be disabled manually, by pressing 'Pan Off' from the special sub-menu of buttons in pan mode.

When pan is active, the letters 'PAN' appears next to the map scale. While panning the location of the focus stays in the middle of the display under the cross hairs.

Despite the focus under the cross-hairs (for Altair users) the map still offers the 'What's here?' feature just by touching any position on the map (presuming a touch-screen).

4.5 Waypoints

Waypoints are displayed with different symbols depending on the waypoint type; the major distinction being landable and non-landable waypoints.

Landables

12.6 

The waypoint symbols are drawn as shown below There are three icon sets for landable waypoints.

Icon set	Landable field			Airfield		
	Landable field	Marginal	Reachable	Airfield	Marginal	Reachable
Purple Circle						
B/W						
Traffic lights						

The *marginal* icons are drawn for those waypoints which are principally in the reach, but it is not possible to approach them directly. E.g. a mountain prohibits a direct approach.

12.6 

Waypoints are optionally labelled according to one of several abbreviation schemes and visibility.

On top of this landable waypoints can be displayed more detailed. If *'Detailed landables'* is switched on you get additionally information encoded in the appearance of it's icon.


1. Landable fields get a square-shaped icon despite what is shown in the table. The square is drawn like a diamond standing on one corner. Airfields stay with the circle shape, so that they become easy to distinguish.
2. All icon sets, including the 'Purple Circle' icon set, get the runway turned into their actual direction. The runway direction has to be available in the waypoint data. E.g. the SeeYou waypoint file format (.cup) does include this information.

XCSOar continually calculates which landing points are within gliding range using the current wind estimate. The estimated arrival altitude *above the arrival safety height* of reachable landable points is displayed next to the waypoint. This arrival altitude is calculated with the glider performance and MacCready setting configurable as either that of the task, or at a safety MacCready value.

12.12 

Non-Landables


As far as your waypoint file contains information on the nature of the non-landable waypoints, the map will then display specific icons accordingly. The table contains a collection of the currently supported map icons:

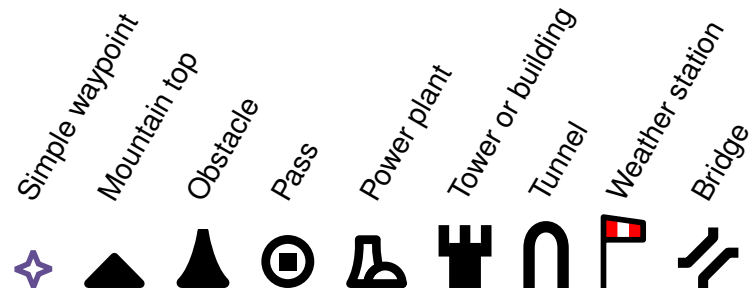

4.6 Active task

The active task course is drawn on the map as a blue (dashed) line. Assigned area tasks also show the turn point sectors or areas as a yellow shaded region. Circles are always drawn around start and finish points, lines are only drawn if the start/finish points are of line type. Task observation sectors are drawn as circle segments.

At all times a thick black line is drawn from the glider to the next waypoint in the task. This line may be the direct path to the waypoint, or may be a *route* path clearing terrain and airspace obstacles, described in further detail in [Section 4.13](#).

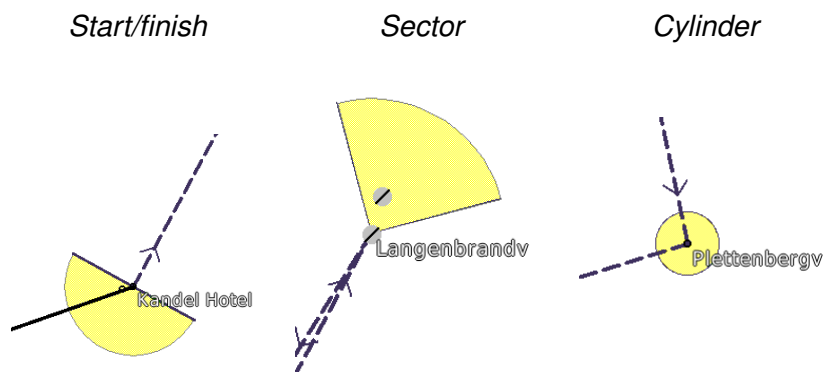

4.7 Terrain and Topography

The following topographical features are drawn on the map:

- Major roads, shown as red lines
- Rivers, shown as blue lines
- Large water bodies (lakes), shown as blue areas


 
 
- Large cities, shown as yellow areas
- Small population areas, shown as yellow diamonds

Cities and small population areas are labeled in italics.

Terrain is coloured according to elevation, and optionally shaded by sun, or wind direction. Invalid terrain, or terrain below sea level is coloured blue.




Terrain is shaded to improve visibility. The default shading is set up so that the virtual lighting position is the wind bearing, thus brighter areas are on the upwind side of hills and dark areas in the lee of the hill. Support for a sun ephemeris is also implemented. If the slope shading is set to 'Sun', the brightness of a slope follows the day time in a very natural way. The amount of shading and overall terrain brightness is configurable .

Both terrain and topography display can be switched on or off from the menu.

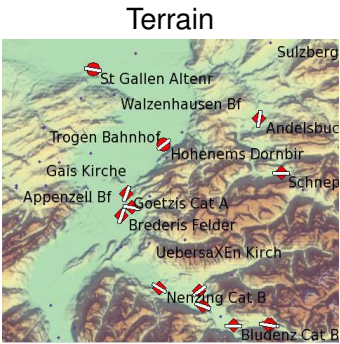

If the terrain data is not available (or terrain display is turned off), the background colour of the map window is white. All terrain below mean sea level is coloured blue. If you are flying outside the terrain region, the background colour will be white.

  Map labels

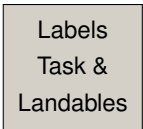

The screen can be de-cluttered, turning off the display of topography labels and non-task waypoint labels by toggling the 'Labels' menu.

Other options for display decluttering include:

Shows labels for the waypoints in the active task and any landable fields (based on the waypoint attributes in the waypoints file). Other waypoints are shown but not labeled.

Shows labels only for waypoints in the active task




Shows labels for all waypoints.



Note that in all cases, the label format is configurable in the 'Way-point Display' configuration menu.

4.8 Trail


An optional 'snail trail' is drawn on the map showing the glider's path history. The colour and thickness of the trail depends on the altitude or on the variometer value.

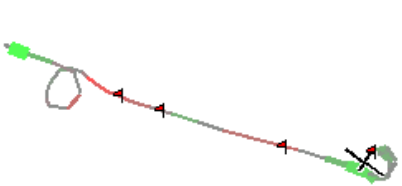

If Vega or an intelligent variometer is connected with Netto output, the Netto vario value is used; hence the colours and thickness of the trail indicates the air-mass vertical movement rather than the glider's vertical movement .



 
The snail trail display can be toggled between **Off**, a **Short** trail (about ten minutes), a **Long** trail (about one hour) or a **Full** trail which displays the entire flight. This can be performed permanently through the configuration settings or temporarily by the menu.




Note that for all of these modes, the snail trail is short in circling mode in order to reduce screen clutter.

In order to assist centering thermals in the presence of wind, the snail trail can be artificially drifted with the wind as it is displayed (this is drift compensation). In this way, the snail trail is referenced to the prevailing wind rather than referenced to the ground. Since thermals drift with the wind also, the drifted trails give a better indication of where the glider has been relative to the thermals.

An example of this is illustrated below. Note that when trail drift compensation is active (right picture), the glider appears to be circling in a column rather than an elongated spiral (left picture).

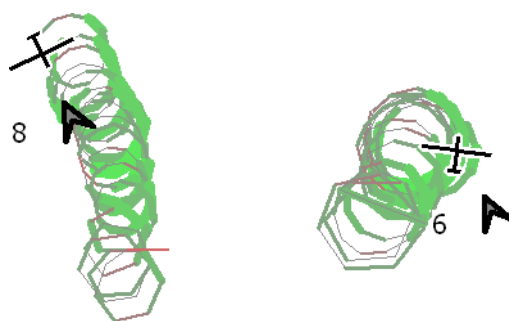

 12.5




Enabling trail drift compensation is performed through the configuration settings. The compensation is only performed whilst in circling mode; the display of the trail in cruise mode is unaffected. This can also be performed from the wind settings dialogue.

The trail drift display is useful also to show more clearly when thermals are cranked due to wind shear.

The trail width can optionally be scaled according to the variometer display.

 4.9 Markers



Markers are shown as small flags (a) on the map. The markers can be dropped manually, by pressing a button, or automatically. An example use of automatic markers is to drop markers when entering circling mode, as a simple way of showing all thermals encountered.

Markers are not preserved after XCSoar is exited, however the location of all marks are appended to the file `xcsoar-marks.txt`.

4.10 Thermals



While climbing in thermals automatically a mark is generated and stored up to the end of the flight. This thermal history is accessible through the map element functions in the same way as markers or waypoints.


4.11 Glide range line

A reachable glide 'footprint' is displayed on the map display as a black and white dashed line, indicating where the glider would descend through the terrain clearance height. The reach shows clearance tracks extending in all directions, optionally including paths around terrain obstructions. This feature is useful in assessing range with respect to topography when searching low for lift, and when flying in mountainous areas.


12.12

Reach calculations may be configured to two levels of detail:

Straight line : If turning reach is disabled, then the reach shows the furthest distance the glider can fly in final glide in all directions without turning. This reach appears as a closed ring around the glider.

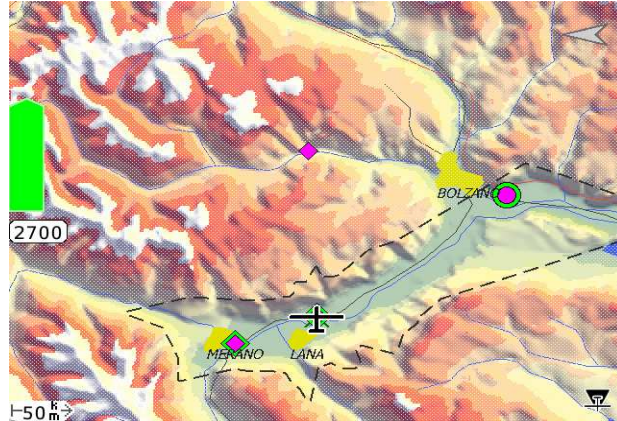

Turning : If turning reach is enabled, then the reach shows the greatest area the glider can reach in all directions, even allowing turns around obstructions.³ The reach area appears as a closed ring around the glider but may also include holes indicating mountain peaks that the glider cannot reach without further climb.

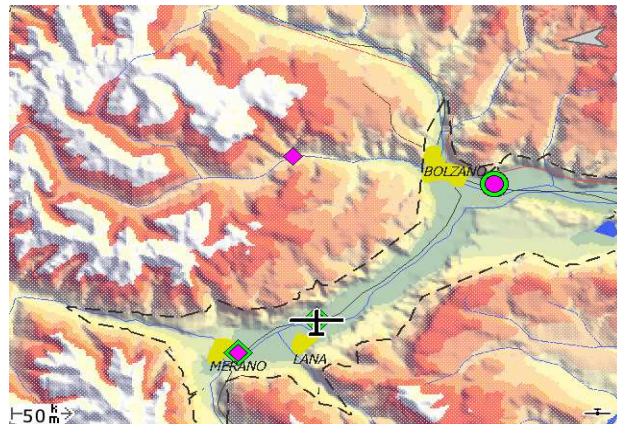

12.12

The display can be configured to additionally blur the unreachable area outside the glide range. The final glide path is checked for whether the glider clears terrain along the path by the terrain clearance height. If clearance is not attained, a red cross appears on the map at the point where the violation occurs. If a target is defined the calculation is done along the straight path to the target. If no target is defined the calculation is done along the current heading.

³ The maximum number of turns is set to three, and no turns may be greater than 90 degrees.

If reach is enabled, then the reachability of landable waypoints is used by the abort task mode, alternate landable option lists and display of landable waypoints on the map.

Note that task calculations are otherwise unaffected by reach calculations — for example, altitudes required as shown in the final glide bar or task data as displayed in infoboxes do not take reach into account.

Furthermore, the reach calculations are used for footprint, landable waypoint arrival heights, abort mode and the alternates dialogue. The glider performance and MacCready setting used in these calculations are configurable:

12.12

 
Task : The MC value is that used in the task.

Safety MC : A configurable, typically low MC value is set by the user to set performance near, but slightly degraded, to best glide performance. The amount of safety in the reach calculation is then the gap between best glide performance and the glide performance following the safety MC speed to fly.

4.12 Status tabs ‘Flight’ and ‘Time’

The status dialogue is a multi-tabular dialogue giving overview information on the flight, system, task, rules and times. It is accessed via the gesture “S”, or with the button menu.

Left - Down - Right -



Flight

Location	48.0332° N 007.8433° E
Altitude	1042 m
Max. height gain	800 m
Near	Freiburg
Bearing	214°
Distance	1397 m

Select the tabular page ‘Flight’. The flight status dialogue shows the status of the aircraft’s locality and can be useful when giving position reports. It shows the location of the aircraft, the maximum height gain, and nearest waypoint it’s bearing and distance.

You may find this function useful when you need to report your location to others.

Times

Local time	15:46
UTC time	14:46
UTC date	2013-02-06
Flight time	00:27
Takeoff time	15:18
Landing time	
Daylight time	07:50 - 17:35

Select the tabular page ‘Times’. It shows the local time, flight time, takeoff and landing time and the local sunrise, sunset times.

Note that the values in the Status dialogue are static once the particular dialogue page is displayed. That is, position, times, etc. do not update while the page is displayed. To see the updated values, it is necessary to select a different tabular, then return to the previous dialogue to see the new values.

4.13 Route

XCSOAR can plan paths around terrain and airspace obstacles in three dimensions from the aircraft to the destination. Such a path is known as a route. The height of the destination is the arrival height for final waypoints, or may be higher for intermediate waypoints, as dictated by the task system as required to complete the task. Route planning functions in normal ordered task mode, abort mode and goto mode.



Routes take into account the glider polar performance and are calculated to be optimal in the sense of minimum time. By default, route calculation is disabled, and can be enabled for terrain only or terrain and airspace avoidance .

12.12



12.9



Terrain is avoided vertically by the terrain safety height , with no additional lateral clearance imposed. Valid routes may result in the aircraft arriving at the destination higher than the minimum height — such as can occur when the destination is just beyond a steep mountain.

Airspace is avoided horizontally by a buffer of approximately 250 m, with no additional vertical clearance imposed. Valid routes may fly below or above airspace.

If MacCready is positive, then climbs are optionally allowed in the computed routes. The top of the climb may be limited to 500 m above the higher of the start and destination ceiling, or increased to the ceiling defined by the thermal ceiling . Climbs above the higher of the start and destination altitude are penalised by a slower climb rate than the actual MacCready value.

12.12



Some approximations and limitations of the route planning system are as follows:

- Where climbs are necessary (and permitted) to reach the destination, the climbs are assumed to occur at the start of the route.

- Climb-cruise segments are assumed to occur at constant altitude, equivalent to many small climbs distributed along the path.
- Individual turns between path segments greater than 90 degrees are not permitted.
- Failures of the solver result in the route reverting to direct flight from the aircraft location to the destination.

5 Cross Country Tasks

XCSoar provides a full task management system, in which tasks can be edited prior to flight and, when undertaking casual cross-country flying, modified during flight. Waypoints are advanced automatically or may be cycled through manually. This chapter also describes the use of IGC loggers with XCSoar.

There are three task modes available:

 
Ordered task : This is the natural cross-country task type, in which the task consists of a start point, zero or more waypoints, and a finish point. The task points are to be flown in order.

Goto task : Flight to a single destination.

Abort task : Provides options to fly to the nearest landing points.

Note that in goto and abort modes, the ordered task is retained and may be resumed later, preserving any statistics about achievement in the task.

5.1 Goto tasks



Goto tasks may be established by selecting a waypoint from the map, the waypoint list, or any other mechanism e.g. the alternates dialogue, and select “Goto”. In goto task mode, selecting **Nav 2** **Task Resume** resumes the ordered task (if any).

Automatic goto

If no ordered task is defined, then on takeoff, a goto task is automatically established with the takeoff point as the destination, or the nearest airfield if it was close to the takeoff point.

Whether or not a task is defined, the takeoff point is always generated and appears in the waypoint list for later reference or use.

5.2 Editing tasks

You can edit tasks in several ways. Some methods are more useful for editing prior to flight, and others allow tasks to be modified whilst in flight for casual cross-country touring. Tasks can be saved to files and loaded later, and can be transferred between any XCSoar platform (Pocket PC, Altair, PC).



It is also possible to save a ‘default’ task and have this task loaded

automatically upon start-up of XCSoar. One application of this is to set up a default task with one waypoint being the home — this means that XCSoar is then programmed for final glide back to home, which is useful for casual cross-country touring.

The main ways of setting tasks are the following:

- Using the task editor dialogue
- Selecting waypoints from the map and adding them to the task from the waypoint details dialogue
- Loading the task from a file



Loading a task from file may be useful in competition or casual cross-country flying in groups, as one person can distribute the task file to others, thereby saving the group the job of editing the task themselves. If no task is present at startup, a task is created automatically, containing one waypoint to home.

XCSoar saves the current task when shutting down and loads it at startup, thereby allowing the task to be entered early in the day, then the device running XC Soar can be turned off until flight time.

Task waypoints are preserved even if the waypoint file is changed. This means, if you save a task, then change the waypoint file, then load the task again, new waypoints are generated for any waypoints that are missing in the new waypoint file.

5.3 Waypoint Information

The waypoint info. dialogue describes a waypoint in detail and has navigation functions such as GoTo, insert, append to the task, or set the waypoint as the new home.

This may be accessed several ways:

- From the task manager, menu **Nav 1** ▸ **Task** and highlight a waypoint, then tap the highlighted waypoint again to display the Task point dialogue, then press the **Details** InfoBox.
- From the *What's here?* function to show the item list under the cross-hair, or your index finger on the map.
- From the menu **Nav 1** ▸ **Alternates** to show the details of the landables nearest to the aircraft.
- From the waypoint selector, menu **Nav 1** ▸ **Waypoint List** and select a waypoint to show the details of that waypoint.
- If the waypoint is visible on the screen, touch its name or the waypoint symbol

The waypoint details dialogue contains two major pages (accessed via the  and  buttons). Depending on the availability of further details to the waypoint they will be shown on extra pages.

Waypoint details

This page contains text describing the waypoint's location, radio frequency and runway information (if this information is in the waypoint file) elevation, local daylight time, bearing and distance to the waypoint, and the altitude required to reach the waypoint as described below. In addition, there is a button  to directly initiate navigating to this waypoint. The button cancels the current task.

Waypoint: Titisee	
GoTo	Landefeld
Runway 06; 200 m	
Location 47°54'01" N 008°09'43" E	
Elevation 857 m	
	Daylight time 04:43 - 20:04
	Bearing and Distance 232° 16.4 km
	Alt. diff. MC 0 +497 m
	Alt. diff. MC safety +467 m
Close	Alt. diff. MC current +410 m

As mentioned above, the Waypoint info dialogue also shows three forms of altitude difference (additional altitude required to reach the waypoint at the safety height) for the corresponding waypoint:

Alt diff MC 0 : Altitude difference at MC setting of 0

 
Alt diff MC safety : Altitude difference at the abort/safety MacCready setting (see [6.7](#))

Alt diff MC current : Altitude difference at the current MacCready setting

From the main Waypoint Info screen, you can access the second page by using the "<" and ">" buttons in the bottom left corner of the page.

Task actions menu

This page contains a column of buttons allowing various actions to be performed:

 : replaces the active waypoint in the task with the selected waypoint.

Insert in task : inserts the selected waypoint before the active waypoint in the task.

Append to task : adds the selected waypoint to the end of the task.

Remove from task : removes the selected waypoint from the task. Note that this option is only visible if the selected waypoint is included in the active task.


Set as new home : sets the waypoint as the home airfield.

Pan to waypoint : switches to pan mode and pans to that waypoint.

It is a good idea to set your home waypoint from the waypoint details dialogue. This causes XCSoar to start up at the home location regardless of whether a GPS fix is received. If no home is set, then XCSoar starts in the center of the terrain map.


Airfield information

This page may contain relevant text from the enroute supplement about the airfield, including runways, radio frequencies, traffic patterns, contacts.

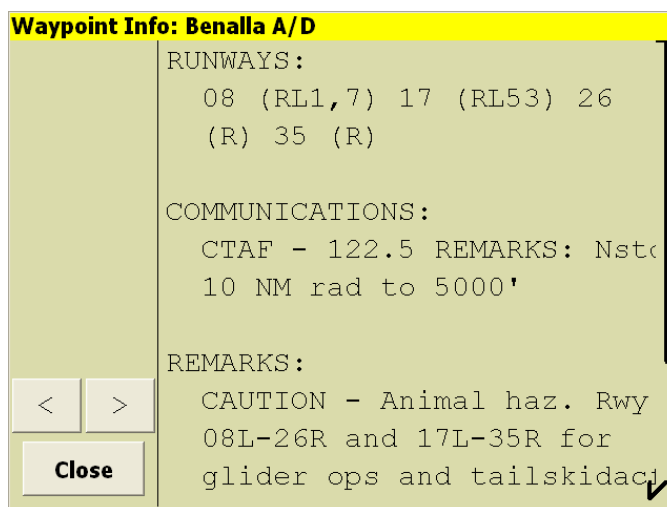

Waypoint details image

This page shows a satellite image of the waypoint.

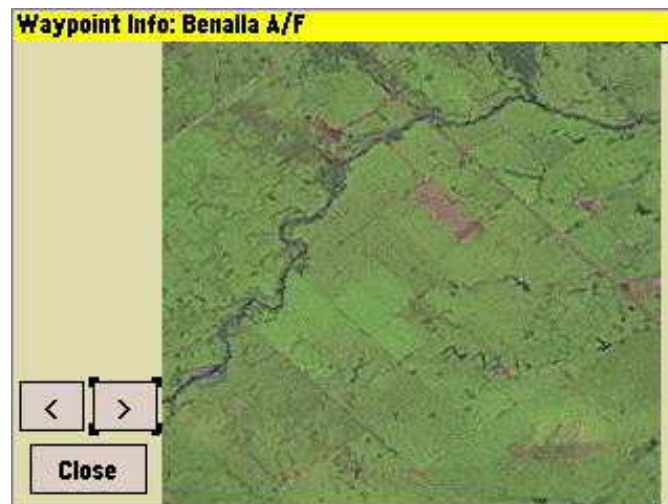

How to set up the detailed waypoint information read section [13.5](#)

5.4 Waypoint selector dialogue

The waypoint selector is a dialogue that allows waypoints to be easily selected from a potentially large database.

This may be accessed several ways:

- From the menu **Nav 1** > **Waypoint List**
- From the task editor, menu **Nav 1** > **Task** and selecting a waypoint and open the details.
- Or just by gesture.



The waypoint selector comprises a set of optional filters on the left side of the page, and a list of matching waypoints on the right. There are several filters available, which may be used together, individually or not at all.

Name : Filtering based on the matching the first letter in the waypoint name.

Distance : Filters out waypoints further than a specified distance to the aircraft.

Direction : Filters out waypoints that are not in a specified direction from the aircraft. An additional special direction “HDG(0°)” filters waypoints within 30 degrees to either side of the heading of the glider. This allows the pilot to point the glider at a group of waypoints and quickly find them.

Type : Filters out waypoints that are not of the specified type (Landable point, Airport or Turnpoint) or that appear in the specified File 1 or File 2 (primary or secondary waypoint file respectively).

When filtering by name and type, the list of matching waypoints is sorted by name. When (in addition) filtering by distance or direction, the list of matching waypoints is sorted by distance.

Select Waypoint

Name

*

Distance

75 km

Direction

*

Type

Airport

Select

Cancel

Kirchzarten

Elevation: 415 m - 122.475 MHz - Flugplatz

8.18 km

176°

Freiburg

Elevation: 242 m - 118.250 MHz - Flugplatz

8.56 km

269°

Bremgarten

Elevation: 213 m - 122.000 MHz - Flugplatz

28.0 km

241°

Altdorf Wallbur

Elevation: 194 m - 127.150 MHz - Flugplatz

28.4 km

344°

Muellheim

Elevation: 292 m - 129.975 MHz - Flugplatz

32.0 km

226°

Reiselfingen

Elevation: 746 m - 123.000 MHz - Flugplatz

36.9 km

121°

Lahr

Elevation: 156 m - 125.175 MHz - Flugplatz

39.4 km

347°

Colmar Meyenheim

42.4 km

The list can be scrolled if there is more than one screen full of matching waypoints. To scroll through the list, simply drag with the finger, or move to the bottom (or top) of the list with the cursor.

Selecting an item will result in different behaviour depending on what function opened the waypoint selector. In typical use it brings up the waypoint details dialogue for the selected waypoint.

5.5 Task manager

 
The task manager has undergone significant redesign compared with earlier versions of XC Soar.

The task manager is used to edit, view, load, save to file, and declare cross country tasks. It is accessed via the menu

Nav 1 > Task

The task manager's primary page is an calculator. It shows various calculations related to the active task, as described in detail below. In addition, there are buttons for Calculator , Turn Points , Manage , and Rules , as well as a button to Close the task manager.

Task calculator dialog



The task calculator dialogue allows the pilot to see the effect of various changes to the task on final performance.

This may be accessed several ways:

- From the menu

Nav > Task

- From the analysis dialogue, menu Info > Analysis and select the button Task Calc

Task Manager - Calculator	
Calculator	Estimated task time: 0 min
Turn Points	Task distance:
Manage	Set MacCready: 0.5 m/s
Rules	AAT range:
Close	Speed remaining:
	Achieved MacCready: 0.0 m/s
	Achieved speed:
	Cruise efficiency: 100 %

Estimated task time : This field displays the estimated total time on task to complete the task at the provided MacCready setting.

Task distance : This field displays the task distance remaining.

Set MacCready : Allows the user to adjust the MacCready value and see the effect it has on the estimated task time.

AAT range : Allows the user to adjust the targets within the remaining AAT areas, to see the effect it has on estimated task time and task distance.

Speed remaining : This field displays the estimated speed for the remainder of the task at the provided MacCready setting.

Achieved MacCready : This field displays the achieved MacCready value.

Achieved speed : This field displays the achieved speed

Cruise efficiency : 100 indicates perfect MacCready performance, greater than 100 indicates better than MacCready performance is achieved through flying in streets. Less than 100 is appropriate if you fly considerably off-track. This value estimates your cruise efficiency according to the current flight history with the set MC value. Calculation begins after task is started.

See Section 6.11 for more details on task speed and achieved MacCready calculations.

On closing the dialogue the entered MacCready value is used as the MacCready setting. If the Cancel button is pressed, the MacCready setting is unaffected.

The **Target** button, for AAT tasks, adjusts the range (increases or decreases) so that the estimated task time exceeds the assigned task time by less than five minutes. The range is adjusted target-wise. In typical use, all targets are set to “auto” that means the pilot does not have to manually adjust the range to find the course for arrival at the assigned task time, thereby reducing pilot workload.

Turn Points

The **Turn Points** button displays an ordered list of the points in the current active task. If there are no waypoints in the active task, there will be only an option to “Add Turnpoint.” By highlighting (tapping) the “Add Turnpoint” function, then tapping in the highlighted region, the waypoint selector is displayed, as described above. Highlighting a waypoint from the list and then tapping on the highlighted region adds the waypoint to the task.

Manage

Tapping on the **Manage** button displays the task manager’s management screen. There are four options, each of which is accessed by tapping on the relevant button:

- **New Task** Clears the current task and resets the task rules to the default values.
- **Declare** If an external logger is connected, this will allow uploading the active task to the logger and declaring it.
- **Browse** Displays a list of all the saved tasks, allowing the pilot to load a previously saved task. Note that this option will overwrite the current active task.
- **Save** Saves the current active task. Upon tapping the **Save** button the pilot will be prompted to enter a file name for the task to be saved.

Rules

The values in the **Rules** menu depend on the task type selected. Clicking any existing value will bring up another menu allowing the pilot to select a different value for this rule. Task types are discussed in more detail below.

Also, tapping on the **Rules** button again after it is highlighted allows toggling between a “thumbnail” view of the task map and a larger view of the task.

5.6 Task types

XC Soar currently defines three different task types: Racing, AAT, and FAI badges/records.

A brief description of the task types is included below, but this manual does not intend to rephrase FAI rules or contest task types. The reader is encouraged to become thoroughly familiar with each task type by referring to contest rules or FAI rules, which are available at <http://www.fai.org>.

Racing

(also known as an "assigned task"). The racing task involves flight around each specified turnpoint in the specified order. Selecting the racing task type allows the pilot to enter the following parameters (note: if the option "FAI start/finish rules" is set to "On" then none of the options are available:

- Start open time: This is the time when the start zone opens.
- Start close time: This is the time when the start zone closes.
- Start max. speed: This is the maximum speed allowed in the start observation zone. This should be set to 0 if there is no limit.
- Start max. height: This is the maximum height above the start height reference (AGL or MSL) at which a task can be started. This should be set to 0 for no limit.
- Start height reference: This specifies whether the maximum start height is referenced to ground level of the start point ("AGL") or Mean Sea Level ("MSL")
- Finish Minimum Height: This is the minimum height based on the finish reference (AGL or MSL) at which a task can be finished. This should be set to 0 for no limit.
- Finish height reference: This specifies whether the minimum finish height is referenced to ground level of the finish point ("AGL") or Mean Sea Level ("MSL")
- FAI start/finish rules: If enabled, this task type has no max. start height or max. start speed. Finish height reference is set to AGL and finish height is 1000m below the start height

AAT

(also known as "Turn Area Task," or TAT). This is a task through assigned areas (restricted to cylinder or sector observation zones). A minimum task time applies. Rules options for this task type include:

- AAT minimum time: This is the required minimum time for the task. Refer to contest rules or consult an expert for penalties associated with finishing prior to the minimum time. The time in this option is given in minutes.
- Start open time: Same meaning as in the racing task type, above
- Start close time: Same meaning as in the racing task type, above
- Start maximum speed: Same meaning as in the racing task type, above
- Start maximum height: Same meaning as in the racing task type, above
- Start height reference: Same meaning as in the racing task type, above
- Finish minimum height: Same meaning as in the racing task type, above
- Finish height reference: Same meaning as in the racing task type, above
- FAI start/finish rules: Same meaning as in the racing task type, above

FAI badges/records

Rules options for this task type include:

- Start open time: Same meaning as in the racing task type, above
- Start close time: Same meaning as in the racing task type, above
- FAI start/finish rules: Same meaning as in the racing task type, above

Once the appropriate task type has been selected and start and finish rules have been defined as described above, it is necessary to define the properties of each waypoint in the task. Waypoints can be start points, turnpoints, or finish points.

This is defined by tapping the **Turn Points** button from the Task Manager. This brings up the list of waypoints in the task (if any). Highlighting any waypoint on the list and either tapping it again or pressing the **Edit Point** button brings up the waypoint definition pressing the **Change type** button will bring up a menu of the various task point types available. Definitions of each point type are shown below the list.

5.7 Task rules

A variety of task rules may be used when specifying tasks, including the common FAI triangles and Assigned Area Tasks (AAT). Many aspects of the rules can also be customised.

Starting and finishing lines are centered on their associated waypoint and aligned perpendicular to the next and previous waypoints respectively.

Sector turn-points are 90 degree segments aligned to the bisection of the previous and next waypoints, as commonly used in FAI tasks. There is also support for British BGA, and German DAeC sectors.

The conditions to meet for a valid start depending on the type of start:

Start Cylinder : When the glider leaves the cylinder area.

Start Line : When the glider crosses the start line.

The conditions to meet for a valid intermediate waypoints depending on their type:

FAI Sector : When the glider has entered the observation zone (OZ), defined by a segment and radial distance from the waypoint. The segment is defined by a 90 degree arc centered about the bisector of inbound and outbound legs, with a distance of 20 km.

Keyhole Sector (DAeC 0.5/10 sector) : When the glider has entered the observation zone, defined by a segment and radial distance from the waypoint. The segment is defined by a 90 degree arc centered about the bisector of inbound and outbound legs, with a distance of 10 km. The observation zone also includes a cylinder of 500 m.

Turnpoint Cylinder : When the glider has entered the observation zone defined by a radial distance from the waypoint.

BGA Fixed Course Sector : When the glider has entered the observation zone defined by a segment and radial distance from the waypoint. The segment is defined by a 90 degree arc centered about the bisector of inbound and outbound legs, with a distance of 20 km. The observation zone also includes a cylinder of 500 m (British rules).

BGA Enhanced Option Fixed Course Sector : When the glider has entered the observation zone defined by a segment and radial distance from the waypoint. The segment is defined by a 180 degree arc centered about the bisector of inbound and outbound legs, with a distance of 10 km. The observation zone also includes a cylinder of 500 m (British rules).

Area Zylinder (AAT) : and

Area Sector (AAT) : When the glider has entered the observation zone defined by the radial distance from the waypoint, and segment for sector areas.

Task completion depends on the finish type:

Finish Cylinder : When the glider enters the cylinder area.

Finish Line : When the glider crosses the finish line.

Automatic advancement is triggered whenever a condition is met. To start an AAT, mixed task, or Racing task the start has to be armed before.



Competition rules may be defined in a profile file for distribution to a group of pilots or task-setters, so all competitors are playing by the same rules!

Additional task rules for valid starts and finishes may also be specified. Starts may have a defined maximum altitude above ground, and a maximum speed. Finishes may have a minimum altitude above ground. These parameters are defined in the page “Default Task Rules” in the configuration settings.



12.16

For non-AAT tasks, an option is available to set the minimum finish altitude according to the FAI rule, whereby the minimum finish altitude is above 1000 meters below the start altitude.

5.8 Advancing and restarting tasks

At all times one waypoint in the task is designated as the active waypoint. The active waypoint is used for calculation and display of navigation information, that is, the pilot is directed to fly towards the active waypoint (also referred to as the “next waypoint” in the description of InfoBoxes as in Chapter 11).

During flight a continuous display of the bearing of the next turn point is shown.

The altitude required to complete the task is calculated from the glider’s position to the active waypoint through to the final waypoint.

Changing the active waypoint is performed automatically, or may be performed manually. The start point of racing tasks, and AAT task points, are special cases that require the task point to be ‘armed’ before the system will automatically advance to the next task point once that point has been achieved. All other task points will automatically advance to the next point as soon as the point has been achieved.

For non-racing tasks therefore, no user interaction is required to advance through the task — the system will automatically advance

as each task point is achieved. The user may still manually advance or retreat the active task point by selecting the menu items **Nav** > **Previous turnpoint** and **Nav** > **Next turnpoint** respectively.

The menu items **Nav** > **Previous turnpoint** and **Nav** > **Next turnpoint** have dynamic labels that indicate the action that will be performed upon selecting the item.

For task points requiring arming, **Nav** > **Next turnpoint** becomes **Arm turn** if the turn is not armed; if it is armed, then it becomes **Next Turnpoint** allowing manual advance. **Nav** > **Previous turnpoint** becomes **Disarm turn** if the turn is armed; if it is not armed, then it becomes **Previous Turnpoint** allowing manual retreat. Similarly, for racing tasks, these menu items update for arming start points.

Status messages are given for task points requiring arming, when inside the observation sector, as reminders to arm the turn when the pilot is ready to advance to the next waypoint. For starting, a warning is given that the glider is in the start cylinder or behind the start line, as a reminder to “arm” if necessary.

For PC and Pocket PC with touchscreen versions only, the user may manually cycle through the waypoints by highlighting the waypoint InfoBox and by pressing the up or down cursor key.

See Section 5.7 for details on observation rules.

If a user has cycled through the waypoint manually, this does not mean that the glider has successfully passed the waypoint! However, this facility is useful to force a task restart or to skip a waypoint when flying a casual cross-country task.



Tasks can be restarted simply by manually cycling back through the waypoints to the start.

In all modes, if the glider re-enters the start zone or crosses the start of the previous start, the task will be automatically restarted.

When selecting **Previous turnpoint**, the trigger that detects auto-advance for that waypoint is cleared; meaning that the task manager expects the aircraft wants to fly to that observation zone (OZ) again before continuing the task. The pilot may still select **Next turnpoint** to advance to the next task waypoint.

A system beep and message is given on task/waypoint advance. The messages are given when the system advances the task waypoint automatically or, in manually arm mode, when the system is armed and the aircraft is in sector:

Task start appears when the aircraft has crossed the start line or exited the start sector. This can be repeated any time.

Next turnpoint appears when the aircraft has entered the observation sector for turnpoints. Turns with variable target advance as soon as **Arm Turn** is pressed. For the manually arm mode, if the aircraft has already entered the observation sector and left, pressing arm will cause the task manager to expect, that the turn is intended to approach another time.

Task finish appears when the aircraft has crossed the finish line or entered the finish cylinder. This occurs in both advance modes.

5.9 Alternate starts

Alternate start points are skipped for XCsoar 6.0, but will potentially be brought back in a next release.

5.10 Abort/resume the task and Alternates

If atmospheric conditions change for the worse, you may make the judgement that it will be impossible to complete the task. In this situation, XCSoar can be instructed to 'abort' the task, and it will then help you reach a safe landing site.

Task Abort

The task is aborted by any of those actions:


 
- Pressing **Nav 2** > **Task Abort**
- Choosing an alternate from the list under **Nav 1** > **Alternates**
- Or selecting a waypoint from the map and start a 'Goto task'.

Once aborted, whatever cross-country task was being flown is discarded. The task waypoint list is then filled with nearby landing points. The landing points are ordered simply by their reachability.

The configuration option 'reach polar' determines whether waypoint arrival heights in abort mode uses the MacCready value prior to aborting the task, or if the safety MacCready value is used. Default is to use the safety MacCready value. When switching to abort mode, the MacCready setting is set to the safety value if it is lower than the current setting.

Always the nearest 10 landable points are shown, even if none of them is reachable.

The active waypoint, and in fact the list of nearby landable points in the task, is changed dynamically when in abort mode, so that at any time the pilot is presented with several landing options and any of these may be selected as the active waypoint.

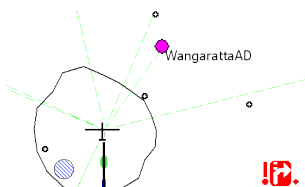

If conditions improve, the task can be resumed (by selecting the same menu button that aborted the task). The active waypoint, prior to aborting the task, is then restored along with all the other task details.

Alternates

12.9

	Schiltach X
	Distance: 6.53 km - Arrival Alt: +336 m
	Halbmeil X
	Distance: 9.74 km - Arrival Alt: +284 m
	Hausach
	Distance: 15.3 km - Arrival Alt: +172 m
	Winzeln Schram
	Distance: 6.80 km - Arrival Alt: -6 m - 129.650 MHz
	Boesingen UI
	Distance: 13.2 km - Arrival Alt: -223 m - 129.425 MHz
	Trollenberg
	Distance: 15.0 km - Arrival Alt: -238 m

Alternates are maintained throughout the flight. In contrast to the abort mode options is the idea to have continuously an eye on possible alternates. Six landing options are maintained. They are filtered by the configured ‘alternates mode’ criteria (Simple, Task, or Home). One of those criterias should fit to your personal preference.

Besides the list including the distance, arrival height and frequency, there is an InfoBox available for the first two items on the list. A good candidate for an extra page with InfoBoxes besides the default.

Although the items on the alternate list obey different rules they interact in the same way with the current task. Choosing a target from the alternates list aborts the task; once the conditions get better the resuming of the task is doable by the already mentioned button.

5.11 Task status

The status dialogue gives a summary of important task information. It can be useful to give a good overview of the task status while freeing up InfoBoxes for other purposes. The status dialogue can be referred to in order to confirm that a valid start was detected, as well as the progress against the task. This is accessed via the menu:

Info 2 > Status

the tabular ‘Task’ and ‘Rules’ are of interest.

The task tabular shows the AAT times, distances achieved and remaining and the task speeds. And the rules tabular shows the validity of start/finish according to the task rules.

Task		Rules	
Estimated task time	04:16	Valid start	Yes
Remaining time	04:13	Start time	15:42
Task distance	197 km	Start alt.	1661 m
Remaining distance	200 km	Start point	Kandel Hotel
Speed estimated	46.1 km/h	Start speed	152 km/h
Speed average	59.3 km/h	Finish min. alt.	759 m
		Valid finish	No

5.12 Assigned Area Tasks

AAT targets

A *target* is a point within an AAT area that the pilot intends to fly to. These targets can be moved within the AAT areas so the pilot can adjust the effective distance of the task. Targets may be set on the ground, during task planning, and modified during flight.

When flying an AAT task, the navigation system directs the glider to the target, and statistics like distance to waypoint are also relative to the target rather than the waypoint of the AAT area itself.

Automatic task waypoint advancement does not trigger when entering an AAT area solely. The pilot has to arm the turn manually to advance to the next turn. When arming the AAT turn while flying through the OZ also the task optimiser is triggered to capture the realised AAT target and bring the target optimisation for the rest of the task up to date. See Section 5.8 for details.

Manually moving targets

In order to make the specification of targets more straightforward, their location is defined by a range parameter that determines how far from the minimum to maximum possible distance the target is. This is expressed as a percentage. For example, with range set to 100%, the target is located to give the maximum overall task distance. With range set to -100%, the target is located to give the minimum overall task distance.

Zero range yields a nominal task distance: for sectors the target is half way along the bisector radial; for cylinders the target is in the center of the cylinder.

The task calculator dialogue (see Section 5.5), shows the average percentage over all turns in the AAT Range field. The targets can be individually modified from the target dialogue of the task calculator.

AAT targets and the Task Calculator

The typical use of targets in flying AAT is as follows:

- Set the expected MacCready, bugs/ballast and wind settings for the flight using the flight settings and wind settings dialogues.
- Define the task as normal from the task editor.
- Based on the pilot's judgement of how good the weather is, and whether some areas are likely to be more or less difficult than others, targets may be set individually for each turn-point in the target view. The ETE field in the target view

compared to the assigned minimum time is shown as Delta T to check if the planned task is efficient and long enough.

- During flight, if situations change, such as changed MacCready setting or wind, the task calculator can be brought up to show the estimated task time, again allowing comparison to the assigned minimum time.
- If the pilot decides to extend or shorten the flight, all the remaining targets can be modified from the task calculator.

The task calculator therefore allows the pilot to make (and help to answer) 'what if?' questions, for example:

- What will happen if the conditions improve? The MacCready setting can be increased and the pilot can see if there is sufficient adjustment to targets in order to be able to extend the planned task.
- What will happen if the conditions deteriorate? The MacCready setting can be decreased and the pilot can see how much the task can be shortened and still finish the task later than the assigned minimum time.
- What will happen if I leave the AAT area now? By pressing **Arm turn** the take over of the current position into the optimisation can be forced. The repositioning of subsequent turns can be reviewed in the task calculation dialogue.

Target projection


XCSoar continually analyses the path of the glider through AAT sectors to find the points in previous AAT sectors through which the achieved scoreable distance will be greatest. Internally, the program moves the targets for previous AAT sectors, which are then the optimal targets.






In certain conditions, targets for the current AAT sector may be moved automatically:

- When inside an AAT sector, the target in that sector is moved to to a line projecting from the previous sector's target through the aircraft, at the same distance from the previous sector's target to the target prior to entering the sector. The effect of this is to allow pilots to choose to enter an AAT sector in a different direction or offset from the direct line from the previous target to the current target.
- While the aircraft is in the AAT sector and the distance from the previous target to the aircraft is greater than the distance from the previous target to the current target, the target is moved further along the projected line from the previous target to the aircraft, just beyond the aircraft. Hence, the black

track line will not be visible but the blue optimal track arrow will point along this projected direction.

A worked example is provided in the following figures to illustrate how targets move during a flight and to show how XCSoar determines the maximum scored path.

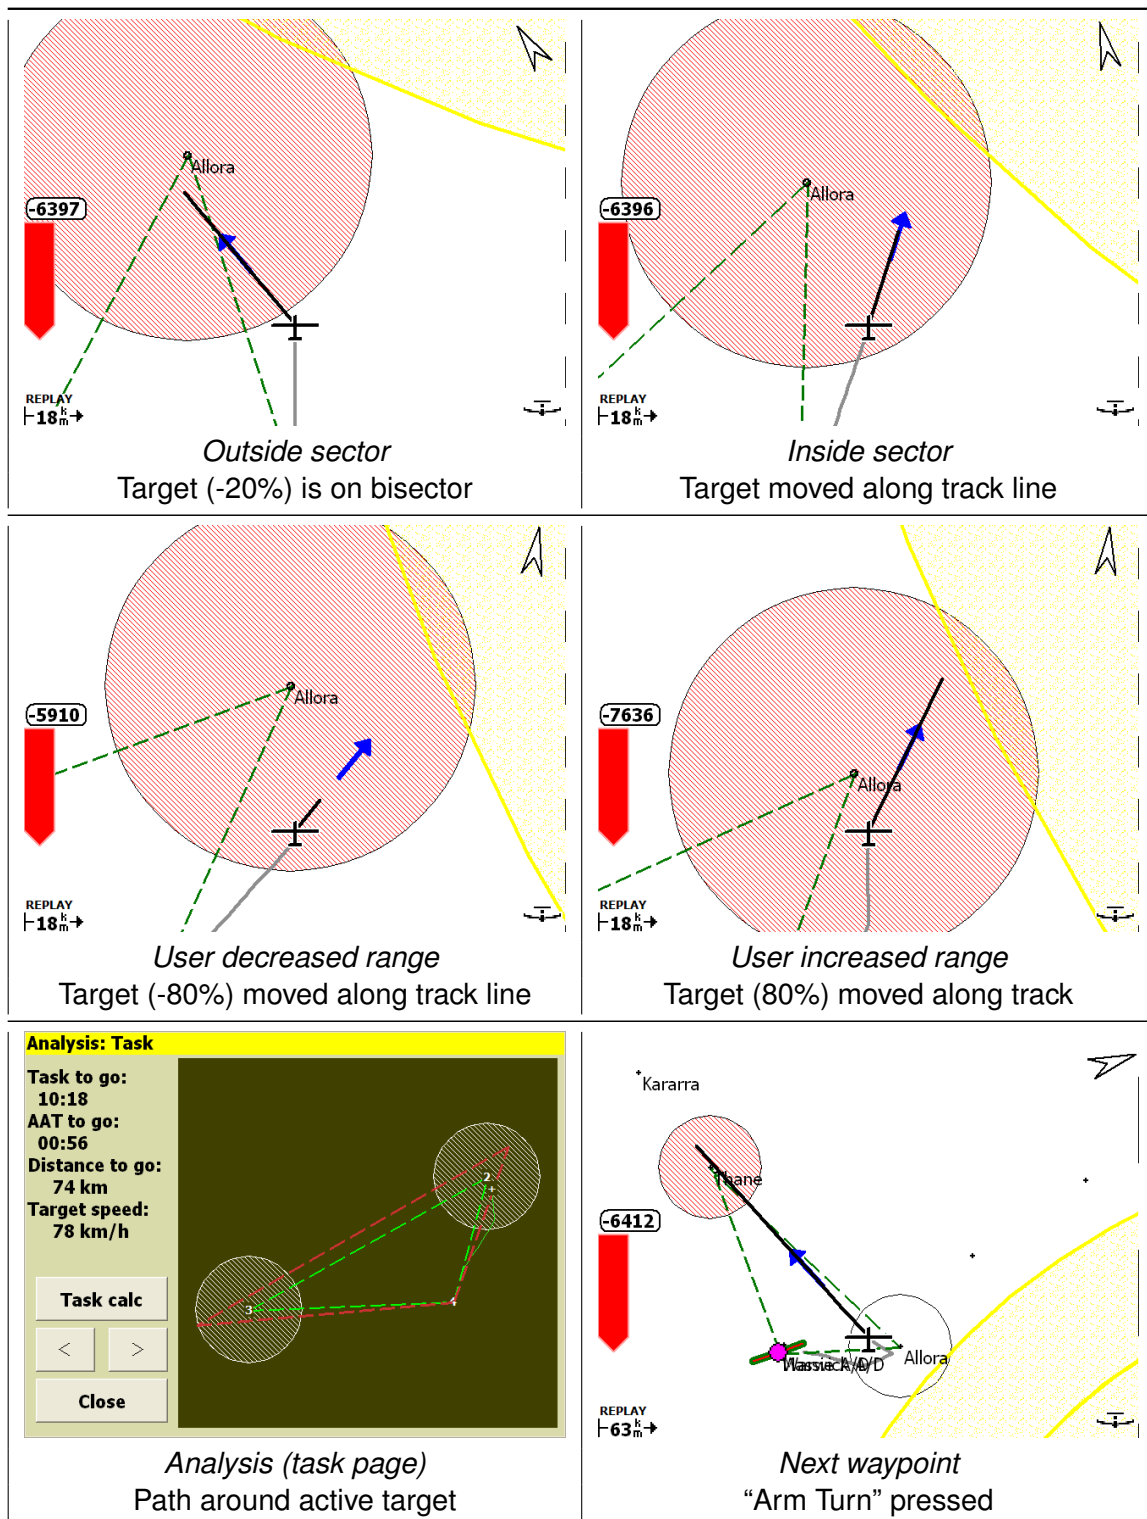

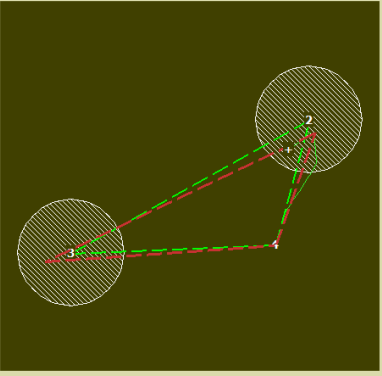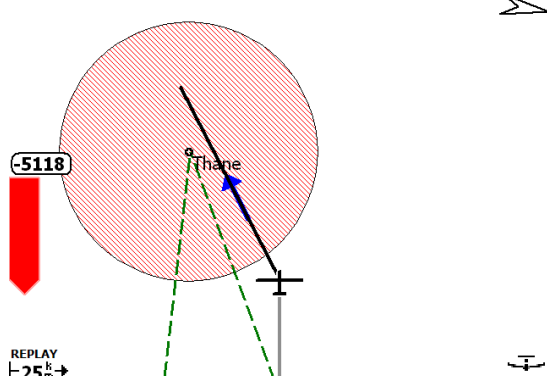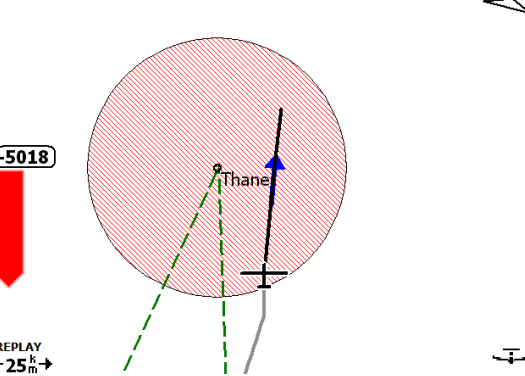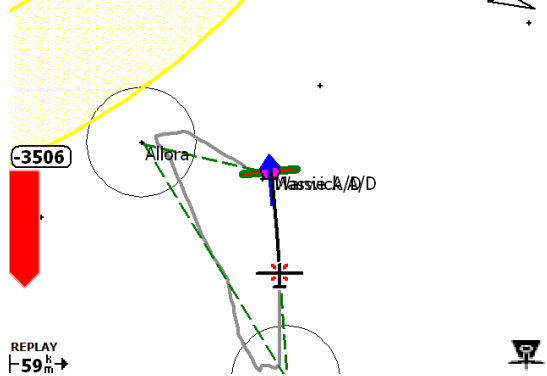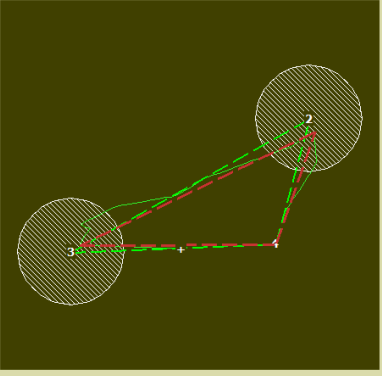
Analysis: Task Task to go: 06:20 AAT to go: 00:55 Distance to go: 56 km Target speed: 60 km/h Task calc < > Close 	
<i>Analysis (task page)</i> Best scored target found	<i>Approaching next area</i> Target (60%) is on bisector
	
<i>Inside sector</i> Target (60%) moved along track line	<i>Next waypoint</i> "Arm Turn" pressed
Analysis: Task Task to go: 01:33 AAT to go: 00:42 Distance to go: 10 km Target speed: 15 km/h Task calc < > Close 	
<i>Analysis (task page)</i> Best scored targets found	

5.13 OnLine Contest

12.16 

The analysis dialogue contains a page 'OnLine Contest' which can be used to show the optimal path and estimated score. The configuration settings (task rules page) allows the selection of which set of rules to be used for the OLC optimisation.

The optimisation is done continuously in the background and can be retrieved at any time. The analysis page shows a graphical overview of the optimisation result besides distance and score. A InfoBox is available which gives the instant OLC distance and score as well.

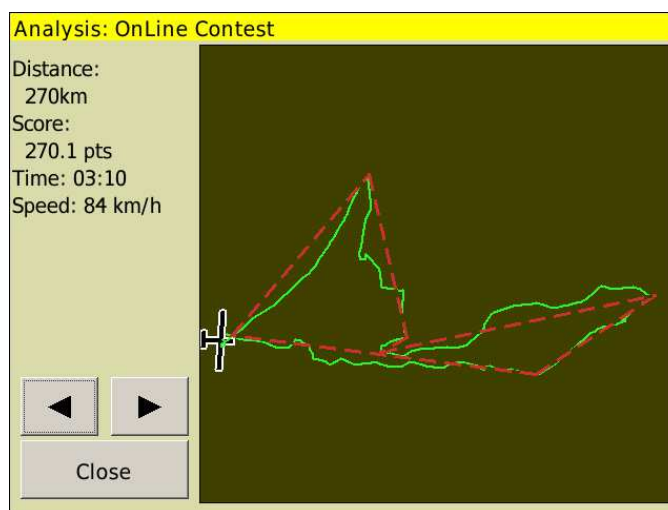

When flying OLC, either AAT or non-AAT tasks may still be used to manage the flight navigation. During flight, the computer will optimise the current flight with respect to the selected OLC rules.

In the OLC analysis page, the aircraft track is shown as a thin green line, the optimal path is shown as a thick red line.

The score and computed optimal distance is approximate.

When the aircraft has landed, the displayed result gets not updated anymore.

5.14 Logger

A flight logger conforming to the IGC file specification can be used to record flights.

Several flight loggers are accessible via XCSoar:

- A software-based logger. All versions of XCSoar have this functionality. The logger conforms to the IGC standard but is not certified.

12.22

 
- For example the PRO version of Altair has an internal IGC certified logger device. XCSoar communicates with the logger as to any other external device.
- XCSoar can also send declarations to some external logger devices. For this to work, the device must be specified in the 'Devices' section of the configuration settings.
- For some of the numerous logger devices XCSoar can download IGC files. This is convenient especially for logger devices, which are not that easy removable from the glider.

Setup

For a complete matrix of the supported logger features see section 2.1. The configuration is described in detail in section 12.24. Details to the log files can be found in section 13.10.

Logger activation

The logger can be turned on and off automatically or manually. For para-glider XCSoar provides the option to only start the logger automatically. Thus a very slow and close to the terrain flight won't automatically stop logging the flight. If you choose the auto start only logger you have to stop the logger manually. To turn the logger on (or off) manually, select from the menu:



When the internal software logger is active, a small 'green status led' in the lower right corner of the map area flashes once per second.

By default, XCSoar is set up to automatically start and stop the internal software flight logger when it detects the aircraft is flying and when it has landed, respectively. Only when the logger is manually started does it ask if the flight is to be declared; when automatically starting it automatically declares the current task. In simulation mode the logger does not get activated automatically.

If a task has been declared, then subsequent attempts at modifying the task result in a warning message asking to confirm whether the action is to be taken and invalidate the declaration. This is intended to make it harder to accidentally modify the task resulting in a failed declared task.

The XCSoar software logger, when started, checks for 500kB of free space on the file storage. If there is insufficient space, it will automatically delete IGC files, oldest first, in order to free up 500kB. It does not ask the user for confirmation before performing this operation.



The internal software logger buffers data so that when it starts (automatically or manually) up to 60 seconds of data prior to starting is recorded. This means that the software logger now adequately captures the full take-off.

Logger replay



Flight logs in the IGC format generated by XCSoar or other loggers can be replayed. The logger replay dialogue can be accessed via the menu:

Config 2 ▷ Replay

During replay, the word 'REPLAY' appears at the lower left corner of the screen. During replay, the program behaves as if real GPS updates are being received by a GPS. The logger replay dialogue does not need to be open during replay.

To start a log replay, first select the file to load, and then select the **Start** button. The replay can be performed in accelerated time by changing the time scale from 1x to a higher number, and paused by setting the time scale to zero. High time scales can result in degraded performance of the wind estimation and other statistics/analysis routines.

Stop the log using the **Stop** button. Once a log is started, further presses of the **Start** button has the effect of restarting the replay.



It is recommended to reset the device before flight, after a log file has been replayed, in order to ensure that XCSoar's internal statistics are properly reset.

When operating XCSoar in FLY mode, the replay is disabled (stopped) if the real GPS receiver detects that the aircraft is moving.

The logger replay works best with high sampling rate log files; a 6 second interval or less works fine.

Error analysis logger

For the pure reason of tracking down error prone behaviour of XCSoar there is a 'Raw Logger'. In case you are able to reproduce an error you can activate the raw log file creation by:

Config 3 ▷ Raw Logger

Developers will appreciate very much any detailed error description including a log file like this. It really facilitates the root cause analysis and saves time to fix an error.

5.15 Flight analysis

Up - Right - Down 


The analysis dialogue is very useful in planning and conducting cross-country flights. It is accessed via the menu:

Info 1 > Analysis

Several pages are of interest:


Barograph : Shows a graph of the history of the altitude of the glider. Statistics are used to estimate the thermal working band (average base and ceiling of climbs) and to estimate how the ceiling is changing over time. The base and ceiling lines are drawn on the barograph.

The 'Settings' button opens the flight settings dialogue (e.g. to adjust the QNH)

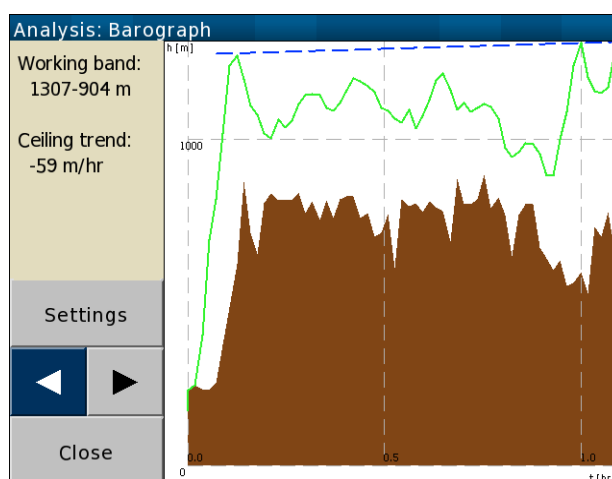


Climb history : Shows a bar chart of the average climb rate achieved during each climb. Statistics are used to estimate the overall average climb rate, and to estimate how this average is changing over time. The current MacCready setting is drawn on the bar chart as a thick red dashed line, and the climb rate trend is drawn on the chart as a blue line.

The "Task Calc" button opens the task calculator, (e.g. to adjust the MC value)

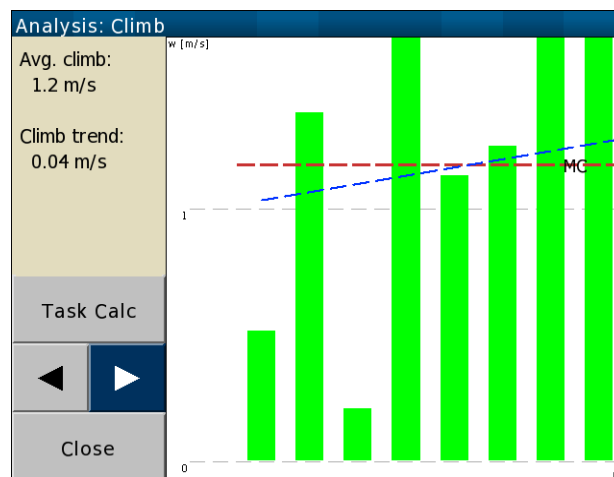

Task : This page shows an overview of the entire task. The main task line is drawn in thick dashed green, AAT areas are shaded. For AAT tasks, the path from the aircraft around the remaining targets within AAT areas is shown in red. The aircraft track is shown as a thin green line.

The 'Task Calc' button opens the task calculator, (e.g. to adjust the AAT task range or MC value)

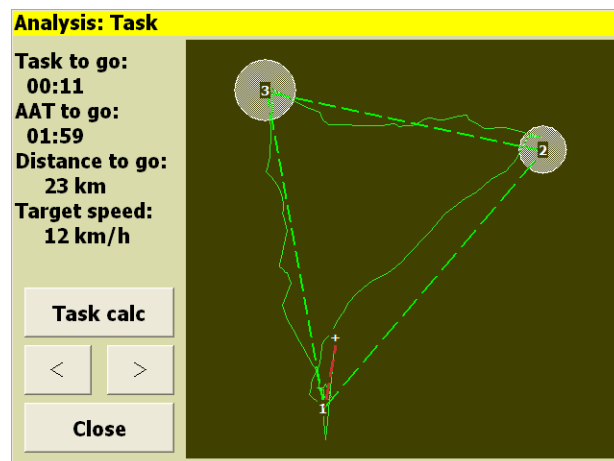

5.16 Sunlight and time

A sun ephemeris computes the time of sunrise and sunset, which is displayed in the Aircraft Status dialogue (see Section 4.12). Note that local terrain and atmospheric conditions may result in poor visibility before the displayed sunset time.

For PDA systems, the clock is adjusted for daylight saving time according to the settings in the operating system. For Altair, the clock UTC offset must be adjusted manually for daylight saving time in the configuration settings dialogue.

If the expected arrival time at the final waypoint in the task is past sunset, a status message warning is issued.

6 Glide Computer

This chapter focuses on how XCSoar's glide computer works and is recommended reading so you understand the specific details of calculations being performed and how to use the software properly. It assumes a basic knowledge of cross-country soaring, but is suitable reading for competition pilots as well as pilots engaging in casual cross-country touring.

 
6.1 Flight modes

XCSoar performs different calculations and may display different InfoBoxes depending on the flight mode, for example Circling (thermalling), Cruise, or Final Glide (cruise to the Finish waypoint). XCSoar automatically detects the difference between thermal (circling) flight and cruising flight. After about 30 seconds of circling flight the software will switch from cruise to climb mode. After about 30 seconds of straight line flight the software will switch from climb to cruise mode.

The cruise modes are further divided into final glide and normal cruise. Final glide becomes active when the glider is above final glide altitude with respect to the last waypoint in the task, or when in abort mode.

Switching between the different flight modes is automatic. Circling is enabled when the glider turns (typically three quarters of a turn). It is possible to have circling mode switched based on an external input (e.g. from a pilot-operated switch).

A small symbol is drawn on the lower right corner of the map area to indicate which flight mode the computer is in.



Cruise (a) : The glider is not circling and there is either no task active, or the task waypoint is not the finish point.

 
Circling (b) : The glider is circling (though it may not be climbing).

Final glide (c) : The glider is not circling and the active waypoint is the final one in the task.

Abort (d) : This manually-triggered mode indicates the immediate landing options to the user.(see [Section 5.10](#))

The specific computations performed by XCSoar are of course dependent on this flight mode. The display changes in each mode, principally, the InfoBoxes may be set up differently for each mode; secondly there is a facility to automatically change zoom between circling and other flight modes (this is called 'circling zoom').


In addition to these display modes, an auxiliary set of InfoBoxes may be displayed in any flight mode. This is useful if the pilot has information he wants to be able to view no matter what mode the glide computer is in. This is accessed from the menu, which toggles between the normal mode-specific InfoBoxes and the auxiliary set of InfoBoxes.



Final glide mode replaces the Cruise mode as soon as the glider is above the final glide path. The required altitude depends most importantly on the adjusted MC value, but also the ground clearance is considered. On entering a thermal while in Final glide mode XCSoar will switch to the Circling display and back to the Final glide display once the thermal is left again and the final glide condition is still met (i.e. the glider is still above the final glide path, considering MC setting and terrain). The potential of having the Final glide mode is obvious when flying short tasks in which the aircraft may well be above final glide turning the penultimate waypoint.

6.2 MacCready setting

 The MacCready setting may be adjusted several ways:

- With  
- For touchscreen/mouse devices, select the MacCready InfoBox field, then use the up and down arrow keys.
- When connected to a supported intelligent variometer, adjusting the MacCready setting on the variometer will change the setting in XCSoar according to the devices synchronisation configuration (see section [12.22](#)).

In addition, an automatic MacCready mode is available as described in Section [6.13](#).

6.3 Glide polar

[12.23](#) 




The glide polar specifications of a wide selection of glider types, representing major classes of gliders, are built into XCSoar. If your glider type is not listed, these may be used as an approximation for if no better glide polar can be found. However, for most accurate results, it is advisable to use the correct glide polar for your particular aircraft type. Besides the aircraft type the correct over all mass of the glider is important for accurate results. The

preflight check of your tactical glide computer certainly includes a check of the correct settings for water ballast, with regard to the configured dry mass. Because XCSoar does not offer a setting for the pilots weight you are free to include the latter to the dry mass setting, or the water ballast setting.

On top of the polar and mass configuration the glide polar is adjustable in flight to take into account performance degradation due to bugs or rain droplets.

The build-up of bugs on the wing's leading edge, as well as rain droplets on the wing, affect the aerodynamic performance. It is the pilot's responsibility to judge and update the bugs value during flight. The bugs value is expressed as a percentage of degradation compared to the clean glider's performance. For example, at 0% bugs value, the glider performs as a clean glider, and at 50% bugs value, the glider's sink rate is doubled when compared to a clean glider. The calculation scales linearly in-between.


Info 1 ▷ Analysis

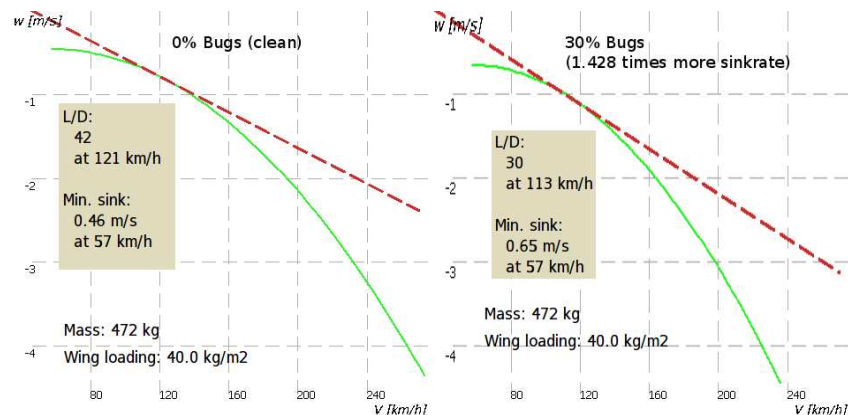

Knowing all this, a meaningful setting for a worst-case bug polluted wing could scale down the polar by 30%. Some experimentation may be required to determine appropriate settings for bugs, because the performance degradation experienced by different glider types may be different.

The ballast is set in litres of water. Depending on the specifically set dry mass of the glider, this may optionally include a weight margin to provide for different pilot weights. When flying with no ballast, a heavy pilot may set a ballast value of perhaps 15 l so that the polar is appropriately adjusted for the increased cockpit weight.

Info 1 ▷ Analysis

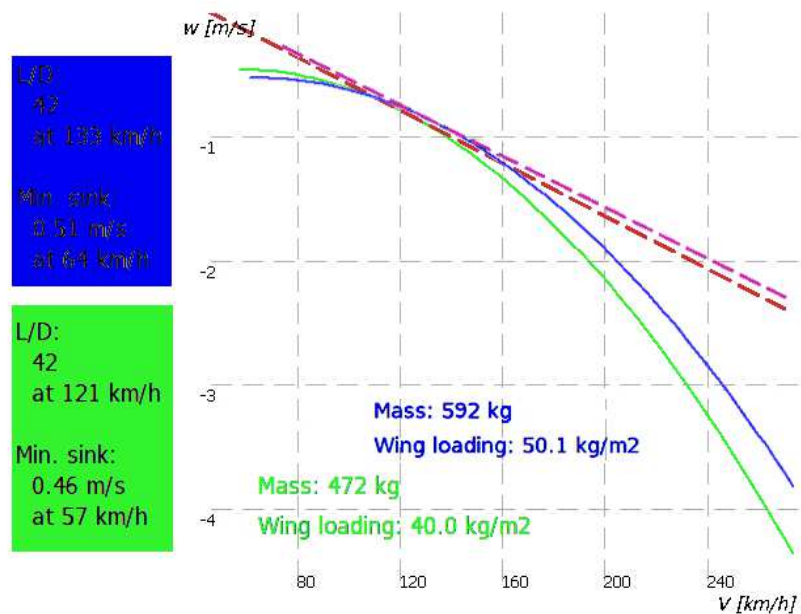

6.4 Flight setup dialogue

Config 1 ▸ Flight

Use the flight settings dialogue to modify the all up weight of the glider both before and during flight, as well as to set the QNH pressure.

Flight Setup	
Ballast	15 l
Wing loading	41.2 kg/m²
Bugs	0 %
QNH	1015
Max. temp.	17 °C
Dump	OK

The 'bugs' setting determines the amount the polar is degraded due to contamination during a long flight. A 'bugs' setting of 0% will cause the software to use the clean polar. A 'bugs' setting of 50% will degrade the polar and effectively doubling the sink rate for a given airspeed.

The ballast setting is used to modify the polar to account for any water ballast carried during the flight. Ballast is shown in litres, and should be set to correspond to the correct water ballast added before flight. The ballast setting modifies the polar to account for the indicated load of water ballast.

Use this dialogue both before and during the flight to record the mean sea level atmospheric pressure, also known as QNH pressure. The software uses the values entered to convert airspace

flight levels into altitudes. If connected to a supported intelligent variometer with an altimeter, the altitude is updated on this dialogue as the QNH pressure is adjusted. This makes it easy to set the QNH pressure if the airfield elevation is known.

The maximum forecast ground temperature is used by the convection forecast algorithm (see Section 7.10) in its determination of estimated convection height and cloud base.



It is possible to configure XCSoar to display the basic settings dialogue when it starts up.

On system startup, after the GPS has acquired lock, and if a barometric altitude source is connected (e.g. Vega, AltairPro, FLARM), the QNH is automatically adjusted. This adjustment sets the QNH such that the barometric altitude equals the terrain altitude.

The QNH is only updated if the aircraft is on the ground for more than 10 seconds, so that if XCSoar is restarted during flight, QNH will not be adjusted. The update only occurs also if the terrain database is valid at the current aircraft location.

6.5 Speed command display

When used in conjunction with an intelligent variometer that produces indicated airspeed measurements, a speed command chevron is drawn on the right side of the map display. If the glider is flying slower than the optimal speed, the chevrons are red and point downwards. If the glider is flying faster than the optimal speed, the chevrons are green and point upwards. If the speed is approximately optimal, no chevrons are drawn.

Depending on the configuration, speed command chevrons can be displayed on the right side of the map area, or on the variometer gauge.

6.6 Speed to fly

XCSoar continuously calculates two types of speed to fly:

MacCready speed : This is the best speed to fly during cruise in still air, adjusted for wind if in final glide mode.


Dolphin speed : This is the instantaneous, best speed to fly in rising or descending air, adjusted for wind if in final glide mode.

The user can specify a maximum manoeuvring speed in the configuration settings, which limits the speed-to-fly in MacCready calculations to realistic values.


Different pilots have personal preferences as to whether they prefer to fly in so-called 'block MacCready' style, in which they fly constant speed between thermals according to the MacCready

speed; or to fly in ‘dolphin’ style, in which they fly at varying speeds according to the continuously changing Dolphin speed value.


Block Speed to Fly

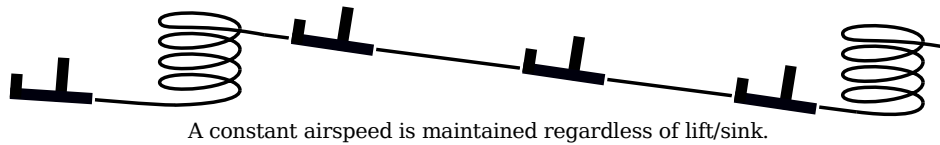

Dolphin Speed to Fly

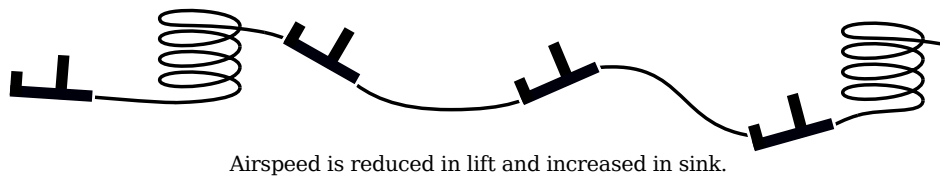

Airmass Vertical Motion

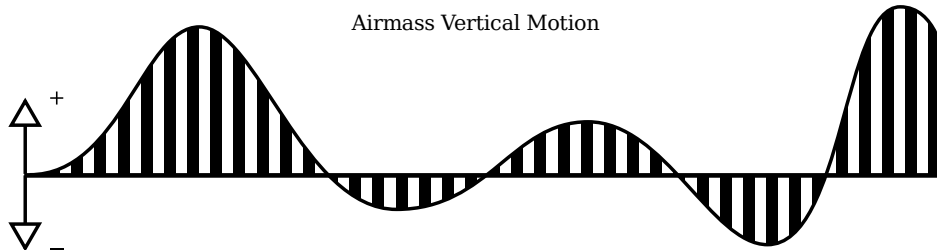

A configuration option ‘Block speed to fly’ (see Section 12.10) can be used to specify whether dolphin or block speed to fly is used. The infobox ‘V Opt’ shows the optimum speed according to whichever mode is selected. When connected to the Vega intelligent variometer, the speed command sounds are based on this optimum speed value.

6.7 Speed to fly with risk

The speed to fly system can be compensated for risk, in which the MacCready setting used for calculating the speed to fly (in both Block or Dolphin modes) is reduced as the glider gets low.

Many pilots typically wind down the MC as they get low — this feature performs this automatically. The theory governing how this is implemented in XCSoar is based loosely on the paper by John Cochrane, “MacCready Theory with Uncertain Lift and Limited Altitude” *Technical Soaring* 23 (3) (July 1999) 88-96.

http://download.xcsoar.org/papers/john.cochrane/safety_glides.pdf


A configuration parameter γ (‘STF risk factor’, in the configuration settings under page ‘Glide Computer’) controls how the risk

MC value is calculated. The γ factor determines the fraction of the current MacCready setting as a function of the height fraction. The height fraction used in this calculation is the ratio of the height above terrain (h) to the height of the maximum climb (this will usually be close to cloudbase) above the terrain (h_{top}). The γ setting thus represents the fraction of the total available climb (cloudbase minus terrain) at which you would wish to abandon the task and begin to prepare for a landout. Thus, low γ values indicate a higher tolerance for landout risk than higher values of γ .

For the default value, $\gamma = 0.0$, there is no compensation — the risk MC is the same as the MC setting. For $\gamma = 1.0$, the risk MC is scaled linearly with the height fraction h/h_{top} . For intermediate values of γ , the risk MC varies smoothly with the height fraction, such that the risk MC is small only when low.

Low values of γ are best when pilots do not want to slow down as they get low (but risk out-landing); high values of γ can be used for very cautious pilots but will result in lower average speeds.

A value of $\gamma = 0.3$ is recommended.

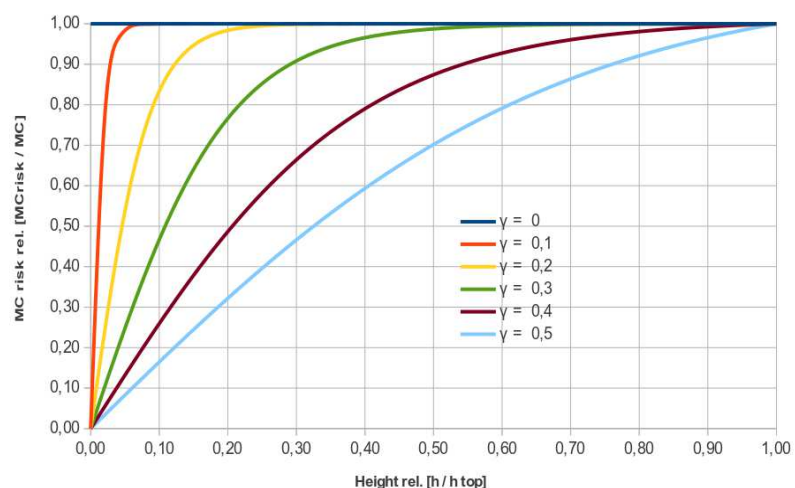

6.8 Safety heights


Three safety heights are defined to provide a degree of safety margin in glide computer calculations.

The safety heights are:

Arrival height : This is the elevation above ground at which the glider is required to arrive at least. Typically you want include height for a safe landing circuit, plus some safety margin for hazardous vertical/horizontal air movements and resulting errors of computed route and speed. This value is used in final glide calculations as well as the determination and display of reachable landable fields.

Terrain clearance : This is the elevation above ground, below which any computed glide path is considered to provide inadequate clearance to the terrain. The terrain clearance value affects the glide range display, and if the final glide at any point dips below the terrain clearance elevation above ground, a warning marker (large red cross) is drawn on the screen. If the terrain elevation model is invalid or out of range, then the glide range display and the terrain warning marker is disabled.

Break-off height : This is the elevation above ground, below which it is recommended for pilots to consider the cross-country task failed and to concentrate on finding a suitable field to land in. Currently this break-off height does not affect XCSoar in any way but it is referenced in the manual.

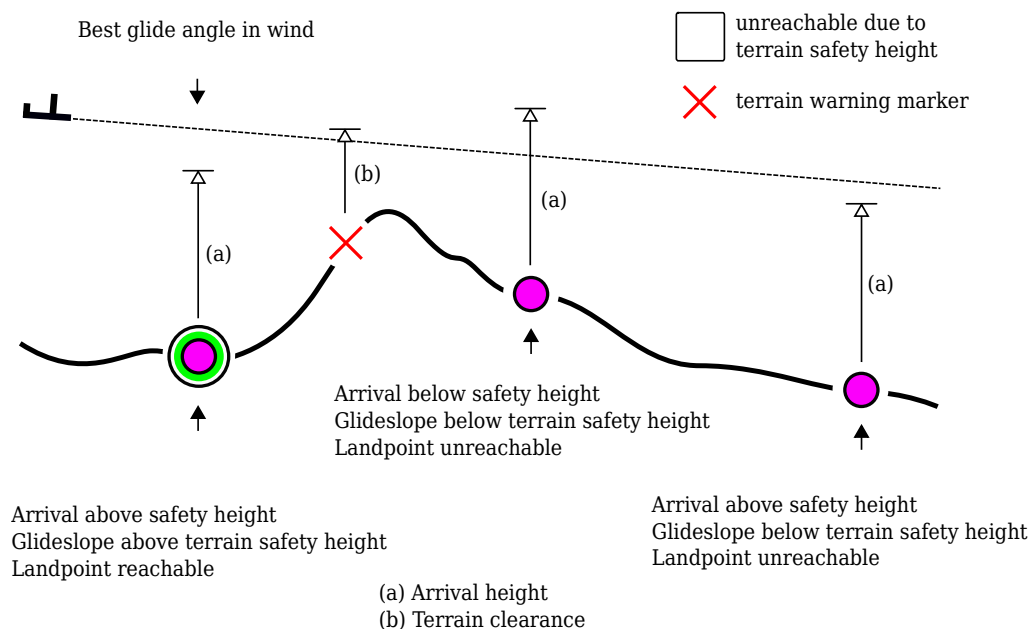

These may be set to zero but this is highly discouraged since all glide computers, instruments and data sources (such as terrain elevation models) are subject to some degree of error and the atmosphere through which the glider flies is also unpredictable.

XCSoar determines the elevation above sea level of any turn point or landing point either from the waypoint file, or if no height is specified in the waypoint file, from the terrain file.

The estimated arrival altitude displayed next to landable waypoints is by default calculated for best glide angle at zero MacCready ring setting ($MC=0$), adjusted for wind. However, a safety MacCready setting may be configured to modify the MacCready setting used in this calculation, as described below.

Landable fields are only marked as reachable if the estimated arrival elevation above ground is above the arrival altitude safety height, and the glide path does not intersect the terrain clearance safety elevation.

At all times, if the final glide through terrain marker (a red cross) is displayed on the screen, then the glider must climb in order to safely reach the destination.

When calculating the arrival heights of landable fields (for map display purposes and in abort mode), a safety MacCready value can be specified in the configuration settings. This safety value is set to zero by default. Larger values make the arrival height calculation more conservative.

6.9 Final glide calculator

The final glide calculator uses many sources of information when determining the altitude required to reach your goal or the next waypoint. These are:

- The glider's polar data;
- The wind speed and direction;
- The distance and bearing of the goal or waypoint;
- The MacCready setting;
- The altitude of the waypoint or goal;
- A user specified safety margin (arrival height and terrain clearance).
- The glider's total energy if XCSoar is connected to an instrument with an air speed indicator.

From the parameters shown above, two altitudes are derived.

Altitude required : This calculation is the total altitude required for the glider to reach the goal plus any user safety margin.

Altitude difference : This calculation is the altitude required to glide to the goal plus any safety arrival altitude plus the altitude of the goal, minus the altitude above mean sea level of the glider. The result represents either your height above glide slope, or your arrival height at goal. If no goal altitude is provided in the turn-point file, XCSoar will use the terrain file altitude at the goal.

The final glide calculation is extended to calculate the altitudes required and difference to complete the entire task. This capability is sometimes referred to as final glide around multiple turn points.

The altitude difference to complete the task is displayed continuously as an arrow and in numeric form on the left hand side of the map area of the screen.

The altitude required is adjusted for energy, compensating for the fact that the kinetic energy of the glider can be converted to height (potential energy). The kinetic energy that is convertible to height is calculated from the difference in the true airspeed to the true airspeed for best glide. This compensation is most accurate when airspeed data is available to XCSoar, otherwise the true airspeed is estimated from the wind speed and ground speed.

6.10 Display of altitude required

 
On the left side of the map display, a box displays the calculated altitude difference required for the glider to complete the task, or reach the final waypoint. If the glider is above the minimum altitude required, a green arrow bar is drawn above the box indicating the amount of excess height.

If the glider is below the minimum altitude required, a red arrow bar is drawn below the box indicating the amount of height deficit. If, however, there are landable waypoints within glide range, but the glider is below the minimum altitude required to complete the task, the bar is coloured amber.

Above



Below



The scale of the final glide bar is ± 500 meters.

A bar beyond this scale is indicated by a chopped off tip.



12.10



At this point also must be mentioned, that the indicated height below the glide path is not just a plain difference of glide path and current altitude. Depending on the setting 'predict wind drift' (On) the 'Below' indicator shows the required height to gain by thermalling. The required height might be quit a bit more with headwind, as well as a bit less with tailwind. Otherwise (predict wind drift set to Off) it is just the plain altitude difference.

 
Dual altitude required bars

The final glide bar has been extended to show the effect of MacCready setting on the altitude difference to complete the task. The display shows with a brighter split arrow the *altitude difference calculated at zero MacCready*, as well as the usual arrow that dis-


plays the altitude difference calculated at the current MacCready setting.

The number shown in the box next to the final glide bar still shows the altitude difference at the current MacCready setting.

Examples of the appearance in various configurations with the additional $MC=0$ bar display is shown below:



 Above final glide : (current $MC=0.7$) Here the display shows that at the current MacCready setting, the aircraft is above final glide (filled arrow). The split arrow shows the additional excess height.




Below/above final glide : (e.g. $MC=1.8$) Here the display shows that at the current MacCready setting, the aircraft is below final glide (filled amber arrow). The split green arrow shows that at $MC=0$, the aircraft is above final glide.



In this situation, if the glider is climbing, the pilot can assess whether to leave the thermal early and commence a final glide descent at a reduced MacCready setting; or continue to climb. It is useful to switch on the auto MacCready setting as this will automatically adjust the MacCready value to the optimal value — and then it is simple for the pilot to compare the achieved lift rate with the MacCready value. When the achieved lift rate drops below the MacCready value, the thermal should be left.

 Below final glide : (e.g. $MC=2.5$ and with less height) Here the display shows that at the current MacCready setting, the aircraft is below final glide (filled red arrow). The tip of the red arrow is chopped off to show that the altitude undercut the 500 meter limit the arrow can scale on. The split slightly brighter red arrow shows that by reducing the MacCready setting to zero, the aircraft still is far from final glide.



Below final glide : Here the display shows that at the current MacCready setting, the aircraft is below final glide (red arrow). The split brighter red arrow shows that even at $MC=0$ the aircraft is well below final glide.

6.11 Task speed estimation

Some of XCSoar's internal calculations make use of estimates of the time required to reach each waypoint in the task. This information is used in some InfoBox displays, Assigned Area Task calculations, and sunset warnings.

The glide computer assumes the glider's average cross-country speed is equal to that achievable under classic MacCready theory taking wind into account, with the current MacCready setting. This method is used for estimating arrival times and task finish time.

The following task speed measures are defined:

- Task speed achieved : This is the task speed to date, compensated for altitude differences from the task start altitude.
- Task speed average : This is the task speed to date compensated for altitude required to complete the task.
- Task speed remaining : This is the task speed estimated for the remainder of the task according to MacCready theory.
- Task speed instantaneous : This is the instantaneous estimated speed along the task. When climbing at the MacCready setting, this number will be similar to the estimated task speed. When climbing slowly or flying off-course, this number will be lower than the estimated task speed. In cruise at the optimum speed in zero lift, this number will be similar to the estimated task speed.

This measure, available as an InfoBox is useful as a continuous indicator of the cross-country performance. It is not used in any internal calculations.



For assigned area tasks at the same time a new task time estimation is calculated the target position is optimised. For each variable target set to “auto” can XCSoar tweak the position so that the AAT will be completed not more than five minutes after the given task time.

In addition, a measure called *achieved MacCready* is calculated. This is computed by finding the MacCready setting that under classical MacCready flight would produce the same task speed as has been achieved. This value is higher than the actual MacCready setting when the glider has climbed faster than the MacCready setting or when the glider has flown in cloud streets etc. The achieved MacCready is used in the task calculator dialogue.


Task speed estimates for achieved speed, are compensated for altitude variations, such that the effects of climbs are taken into account in calculating the average task speed. Considering two gliders A and B flying the same task. Glider A has cruised faster, trading off altitude for speed. Glider B is behind A but higher and will save time later since it has less climbing to do to complete the task.

While flying AAT tasks, the task speed measures may change when the glider is inside an AAT area or when the AAT range or targets are adjusted by the pilot. This is due to the task distance achieved and remaining when such events occur.

6.12 Optimal cruise track

In order to help reduce the cross-track error when flying between non-final waypoints, XCSoar calculates an adjustment to the cruise

track, called the 'optimal cruise track'. This track is adjusted so that it compensates for the wind drift incurred when circling, and as such it needs to estimate the proportion of time spent circling according to classical MacCready theory.

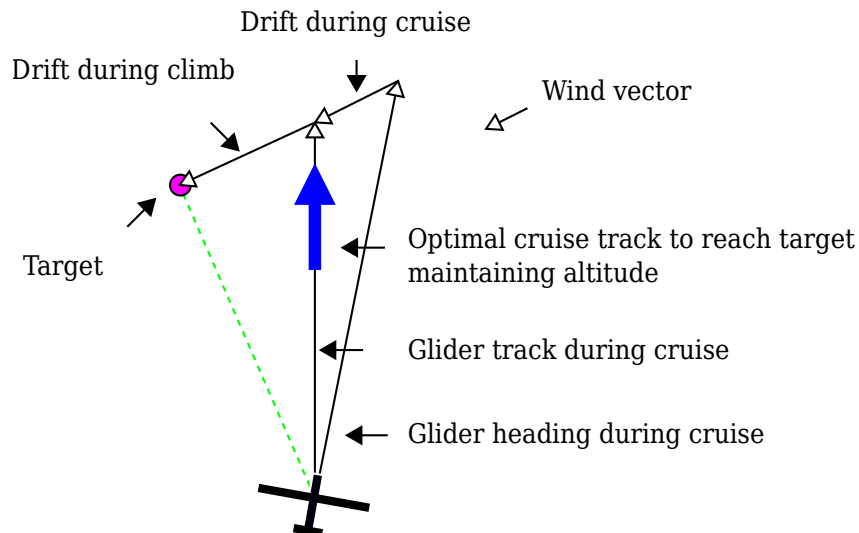

The optimal cruise track is displayed on the map area as a large blue arrow, and it recommends the glider steers so that the glider's track is lined up with the blue arrow during cruise. For example, if the display is oriented 'Track-Up', then steer so the blue arrow points directly up.

The glide computer accounts for wind drift during circling to provide an 'optimal cruise track' vector, which indicates the track the glider should follow during cruise such that it will arrive at the waypoint in minimum time. This vector is displayed on the map as a blue arrow. When the wind is negligible, or when the computer is in final glide mode, this arrow will point along the black line that indicates the track to the next waypoint.

The calculation and display of optimal cruise track is a unique feature of XCSoar. Commonly, when cruising between thermals, glide navigation systems direct the glider to steer so that the glider's track points directly at the target. Ideally, the glider's track is collinear with the line from the previous to next waypoint, such that the cross-track error is small and hence the glider travels the minimum distance between waypoints.

However, because the glider usually has to stop cruising in order to climb in lift, whilst circling the glider drifts downwind and therefore the cross track error can increase. After several cycles of cruise-climb, the overall track becomes curved.

For the case where the final waypoint is active and one is above final glide, circling is not necessary so this simple scheme is optimal.

6.13 Auto MacCready

 
XCSOAR can adjust the MacCready ring setting automatically to relieve the workload on the pilot. Two methods of updating the MacCready ring setting are available:

Final glide : During final glide, MacCready is adjusted in order to arrive at the finishing point in minimum time. For OLC Sprint tasks, the MacCready is adjusted in order to cover the greatest distance in the remaining time and reach the finish height.

Trending average climb : When not in final glide, MacCready is adjusted to the trending average climb rate based on all thermals.

Additionally, both methods may be used, so that before reaching final glide, the MacCready setting is adjusted to the average climb rate, and during final glide it adjusts the setting to give minimum time to arrival.

The method that is used is defined in the configuration settings dialogue as the field “Auto MC Mode”. The default setting is “Both”. To enable/disable Auto MacCready, use the menu.



When Auto MacCready is enabled, the MacCready infobox displays ‘MC auto’ instead of ‘MC manuell’; and the MacCready indicator in the variometer gauge displays ‘AutoMC’ instead of ‘MC’. To benefit at max from the automatic MC adjustment XCSOAR propagates the MC value to the connected intelligent variometer (if it supports).

The Auto MacCready methods are described in further detail below.


Final glide

When above final glide altitude, the MacCready ring setting may be increased, resulting in a higher speed to be commanded. Because the ring setting has increased, this also increases the minimum strength of the thermal that would be efficient to stop and circle in.

Similarly, when below final glide altitude, the MacCready ring setting may be decreased, resulting in a lower speed to be commanded. Because the ring setting has decreased, the pilot may be prepared to stop and circle in weaker thermals.

Auto MacCready performs this adjustment automatically and continuously. Typically it is meaningless to enable this mode before reaching final glide altitude, or nearly so, because early in the flight

the glider will be very much below the final glide altitude and the Auto MacCready function would then drive the MacCready ring setting to zero.

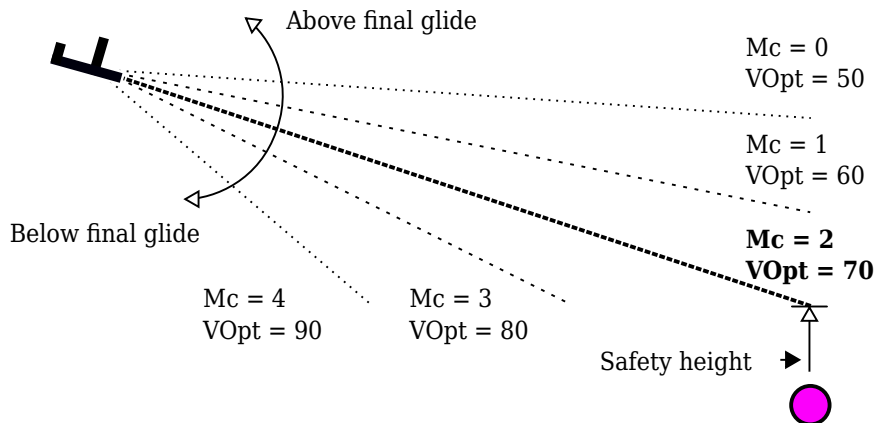

Average climb

This method sets the MacCready to the average climb rate achieved across all thermals in the current flight. As such, it takes into account the time spent centering the thermal. The value is updated after leaving a thermal.

Since MacCready theory is optimal if the MacCready setting is the average climb rate of the next expected climb, this method may give suboptimal performance (commanding speed too slow) if the conditions are improving; and similarly may be non-conservative if the conditions are deteriorating (commanding speed too high). Similarly, if the pilot continues to climb in weak thermals, this will reduce the average and may therefore encourage the pilot to continue to select weak thermals.


As a result of these limitations, the pilot should be aware of how the system operates and adjust his decision-making accordingly.

6.14 Analysis dialogue

Info 1 > Analysis

The analysis dialogue can be used to check the glide polar.


The polar page shows a graph of the glide polar at the current bugs and ballast setting. It also shows the calculated best LD and the speed at which it occurs, and the minimum sink and the speed at which it occurs. The current aircraft all up weight is displayed in the title.

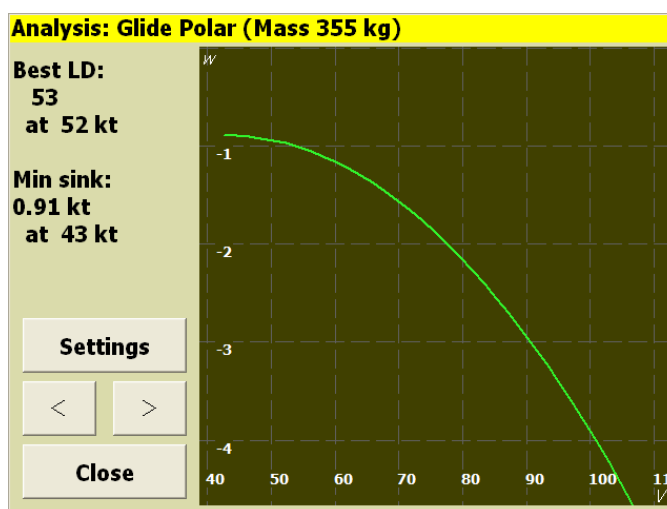

In this dialogue page, the 'Settings' button opens the flight settings dialogue (e.g. to adjust the bugs/ballast).

The glide polar page of the analysis dialogue shows the average total energy sink rate at each speed achieved in flight, when connected to a supported intelligent variometer (e.g. Vega). This facility allows pilots to perform test flights in stable atmospheric conditions, such as on calm days with no wind, and inspect the measured glide polar. By comparing the measured glide polar with the model glide polar, this enables investigation of whether the glider is being flown optimally with respect to flap settings and also to investigate the benefits of performance optimisation such as sealing control surfaces etc.

Data is collected only when in cruise mode and at G loading between 0.9 and 1.1; so pilots performing test flights should attempt to fly smoothly with wings level.

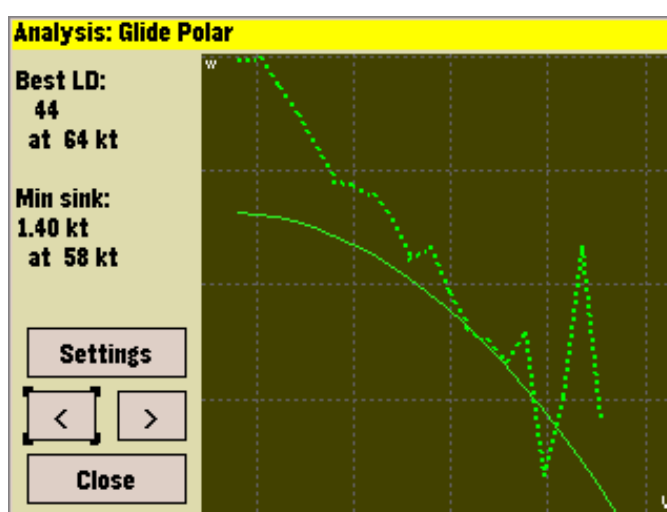

6.15 Flight notifications


Notifications, appearing as status messages, appear when the following conditions are detected:

- Estimated task time too early for AAT
- Estimated arrival at finish past sunset
- Significant wind change
- Transition to above/below final glide

7 Atmosphere and Instruments

XCSoar maintains an internal model of the atmosphere based on statistics gathered from the flight path and other instruments connected to the Pocket PC device. These statistics and measurements are approximate and the weather can on some days change rapidly. The pilot should at all times keep observing the weather. In particular, when out-landing in fields, the pilot should look for indicators on the ground to confirm wind strength and direction.

7.1 Variometer

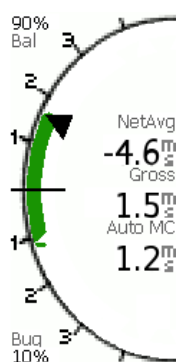

12.14 

A needle-dial style display shows the variometer measurements. The gross variometer reading drives the main arrow on the dial, and in the center of the dial the instantaneous measurement is shown as text. Additionally, speed command arrows (chevrons) appear above or below the gross variometer measurement. Chevrons pointing up indicate slowing down is recommended. Chevrons pointing down indicates that speeding up is recommended.

When the averager value is displayed, the value shown is the average gross climb rate over the previous 30 seconds when in circling mode, and the netto (airmass) vertical speed over the previous 30 seconds when in cruise mode.

The average value can also be displayed as an optional additional needle (caret). The vario gauge is customisable as to what is displayed along with the gross value etc.

When an intelligent variometer is connected to XCSoar, the needle displays data from the instrument; otherwise it produces variometer estimates based on GPS vertical speed, which is slow and uncompensated for aircraft total energy.

The MacCready value, bugs and ballast, optimum speed to fly and wind data are transferred between XCSoar and supported external intelligent variometers. In the ideal setup, both XCSoar and the variometer have a consistent perspective on the flight at all times; and that by adjusting the MacCready setting on one device should be kept in sync with the other, by the software and to not require additional input from the pilot.

Pilots abuse the device synchronisation (see [12.22](#)) for various reasons. You may have different MacCready settings on PDA and

intelligent vario to cross-check the results. You may do computations with different ballast settings and cross-check the results. You may choose on one of the devices manually a different wind setting and cross-check the results, etc.

A list of supported variometers is maintained in Section [2.1](#).

For Vega: A small icon displaying a circling glider is displayed when the variometer is in climb audio mode.

7.2 Audio Variometer

In addition to the variometer display XCSoar provides an acoustic variometer which transfers the variometer measurements are transferred into sounds. The audio variometer is for now only available on android devices. For proper performance connect your device to a barometric sensor or use the internal one of your android device if provided. The audio vario is enabled/disabled via the gauges configuration in the configuration.

7.3 Air data inputs

Where additional aircraft dynamics or air mass data are provided by an intelligent variometer, XCSoar can often make use of it or display it in a separate InfoBox. Key sensor measurements that XCSoar uses include:

Gross total energy variometer : (rate of change of the total energy of the aircraft) Used for display, and for calculation of netto variometer.

Netto variometer : (estimated vertical velocity of the air mass at the aircraft) Used to for display, and to colour the snail trail so that it may effectively show areas of lift and sink.

Aircraft acceleration : (load factor) Used for netto variometer calculations where an external netto variometer is not provided.

Barometric altitude : Used for display

Indicated airspeed : Used for display, in compensating final glide calculations for aircraft kinetic energy, and in netto variometer calculation where an external netto variometer is not provided.

Air density : Used for calculating true airspeed from indicated airspeed.


7.4 Wind display

A continuous display of wind strength and direction is provided on the map. The wind information is derived from the gliders wind drift during thermal flight (climb mode).

The wind direction and speed are displayed as a wind vector on the moving map display and optionally in numeric form in the data

display fields. The length of the vector indicates the wind magnitude, and this magnitude is also displayed near the wind vector.

The wind data is one of many data sources used to calculate final glide information. It is possible to manually adjust the wind used in all calculations.

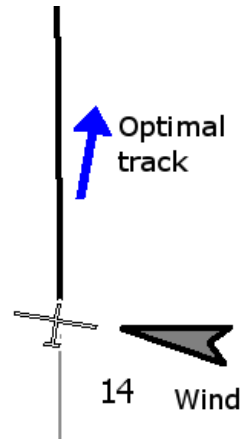

7.5 Wind estimation

XCSoar offers two ways of estimating wind during flight.

Circling : This method uses GPS position fixes to estimate the wind based on drift, typically while thermalling; and is available on all XCSoar installations.

ZigZag : This method uses GPS position fixes and true airspeed measurements to estimate the wind, typically during cruise. It is only available where XCSoar is connected to an intelligent variometer that outputs true airspeed.

The wind magnitude and direction can also be adjusted manually from the wind settings dialogue (see below).

Statistics are gathered so that winds are recorded at different altitudes and times. When the glider's altitude changes significantly, the statistics are consulted to determine the best estimate of the wind based on previous measurements.

For PC and Pocket PC with touchscreens, you can also do this by highlighting the wind InfoBox and using the cursor keys (up and down increase and decrease the magnitude, left and right rotate the wind direction).

12.11

The configuration settings dialogue allows control of which estimation method is used for wind updates, via the field 'Auto Wind':

- Manual
- Circling
- ZigZag

- Both (ZigZag and Circling)

When wind estimates change significantly, a status message notification of this is issued.

Circling wind algorithm

XCSoar estimates the wind magnitude and direction when circling. It does this using a sophisticated algorithm that incrementally improves the wind estimate from completed turns. Poor quality turns, where the bank angle changes significantly, are rejected or have minimal impact on the overall wind estimate. The best turns are those with constant bank angle.

Estimates are only obtained if the average GPS fix rate is better than one every two seconds. This results in improved fidelity of estimates in the presence of GPS dropouts.

Zig-Zag algorithm

For aircraft fitted with intelligent variometers connected to XCSoar, a so-called 'zig-zag' wind estimation algorithm is available. With this algorithm, the wind estimate can be updated continuously during long glides without circling.

This allows the wind estimate to be updated during cruise while the aircraft performs a zigzag manoeuvre. No specific manoeuvre is required, in many cases the estimate will be updated as the aircraft's heading changes naturally as the pilot hunts for lift. In general, however, the technique requires the aircraft heading to change over 40 degrees.

 
If the wind changes significantly while in straight flight, the zig-zag algorithm is used to update the wind estimate even if the aircraft's heading does not change much. This provides greater accuracy in long final glides.

Wind estimates are updated when a large difference between the estimated ground speed and the true ground speed are detected even without much zig-zag manoeuvring.

Compass algorithm

For aircraft fitted with intelligent variometers and digital compasses connected to XCSoar, a wind estimation algorithm making use of magnetic heading and airspeed is being developed. This provides another method of updating the wind estimate during cruise and does not require zig-zag manoeuvres.

7.6 Wind settings dialogue



The wind dialogue allows the initial estimate of the wind speed and direction to be entered, usually prior to flight.

Wind Settings	
Auto wind	Both
Prefer external wind	On
Trail drift	On
Speed	15 km/h
Direction	135°
OK Cancel	

At any time during flight, the pilot can make corrections to the wind estimate by entering the correction in the wind settings dialogue. Once the dialogue get closed , the internal estimate is ignored until a new internal estimate is obtained from the circling or zigzag algorithm.

The automatic wind algorithm may also be switched on or off (or between modes) in this dialogue. See [Section 7.5](#) for details on these algorithms.

The compensation of wind drift of the snail trail can also be switched on or off in this dialogue. See [Section 4.8](#) for details on how this affects the display of the snail trail.

7.7 Thermal profile



Statistics on climb rates in thermals are collected and displayed in a thermal band meter. This is shown above the final glide difference bar on the left side of the map display. It is not shown when the glider is above final glide.


The thermal band meter shows a graph, where the vertical axis is height above the break-off height ([Section 6.8](#)), and is scaled according to the maximum altitude achieved. The horizontal axis is the average climb rate achieved at a particular altitude band. The horizontal axis is scaled according to the MacCready setting, and an arrow indicating this setting, and the glider's current altitude is overlaid on the shaded area. This scaling and arrow makes it easy to see how the pilot's MacCready setting compares with achieved thermals and to plan the desired working height band.

When cruising between thermals, the vertical position of the arrow, indicating the glider's height relative to the thermal band, can be used as a reference to suggest how urgent it is to find the next thermal. As the arrow approaches the bottom of the band, then

the glider is nearing the break-off height and the pilot should consider taking even a weak thermal.

7.8 Thermal locator


An algorithm estimates the center of the lift when circling. The thermal marker symbol is a green circle with a spiral.

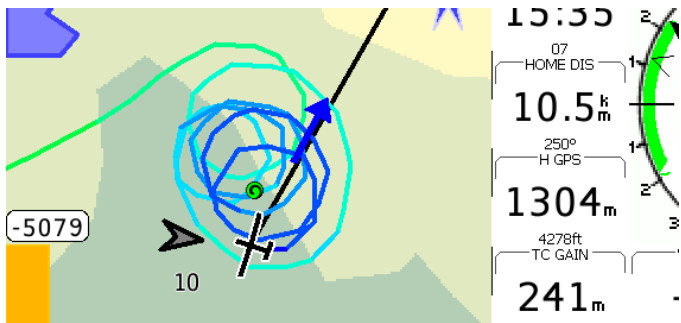

The thermal locator marks the location of the last 20 thermals on the map with the thermal symbol during cruise.

This location is calculated to compensate for the thermal drift at the glider's altitude. This means that internally XCSoar remembers the location of the thermal source on the ground. In other words, if you leave a thermal at the top and later return at low altitude, the position on the map shows the predicted location of the thermal at that low altitude (which is further upwind than the top).

If the wind changes and the thermal source is still active, its position on the map reflects the wind change; that is, the thermal at altitude will be projected downwind at the new wind estimate.

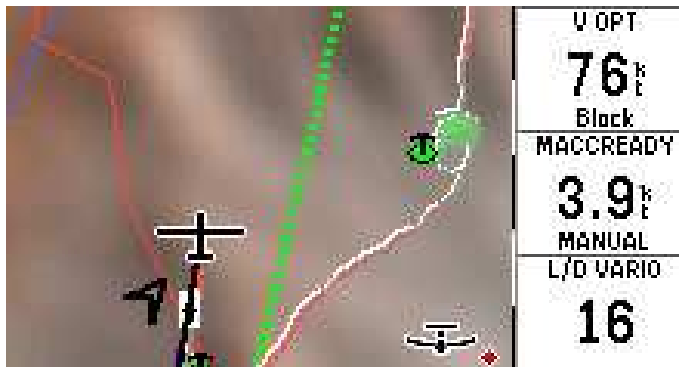


7.9 Thermal assistant

12.13 

The thermal assistant is a graphical aid to maximise the exploitation of the given thermal updraft. If it is configured “On” the small polar digram is mapped to the lower left corner of the screen. A single tap on the small digram enlarges it to a full-screen view.

The polar diagram shows the climb rate over the circular course of the glider. The screen-shots show a right circle, where the glider position is fixed to the left side, and the polar distribution of the climb rate is shown relatively to the current glider position.

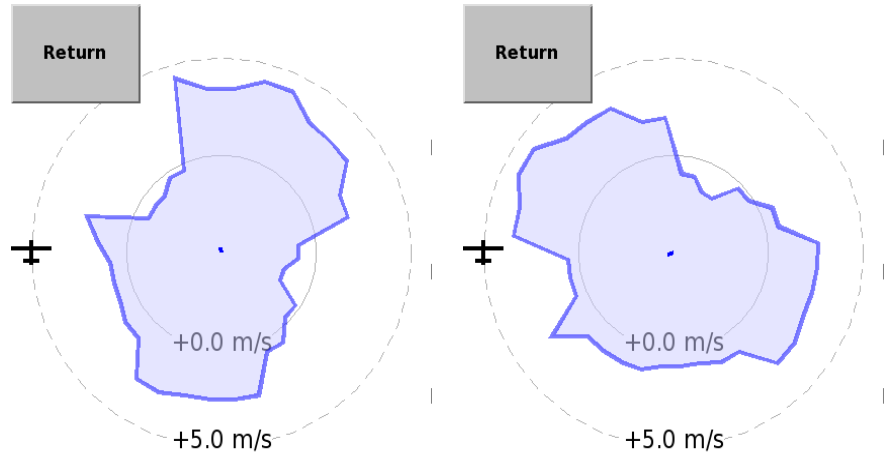

The two screen-shots are taken in a few seconds sequence to demonstrate the practical usage of the rotating climb diagram. A simple recipe to optimise the climb rate according to the assistant would be to follow these two steps repeatedly:

1. : At the moment the maximum peak on the polar diagram passes the top of the display; that is a quarter of the circle before you reach that part again: Open the circle a bit to displace the circle center in the direction of the strongest climb rate.
2. : At the moment the maximum peak on the polar diagram passes the gliders position; the vario should show the maximal climb rate: Narrow the circle as much as possible to center the thermal updraft at its maximum.

It must be said, that the interpretation of the thermal assistant always relies on the specific lag of the connected sensor and PDA itself. A successful updraft optimisation will thus depend on a bit training to take the lag into account.

7.10 Convection forecast

If the glider is equipped with an outside temperature and humidity probe, a simple convection forecast system estimates the convection ceiling and the cloud base. The humidity probe is optional and is mainly required for estimating cloud base.

Prior to takeoff or during flight the pilot can modify the maximum forecast temperature on the ground, by adjusting the value in the "Forecast Temperature" InfoBox.

The forecast convection ceiling is determined by the altitude at which the atmospheric temperature equals the maximum forecast temperature on the ground, cooled adiabatically as it rises according to the dry adiabatic lapse rate. Typically the glider will not climb as far as the convection ceiling and so the measured values are extrapolated to find the ceiling. If the atmosphere is stable, the convection ceiling is reported as zero altitude.

The maximum forecast temperature on the ground is entered using the flight settings dialogue described in Section 6.4.

The forecast cloud base is determined by the altitude at which the dew point intersects the maximum forecast temperature on the ground, cooled adiabatically as it rises according to the dry adiabatic lapse rate. If no clouds are forecast, the cloud base is reported as zero.

7.11 Analysis dialogue


Info 1 > Analysis

The analysis dialogue is used to see several aspects of the atmosphere.


Several pages of interest:

Wind at altitude : This shows a graph of the wind speed versus altitude, and shows the wind vector at several altitudes.

The 'Set wind' button opens the wind settings dialogue (e.g. to manually set the wind).

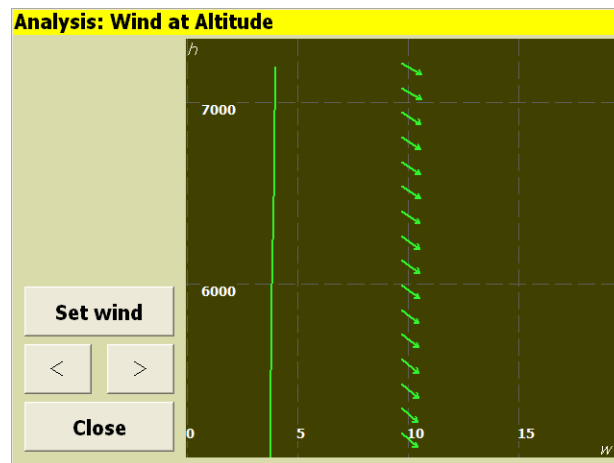

Temperature trace : This page is only available if a supported instrument is connected to XCSoar that produces outside air temperature and humidity. The chart shows the variation of dry air temperature, dew point temperature and outside air temperature with altitude. The convection forecast is summarised as the estimated thermal convection altitude and estimated cloud base.

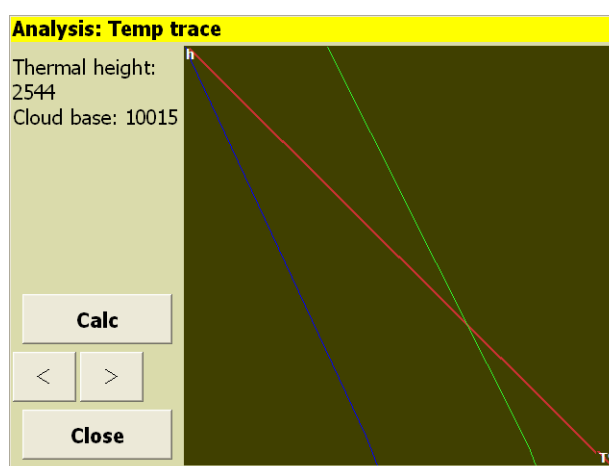

The climb history and barograph pages, described in Section 5.15, are also useful to determine trends in the soaring conditions.


7.12 Weather forecast

Weather forecasts, typically generated from RASP (Regional Atmospheric Soaring Prediction) forecasts, may be overlaid on the map. The user must install a 'xcsoar-rasp.dat' file, prepared by a RASP provider, into the XCSoarData directory for this function to be available.

This section of the documentation is intended to describe the basic functionality; the reader is referred to the RASP website www.drjack.info for more details on how RASP forecasts work, from where they are available, and their use and limitations.

Info 2 ▷ Weather

The forecast overlays are accessed by the weather dialogue.

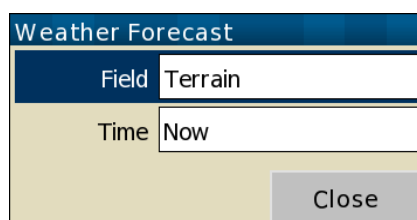


The Field setting determines which data field is displayed on the map. The Time setting determines at which forecast time the data field will be displayed. Upon entering the weather dialogue, the Time setting is advanced to the next nearest forecast time available in the RASP file.

When a field is not available in the RASP file, the background is left blank.


The maximum and minimum values of the field in the map area are drawn at their respective locations on the map. The field name is displayed on the lower left of the screen.

The fields available to display are as follows:

- Terrain : Display terrain on map, no weather data displayed.
- W* : Average dry thermal updraft strength near mid-BL height. Subtract glider descent rate to get average vario reading for cloudless thermals. Updraft strengths will be stronger than this forecast if convective clouds are present, since cloud condensation adds buoyancy aloft (i.e. this neglects “cloud-suck”). This value depends upon both the surface heating and the BL depth.

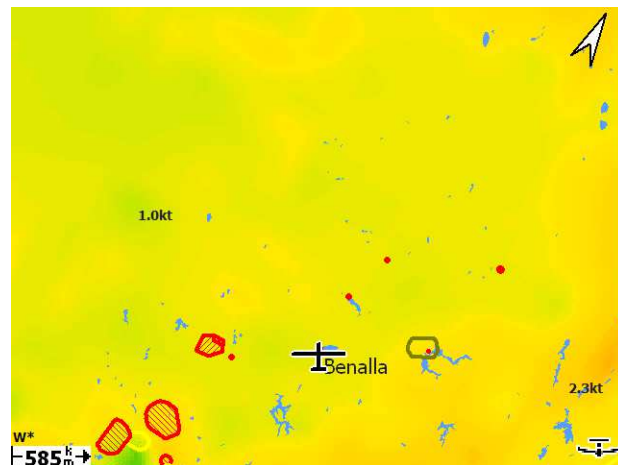


- BL wind spd : The speed and direction of the vector-averaged wind in the BL. This prediction can be misleading if there is a large change in wind direction through the BL.

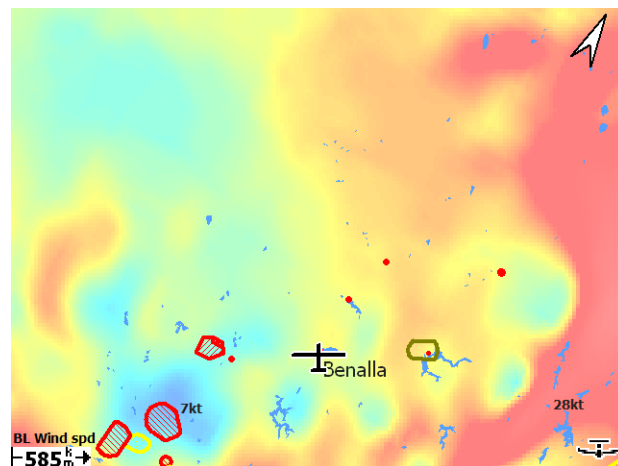


- H bl : Altitude of the top of the mixing layer, which for thermal convection is the average top of a dry thermal. Over flat terrain, maximum thermalling heights will be lower due to the glider descent rate and other factors. In the presence of clouds (which release additional buoyancy aloft, creating “cloud-suck”) the updraft top will be above this forecast, but the maximum thermalling height will then be limited by the cloud

base. Further, when the mixing results from shear turbulence rather than thermal mixing this parameter is not useful for glider flying.

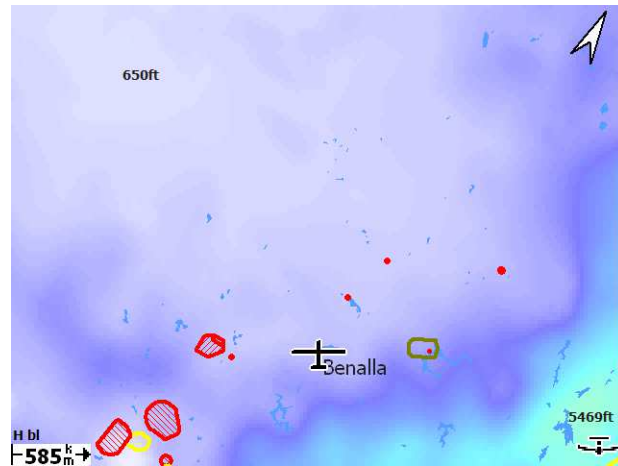

dwcrit : This parameter estimates the height above ground at which the average dry updraft strength drops below 225 fpm and is expected to give better quantitative numbers for the maximum cloudless thermalling height than the BL Top altitude, especially when mixing results from vertical wind shear rather than thermals. (Note: the present assumptions tend to underpredict the max. thermalling height for dry consitions.) In the presence of clouds the maximum thermalling height may instead be limited by the cloud base. Being for “dry” thermals, this parameter omits the effect of “cloudsuck”.

bl cloud : This parameter provides an additional means of evaluating the formation of clouds within the BL and might be used either in conjunction with or instead of the other cloud prediction parameters. It assumes a very simple relationship between cloud cover percentage and the maximum relative humidity within the BL. The cloud base altitude is not predicted, but is expected to be below the BL Top altitude.

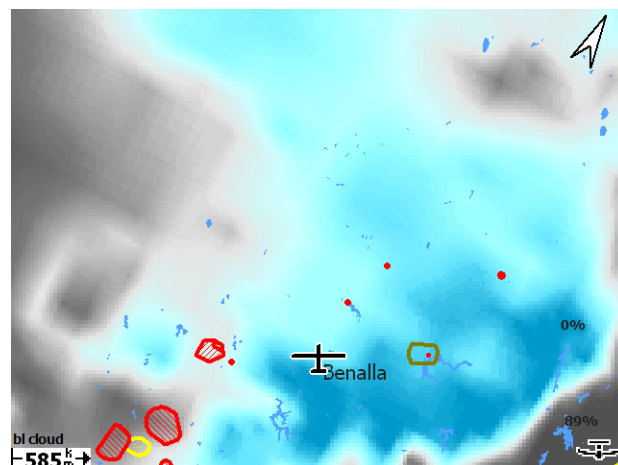

- Sfc temp : The temperature at a height of 2m above ground level. This can be compared to observed surface temperatures as an indication of model simulation accuracy; e.g. if observed surface temperatures are significantly below those forecast, then soaring conditions will be poorer than forecast.
- hwcrit : This parameter estimates the altitude at which the average dry updraft strength drops below 225 fpm and is expected to give better quantitative numbers for the maximum cloudless thermalling height than the BL Top altitude, especially when mixing results from vertical wind shear rather than thermals. (Note: the present assumptions tend to underpredict the max. thermalling height for dry consitions.) In the presence of clouds the maximum thermalling height may instead be limited by the cloud base. Being for “dry” thermals, this parameter omits the effect of “cloudsuck”.
- wblmaxmin : Maximum grid-area-averaged extensive upward or downward motion within the BL as created by horizontal wind convergence. Positive convergence is associated with local small-scale convergence lines. Negative convergence (divergence) produces subsiding vertical motion, creating low-level inversions which limit thermalling heights.
- blcwbase : This parameter estimates the altitude of the cumulus cloud base.

The colour schemes used in rendering the RASP contours are illustrated in the table below.

Incursion events

Three types of events are detected by XCSoar in relation to SUA:

Predicted incursion : This event is detected when the glider is estimated to be on a track that will result in entering the airspace at a set time in the future. The time is the airspace 'warning time' configuration setting.

The use of a long term average track in these calculations means that the system can still predict incursion even when drifting in the wind when circling.

Entering : This event occurs when the glider enters an airspace region.

Leaving : This event occurs when the glider leaves an airspace region.

In all cases, the boundary of the region is defined by maximum and minimum altitudes or flight levels, as specified in the airspace file.

Airspace warnings are still issued even if the incursion region is off-screen.

Where a barometric altitude source is available, it is used preferentially to GPS altitude in detecting airspace incursions. This makes the system conform to normal conventions of having airspace violations based on QNH-adjusted altitude.

8.2 Airspace warnings

The concept of airspace warnings in gradual levels is introduced:

None : Aircraft is outside and distant from airspace.

Near : Aircraft is predicted to penetrate the airspace and is close to doing so.

Inside : Aircraft is inside airspace.



At all times XCSoar monitors the aircraft relative to all airspace and maintains warning levels for each. The airspace warnings are still filtered according to the airspace filter preferences; such that certain categories of airspace may be effectively disabled. The sequence of events when entering an airspace results typically in two warnings: when near (level 1), and when inside (level 2).

Whenever the warning level increases (above level 0) for any airspace, the airspace warning dialogue appears, accompanied by a system beep from Altair or the PDA. When there are no more airspace regions at warning levels above 0, the dialogue disappears automatically.

Airspace warning dialogue

The airspace warning dialogue contains a list of up to 4 individual warnings. The list items status background is coloured red if the glider is inside, and yellow if near. If the warning is acknowledged, the text is greyed out.

Each list item occupies two rows, and includes the following details:

<NAME and Class>	<TOP>	<Position>	<Time and distance
------------------	-------	------------	--------------------

The values in the list are continuously updated. An example follows:

Bern TMA Class D	FL100	near 35 sec horizontal dis
------------------	-------	----------------------------

This means that the aircraft is 1300m horizontally separated from the Class D airspace 'Bern TMA', with a base of 1750m and ceiling at FL100. Another example:

Bern CTRgld Class C	1350m	inside
---------------------	-------	--------

This means that the aircraft is inside the Class C airspace 'Bern CTRgld', with base of terrain surface and ceiling at 1350m.

If there are airspace warnings any time the airspace warning dialogue is shown you get the details to an airspace by touching it (for Altair: Selecting and pressing the Enter key).

Airspace warning acknowledgement

When the warning dialogue is visible and an airspace warning is active, it is possible to close the warning dialogue without acknowledging the warning. Depending on the hardware used you may press ESC (on PC or Altair) or the Close button.

When one or more warnings are visible in the airspace warning dialogue, a warning can be acknowledged by pressing one of the buttons along the bottom of the dialogue. When the list contains more than one airspace warning, the rotary button on Altair (or cursor on PDA) can be used to select one for acknowledgement.

The meanings of the acknowledgement buttons are as follows:

ACK Warn : Acknowledge the current warning level. A new warning will appear only if the warning level increases. (Key F5 on Altair)

ACK Space : Acknowledge all current and future warning levels from this particular airspace region while the aircraft is within 2.5km horizontal separation and 500m vertical separation. (Key F6 on Altair)

ACK Day : Acknowledge all current and future warning levels from this particular airspace region for the rest of the flight (specifically, until Altair/XCSoar is restarted). (Key F7 on Altair)

Enable : Cancels an acknowledgement of the airspace, to reactivate all warnings from this space. (Key F8 on Altair)

Close : Closes the airspace warning dialogue, without acknowledging airspace. The dialogue will re-open automatically if the airspace warning level increases.

Note that not all acknowledgement buttons may be visible for all warning levels. In particular, if inside SUA, you do not have the option to Acknowledge the Warning (ACK Warn), since it is at this point no longer warning of an impending airspace incursion, but in fact stating that you are currently inside the airspace.

The general guidelines for using the dialogue are:

- Don't acknowledge a warning if you intend to or must avoid the airspace
- The warning system beep only occurs when the warning level increases.
- The warning system is designed to allow circling near an airspace without over-stressing the pilot with extraneous warnings.

When an airspace region is acknowledged, the region is drawn on the screen without a pattern.

When the aircraft is predicted to enter an SUA region, or it actually enters an SUA region, a warning is raised, presented as an audio alert and a status message describing the type of airspace warning, and some SUA details (including class of airspace, base and ceiling altitude or flight level).

Acknowledged warnings will repeat after a certain time specified as the 'Acknowledge time' in the configuration settings.

Airspace warning acknowledgements apply to individual SUA regions. If, for example, a glider enters airspace A and the pilot acknowledges the warning, and shortly thereafter is predicted to enter airspace B, an airspace warning for SUA region B will be raised.



If you want acknowledged airspace warnings to not be repeated, set a very large value for the configuration setting 'Acknowledge time'.

Airspace warnings are automatically cleared when both the current glider's position as well as the estimated future track are clear of the airspace.

Simultaneous airspace warnings can occur if the aircraft (or its estimated future track) penetrates multiple airspace regions.

8.3 Airspace query and details

For touchscreen/mouse devices, when an airspace region is visible on the map area, it may be queried by touching the region on the map. The map item list will appear and give you an overview of the waypoints, airspaces, etc. below your finger tip, or mouse pointer. SUAs are listed with similar details as provided when an actual warning is raised. The query returns all airspace regions when overlapping airspace is visible at the query location. Selecting the SUA on the list and pressing **Details** or the enter key displays all airspace details.



For Altair users: This kind of airspace detail query can also be accessed through the pan mode. Move the cursor cross over the location that you are interested in and click the **What's here?** button. The map item list will appear and give access to the details under your cursor position.

Airspace filter dialogue

The Airspace Filter dialogue allows warnings and display to be enabled or disabled for each class of airspace.

This may be accessed several ways:

- From the main menu **Config 3** > **Airspace** .
- Or at the system configuration page for airspacees, press the **Filter** button.

No Gliders	Warn	Display
CTR	Warn	Display
Wave	Warn	Display
Task Area		Display
Class E		Display

To use the dialogue, move up or down the list and the enter key will cycle between the various warning and display options.

Airspace selection dialogue

Pressing the **Lookup** button brings up the airspace select dialogue. This functions similarly to the waypoint lookup dialogue, and allows search based on name, distance, direction, and type (class).

Filter...	Stuttgart Class D	D	0km317°
Name	Stuttgart Class D	D	0km317°
	Stuttgart Class C	C	0km317°
Distance	Alb-Nord_1 119.325/W		1km146°
50 km	Stuttgart Class D	D	6km158°

Once an airspace item has been located, you have the chance to acknowledged it for the day. From the airspace management dialogue it is possible to re-enable it again.


8.4 Analysis dialogue



The analysis dialogue contains a page showing a cross-section of the airspace.

The display shows along the horizontal direction, the distance from the glider out to 50 km in the direction of the glider's track; along the vertical direction is altitude. The altitude of the glider is

indicated by a white arrow. This page is useful to help visualise complex layering of airspace.

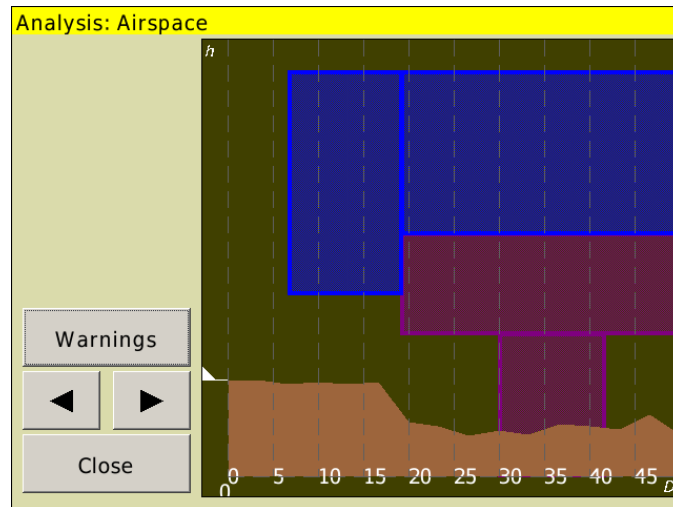

The “Warnings” button opens the airspace warning dialogue if close to airspace.

8.5 FLARM traffic

If connected to a FLARM device, FLARM traffic is displayed on the map area. Each FLARM aircraft received is drawn as a dashed red disk.




Do not use XCSoar for collision avoidance, as FLARM audio devices are much more suitable in assisting the pilot to be aware of traffic.

Note that unless one is circling, the usual zoom level is such that FLARM traffic will not be easily distinguished. When one is circling, the zoom level might be appropriate, but continuous direction change and the typical latency of a PDA makes the map display a poor aid at helping to locate the traffic.

FLARM map display

12.5 

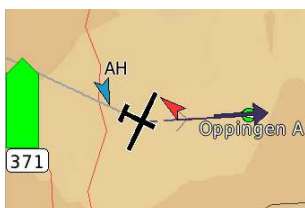


The FLARM targets on the map are drawn as red coloured arrow heads to indicate the direction the FLARM target is heading, as well as the collision risk. Note that these arrow heads are oriented according to the display orientation. For example, if the orientation is track-up, then the arrows show the relative track bearing of the target to the aircraft. If the orientation is north-up, then the arrows show the absolute track bearing of the target.

Display on the map FLARM of aircraft registration or pilot name is made possible via a look-up of the ICAO aircraft ID of FLARM traffic in a file. See Section 13.11 for details on this file format.

Aircrafts with the FLARM privacy flag set will not have any identification displayed.

FLARM radar

12.19 

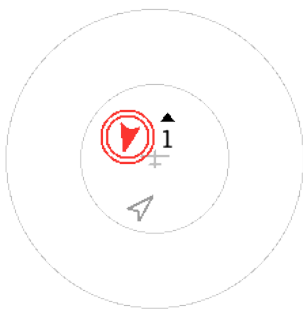

To remedy this situation, when FLARM traffic is received, XCSOAR shows a small radar-style view of the FLARM traffic from the perspective of the aircraft. The FLARM traffic is displayed in identical style, except that the threatening traffic is emphasized with one or two red circles around the arrow head icon. The display corner used for the small radar view can be configured.

This FLARM display is oriented track-up and a small glider icon clearly shows that the display is oriented as such. The scale of the display is linear up to maximum distance of 2000 meters. On the background there are two rings; the first is a 1000 meters radius and the second is 2000 meters. Traffic further away than 2000 meters is drawn at the 2000 meter ring.

All the FLARM displays shows FLARM traffic in colours according to the threat level, or team and dialogue status. The traffic is coloured:

 
- No color for level 0, no threat.
- Yellow for level 1, warning.
- Red for level 2 and 3, alert.
- Green for the team mate.
- Blue is the selected target.

For every target above threat level 1 the rough relative height is shown. The supplied figure is the absolute height difference rounded by 100. A small triangle indicates that the target is higher or lower than you. The example radar shows a target approximately 100 meter (for metric altitude) higher.

The FLARM radar-like display, when enabled, can be suppressed when visible by pressing the enter button (rotary knob on Altair). If the FLARM radar is suppressed, pressing the enter button again cancels the suppression and the radar is shown again. When new traffic appears in the radar, or if the FLARM issues a collision warning, the suppression is cancelled.


FLARM Traffic dialogue

12.13 




Once FLARM has reported traffic and the small radar-style view of the FLARM traffic gets activated you can tap on the FLARM radar to enlarge the view to fullscreen size. The fullscreen FLARM display offers all available information about the FLARM traffic and

depending on the setup it closes by itself, when all traffic has been gone.

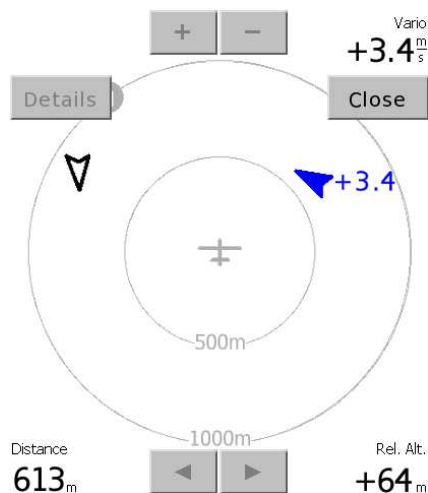


Only a few controls are on the dialogue, from top down:

 North up : If checked the radar screen is oriented North up, if not the orientation is Track up.



 A. Zoom : Automatic zoom scales the radar screen so that the targets are perfectly visible. If not checked, the screen must be zoomed manually. The Up-Down gesture activates the automatic zoom.



Avg/Alt : The button toggles in-between average vario and altitude displayed next to the target.





Details : Through the button a separate dialogue with all details to the selected target is accessed.



+/- : Manually change the zoom from 500 meter to 10000 meter radar range. The zoom gestures also apply here.



</> : Select the previous or next target on the radar, gestures work in the same manner.

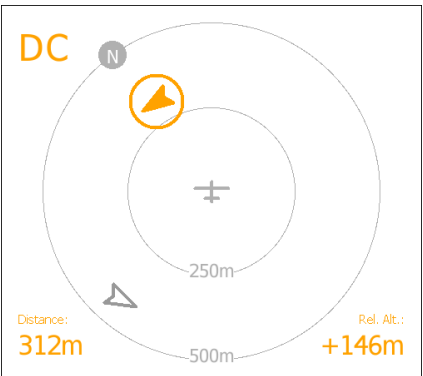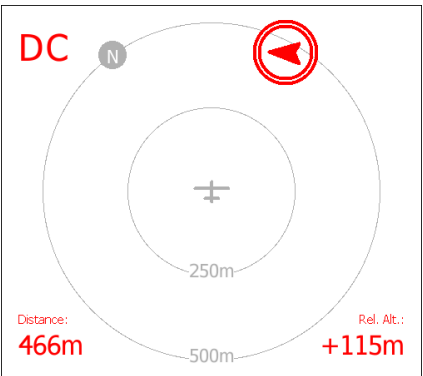

The three screenshots are taken in a sequence and demonstrate a typical near pass of e.g. two FLARM equipped gliders. The extra information is colour-coded in the already mentioned way. In the four corners of the radar screen is additional info to the selected target displayed:

Top left : If available the FLARM Id of the selected target.

Top right : Vario of the target, derived from the consecutive altitude messages.

Bottom left : The distance to the target.

 
Bottom right : The relative height of the target.

From the first to the second FLARM snapshot were passed about 15 seconds. The selected blue target was climbing with 3.4 m/s and had a not as threat recognised course relation. Then in the mean time the 'DC' has turned more to the left, became an alerting threat and gets now displayed red. The FLARM radar switched the zoom from 1000 meter to 500 meter. In snapshot three the continuously climbing target becomes classified to threat level 1, gets yellow coloured and seems to no longer a threat.

8.6 Team flying

Team code is a system to allow pilots flying within a team to communicate their position to each other in a concise and accurate manner. The principle of the system is that each pilot uses their computer to determine a 5 digit code which describes their position relative to a common waypoint. The pilots call each other reporting these codes, and entering the codes into the computer allows their mates to be located accurately by the computer.

To use the team code, all pilots in the team should select a waypoint to be used as the reference. This is all done on the team code dialogue. The reference waypoint is set via the **Set WP** button. Select a waypoint from the lookup dialogue and it will be the team reference.



Own code	TP7H
Mate code	3333TT
Range	0.4 km
Bearing	317°
Rel. bearing	«172°
Flarm lock	GG

During flight, the pilot can read out his 'Own code' from the team code dialogue to his team mate, in order to report his position. When the pilot hears a code report from a team mate, he presses the **Set Code** button to open the text entry dialogue to allow entry of the mate's code.

After entering the mate's code, the relative distance and bearing to the mate is calculated and updated in the dialogue.

FLARM Id lookup

Info 2 ▷

FLARM
Details

XCSoar also supports the encrypted team codes from the Flarm-Net initiative. The **Flarm Lock** button allows you to access the FlarmNet database as well as XCSoar's database for flarm to find a team mate. A simple lookup for a competition ID delivers potentially the desired FLARM identity. Selecting the desired data base entry from the found items allows you to 'lock' your buddy from the far. See [Section 13.11](#) where to find the FlarmNet database etc. explained in detail.

Just a similar functionality provides the flarm details dialogue. It also let you search through the competition ID's in the data base and shows the details on it.

FLARM Traffic Details (DDA85C)

Team	Callsign	TH (D-4449)	
		Change callsign	
Friends			
	Distance	481 m	67°»
	Altitude	353 m	+13°
	Vario	+3.1 m/s	
Clear	Pilot	Tobias Bieniek	
	Airport	AACHEN	
	Radio frequency	130.525 MHz	
Close	Plane	Hornet	

Klick your buddy

Even if XCSoar can 'lock' only one team mate by reference way-point, it handles any number of 'friends' with a known FLARM Id. Chances are high your buddy is not registered in any database. But in any case you get closer to your flying college, just pick the the details from the FLARM radar screen, choose a colour and identify this FLARM response in the future as your buddy.

9 Avionics and Airframe

This chapter discusses XCSoar as a subsystem of the aircraft. It covers the integration of XCSoar with external devices, including GPS, switches and sensors, and aircraft radio transceivers and other devices. Integration with FLARM is covered in [Chapter 8](#), and integration with variometers is covered in [Chapter 7](#).

9.1 Battery life

Most modern PDAs are designed for short sporadic use and so do not have a very good battery capacity when considering the duration of cross-country soaring flights. It is recommended that the PDA be powered externally, via an appropriate voltage converter connected to the glider battery. This installation should be performed by appropriately qualified personnel, and should contain a fuse and a manual isolation switch.

The greatest cause of power drain by the PDA is the LCD back-light, however domestic PDAs are not particularly bright so they may need to have the back-light up full. However, for EFIS systems such as Altair, it is recommended to use the lowest back-light settings that are comfortable.

When operating PDAs under internal battery, XCSoar detects a low battery condition and allows the operating system to shut down and preserve the memory. In addition, it can be set up to blank the screen after a period of inactivity, so that it can reduce the power consumption. When the screen is blanked, pressing one of the hardware buttons on the PDA activates the screen again. When a status message is issued by the system, the screen becomes activated.

Another way to help conserve battery power is to reduce the computational load by turning off certain features. Drawing terrain and long snail trails contribute significantly to the CPU load.

For Altair/Vega systems, the external supply voltage is displayed on the system status dialogue (see [Section 9.6](#)).


For other embedded platforms, a Battery InfoBox is available that displays the available battery life remaining, as well as the charge state (AC on—charging, or AC Off—operating off internal battery power).

9.2 GPS connection

XCSoar requires a 3D GPS fix for its navigation functions.

GPS status

GPS status icons and text may appear on the bottom edge of the map display to indicate:

 

Waiting for GPS fix (a) : Better reception or additional time to search for satellites is required. The GPS may have a 2D fix. The aircraft symbol disappears while there is no 3D fix.

GPS not connected (b) : No communication with the GPS is received. This indicates an error in the comm port settings or the GPS device may be disconnected or switched off.

When the GPS is not connected for more than one minute, XCSoar automatically attempts to restart communication with the device and will then resume waiting. This method has shown to provide the most reliable way of recovering from communication errors.

XCSoar can handle up to two GPS sources and it uses them to provide redundancy. The sources are configured on the System Configuration screen, on the page entitled "Devices". Device A is the primary GPS data source and Device B is the secondary source.

During operation, if the primary GPS source drops out, XCSoar will use the GPS data from the secondary source. If both sources have valid fixes, the secondary source is ignored. For this reason, it is recommended to have the GPS source with the best antenna or most reliable operation as the primary source (i.e. Device A).

GPS altitude

Some older GPS units (and some new ones) do not output altitude relative to mean sea level, rather they output elevation with respect to the WGS84 ellipsoid. XCSoar detects when this occurs and applies the ellipsoid to geoid offset according to an internal tabulated data at two degree spacing. This is not required for FLARM units or Altair Pro, which correctly output MSL altitude.

9.3 Switch inputs

XCSoar supports monitoring of switches and sensors connected to the host computer, for the purpose of providing situational aware-

ness feedback, alerts, or as general-purpose user-interface input devices. Several mechanisms are available for interfacing to switches and sensors:

- Serial device : Certain intelligent variometers such as triadis engineering's Vega have multiple airframe switches and pass this information on to the PDA or EFIS as special NMEA sentences.
- 1-Wire device : triadis engineering's Altair glide computer and Vega variometer provide a 1-Wire peripheral bus to which various digital and analog sensors can be attached.
- Bluetooth device : Many Pocket PC devices support wireless connection to a Bluetooth Game-Pad device that has several buttons. This is more suited to user-interface input devices than airframe monitoring.

A custom 'input events' file determines how switch and sensor inputs are processed.

A standard set of airframe inputs are defined as:


- Airbrake
- Flap position (positive/landing flap, neutral, negative/reflex)
- Landing gear

This set is expected to expand to include engine and fuel monitoring.

Other logical inputs from Vega include computed quantities relating to specific airframe alerts and aircraft operating envelope warnings, for example "airbrake extended and gear retracted".

Refer to the Vega documentation for more details on switch inputs and how they may be used.

9.4 Vega switch dialogue

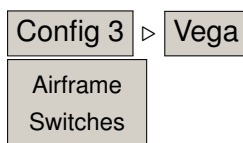

A dialogue displaying switch states for the Vega variometer is available from the menu.

This dialogue is updated in real-time, allowing the pilot to check the correct functioning of switches during daily inspection tests or before takeoff.

Switches			
Airbrake locked	Unknown	Switch	Unknown
Flaps	Unknown	Vario circling	Off
Gear down	Off		
Acknowledge	Off		
Repeat	Off		
Speed command	Off		
Close			

9.5 Slave mode

A device type in the configuration settings, “NMEA Out” is defined for use in joining two Altair or PDA systems in a master-slave mode. In the master, the second com device can be set to NMEA Out, and all data received in the first com device (as well as outgoing data) will be sent to the slave.

As an example where two Altairs are being connected together, in the slave, the first com device can then be set to “Vega” or “Altair Pro” and this system receives all data as if it came from the Master’s GPS and connected instruments (Vega, FLARM etc).

9.6 System status

Info 2	Status
GPS lock	3D fix
Satellites in view	Unknown
Variometer	Disconnected
FLARM	Disconnected
Logger	

The system status dialogue is used primarily as a systems check, to see how the glide computer and the connected devices are performing. This is accessed via the menu and then selecting the tabular **System**.

All dynamic values (e.g. battery voltage, number of satellites in view) are updated continuously.

9.7 Multiple devices

You can configure up to two external devices, connected at the same time (few PDAs have two serial ports, but Bluetooth can handle any number of concurrent connections).

When both provide a valid GPS fix, the first one is chosen by XCSOAR, and the second GPS fix is ignored. As soon as the first device fails, XCSOAR switches to the second one automatically, until the first one recovers.

The same is true for all values (barometric altitude, vario, airspeed, traffic, ...): XCSOAR prefers the first device, and uses the second device only for values that are not received from the first one.

Example: first device is a CAI 302, and the second device is a FLARM. That gives you the best of both: XCSOAR has airspeed, vario and traffic data.

9.8 Managing external devices

The device management dialogue can be accessed from the configuration menu (third page). It shows a list of configured external devices, and it lists what information they provide.

The button “Reconnect” attempts to reconnect to the selected device. XCSoar reconnects to a failed device periodically, but sometimes, it might be desirable to trigger that manually.

The button “Flight download” is only available with supported IGC loggers (see [2.1](#) for a list). Upon clicking, XCSoar retrieves a list of flights, and asks you to select one. The IGC file will be downloaded to the “logs” directory inside XCSoarData.

The button “Manage” is enabled when a Vega or a CAI 302 is connected. It provides access to special features of these devices, such as clearing the CAI 302 flight memory, which is needed sometimes to work around a Cambridge firmware bug.

10 Quickstart

This chapter provides instructions for using XCSoar in typical cross-country tasks. It is separated into simple scenarios to demonstrate how to use key features. It assumes the configuration options have already been set up to the user's preferences.

These instructions are intended to provide a simple step-by-step guide to flying tasks of varying levels of complexity but are not intended to demonstrate all the features of XCSoar. Furthermore, the system can be used productively in ways other than as described here.

10.1 Local flight

In this scenario, the pilot intends to fly locally or a casual cross-country task where navigation to pre-determined waypoints is not required.

Prior to takeoff

1. Turn on the device.
2. Open the **Flight Setup** dialogue and adjust the bugs and ballast as required. Set the maximum forecast temperature. Close the dialogue.
3. Open the **Task Edit** dialogue, and create a blank task by pressing **New**.
4. Select "Touring" as task type.
5. Once the task is created, move the cursor to the "add waypoint" item and press enter. Select the start waypoint from the list, e.g. first item is the home base, and press enter. Press close or escape.
6. Select another one "add waypoint", and enter the same waypoint as finish point.
7. Now the task contains one waypoint to home.

In-flight

1. At the appropriate times, set the MacCready manually from the menu, task calculator or from the variometer.
2. Change the bugs/ballast settings as required.

3. At any time, the glider can reach home when the altitude difference bar is a green arrow pointing upwards.
4. Optionally, activate **MC Auto** when ready to return home. If the MacCready mode was set to “Final Glide” or “Both”, then the system will command the optimal speed to return home.

After landing

1. The **Status** dialogue shows the elapsed flight time.
2. The analysis dialogue can be used to analyse or review the flight.
3. The IGC logger replay can be used to replay the flight.
4. These actions may be performed after turning the device off and on again.

10.2 FAI Task

In this scenario, the pilot intends to fly a triangle FAI task with a single start sector and automatic waypoint advance.

Prior to takeoff

1. Turn on the device.
2. Open the **Flight Setup** dialogue and adjust the bugs and ballast as required. Set the maximum forecast temperature. Close the dialogue.
3. Open the **Task Edit** dialogue, and create a blank task by pressing **New**. Select “FAI triangle” as task type.
4. Move the cursor to the “add waypoint” item and press enter. Set the start and sector type and select the desired waypoint from the list and press enter. Once finished, press close.
5. Move the cursor to the “add waypoint” item again and press enter. Select the waypoint from the list and press enter. This will add the first waypoint to the task.
6. Repeat the procedure for the second waypoint. A good idea to find the right second turn is to filter the waypoint list by bearing (+120°) and the proper distance of the triangles edge. The filter references to the first waypoint of our triangle.
7. Repeat the last step as required for an additional waypoint. The last waypoint is the finish waypoint.
8. The task is now entered. You may declare it and send the task to a connected logger device.

In-flight

1. The current waypoint will advance automatically as the pilot flies through the observation zones.
2. After the task is started, the **Status** dialogue can be opened to verify a valid start was detected. "Valid Start" should be tagged as true, The start time can be reviewed, the start height is saved and the min. finish height according given rules is shown.
3. At all times the black track arrow will point at the next waypoint. The blue arrow will point at the direction the glider should track when in cruise.
4. If **Zoom Auto** is activated, the map will automatically zoom in as task waypoints are approached.
5. At the appropriate times, adjust the MacCready by the menu, the task calculator or the connected variometer; or activate **MC Auto**. If the MacCready mode was set to 'Final Glide' or 'Both', then the system will command the optimal speed to return home; and the MacCready value will be set to the minimum climb rate at which it is beneficial to continue to climb.
6. Change the bugs/ballast settings as required.
7. Refer to the **Analysis** dialogue as required.
8. Refer to the **Status** dialogue as required. This shows the start time, elapsed time on task, estimated arrival time, average task speed etc.
9. At any time, when the altitude difference bar is a green arrow pointing upwards the glider can finish the task.

After landing

As described in Section [10.1](#).

10.3 AAT Task, Manual Arm

In this scenario, the pilot intends to fly a triangle AAT task, and will manually arm the waypoint advance system.

Prior to takeoff


1. Turn on the device.
2. Open the **Flight Setup** dialogue and adjust the bugs and ballast as required. Set the maximum forecast temperature. Close the dialogue.

3. Open the **Task Edit** dialogue, and create a blank task by pressing **New**. Select “AAT” as task type.
4. Once the task is created, move the cursor to the ‘add waypoint’ item and press enter. Add waypoints in the already described way.
5. The AAT requires additional input to the kind and size of the observation zone. Adjust AAT sector parameters for this waypoint and press close or escape.
6. Repeat the last two steps as required for additional waypoints. The last waypoint is the finish waypoint.
7. The AAT task is now entered. Open the **Properties** dialogue and set the given task time.
8. The estimated elapsed time to complete the task with different MacCready settings can be explored from the **Task Calc** dialogue. Adjusting the MacCready value and see what “AAT Range” setting is suggested by XCSoar.


In-flight

1. When the pilot is ready to start the task, press the **Arm Start** button. The current waypoint will then advance automatically once, as the pilot flies through the start sector. After this occurs, the advance trigger is disarmed.
2. In order to re-start, the pilot needs to manually revert to the **Start Turnpoint** and again press the **Arm Start** button prior to flying through the start sector again.
3. After the task is started, the **Status** dialogue can be opened to verify a valid start was detected. If the start time is given, the start was detected and legal according to the task start rules specified in the configuration. Otherwise it will display “INVALID”.
4. During flight, the estimated elapsed time to complete the task with different MacCready settings can be explored from the **Task Calc** dialogue. Once a decision is made to extend or reduce the AAT range this can be done by manually manipulate the **Target**. This allows the pilot to effectively increase or decrease the task distance and estimate the consequence in AAT time.

The figure below shows the course around the targets at range set to –100%.

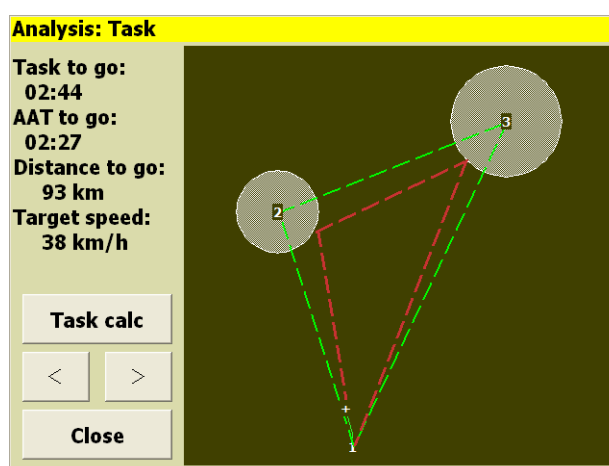

The figure below shows the course around the targets at range set to 100%.

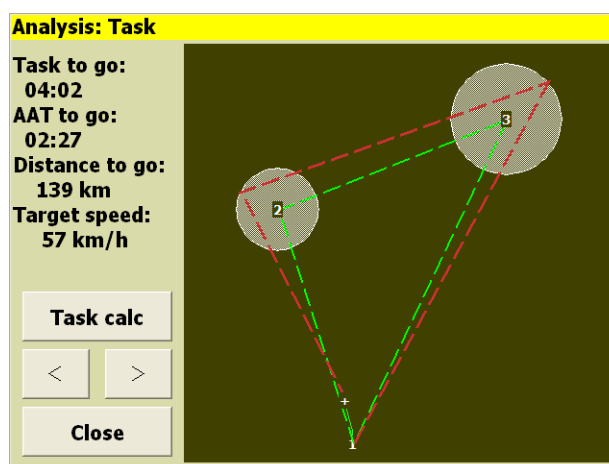

5. At all times the black track arrow will point at the next target. The target is the location within the AAT sector at the range specified in the **Task Calc** dialogue. The blue arrow will point at the direction the glider should track when in cruise.
6. When the pilot is within or approaching an AAT sector and is ready to advance to the next waypoint, press the **Arm Turn** button. The current waypoint will then advance automatically once, if the pilot is inside the observation zone. After this occurs, the advance trigger is disarmed.
7. If Auto Zoom is activated, the map will automatically zoom in as task waypoints are approached.
8. At the appropriate times, adjust the MacCready by the menu, the task calculator or the connected variometer; or activate **MC Auto**. If the MacCready mode was set to 'Final Glide' or 'Both', then the system will command the optimal speed to return home; and the MacCready value will be set to the

minimum climb rate at which it is beneficial to continue to climb.

9. Change the bugs/ballast settings as required.
10. Refer to the **Analysis** dialogue as required.
11. Refer to the **Status** dialogue as required. This shows the start time, elapsed time on task, estimated arrival time, average task speed etc.

After landing

As described in Section [10.1](#).

11 InfoBox Reference

InfoBox data types are grouped into logical categories.

All InfoBoxes display their data in user-specified units. Whenever the content is invalid, the displayed value will be '—' and the content is greyed out. This happens, for example, when no terrain elevation is found for the 'Terrain Elevation' InfoBox, or in the same way for a derived InfoBox like 'Height AGL'.

Some of the InfoBox contents are modifiable complex values like 'MC setting', or 'Wind'. Most of those values are now accessible through an InfoBox dialogue. It is a short cut to quickly change the most often accessed items. An InfoBox dialogue is opened by long press to the InfoBox (Touchscreen devices), or 'Select' and 'Enter' (PC, Altair).

In the following description of the InfoBox types, the first title is as it appears in the InfoBox configuration dialogue box, the second title is the label used in the InfoBox title.

11.1 Altitude

Altitude GPS

Alt GPS			
Altitude AGL			
Simulator	Info	Setup	Close
-100	-10	+10	+100

This is the altitude above mean sea level reported by the GPS. (Touch-screen/PC only) In simulation mode this value is adjustable with the up/down arrow keys. The right/left arrow keys also cause the glider to turn.¹

Barometric altitude

Alt Baro

This is the barometric altitude obtained from a device equipped with pressure sensor.¹

Altitude (Auto)

Alt <auto>

This is the barometric altitude obtained from a device equipped with a pressure sensor or the GPS altitude if the barometric altitude is not available.

Height AGL

H AGL

This is the navigation altitude minus the terrain elevation obtained from the terrain file. The value is coloured red when the glider is below the terrain safety clearance height.¹

Terrain elevation

Terr Elev

This is the elevation of the terrain above mean sea level obtained from the terrain file at the current GPS location.

Height above take-off

H T/O

Height based on an automatic take-off reference elevation (like a QFE reference).¹

Flight level

Flight Level

Pressure Altitude given as Flight Level. Only available if barometric altitude available and correct QNH set.¹

Barogram

Barogram

Trace of altitude during flight.

11.2 Aircraft state**Speed ground**

V GND

Ground speed measured by the GPS. If this InfoBox is active in simulation mode, pressing the up and down arrows adjusts the speed, left and right turns the glider.

Track

Track

Magnetic track reported by the GPS. (Touch-screen/PC only) If this InfoBox is active in simulation mode, pressing the up and down arrows adjusts the track.

Airspeed IAS

V IAS

Indicated Airspeed reported by a supported external intelligent vario.

G load

G

Magnitude of G loading reported by a supported external intelligent vario. This value is negative for pitch-down manoeuvres.

Bearing Difference

Brng. D

The difference between the glider's track bearing, to the bearing of the next waypoint, or for AAT tasks, to the bearing to the target within the AAT sector. GPS navigation is based on the track bearing across the ground, and this track bearing may differ from the glider's heading when there is wind present. Chevrons point to the direction the glider needs to alter course to correct the bearing difference, that is, so that the glider's course made good is pointing directly at the next waypoint. This bearing takes into account the curvature of the Earth.

Airspeed TAS

V TAS

True Airspeed reported by a supported external intelligent vario.

Attitude indicator

Horizon

Attitude indicator (artificial horizon) display calculated from flightpath, supplemented with acceleration and variometer data if available.

11.3 Glide ratio**GR instantaneous**

GR Inst

Instantaneous glide ratio over ground, given by the ground speed divided by the vertical speed (GPS speed) over the last 20 seconds. Negative values indicate climbing cruise. If the vertical speed is close to zero, the displayed value is '—'.

¹ In simulator mode an additional dialogue is available to change the value of the InfoBox.

GR cruise

GR Cruise

The distance from the top of the last thermal, divided by the altitude lost since the top of the last thermal. Negative values indicate climbing cruise (height gain since leaving the last thermal). If the vertical speed is close to zero, the displayed value is '—'.

Final GR

Fin GR

The required glide ratio over ground to finish the task, given by the distance to go divided by the height required to arrive at the safety arrival height. This is no adjusted total energy possible.

Next GR

WP GR

The required glide ratio over ground to reach the next waypoint, given by the distance to next waypoint divided by the height required to arrive at the safety arrival height. Negative values indicate a climb is necessary to reach the waypoint. If the height required is close to zero, the displayed value is '—'.

L/D vario

L/D Vario

Instantaneous lift/drag ratio, given by the indicated airspeed divided by the total energy vertical speed, when connected to an intelligent variometer. Negative values indicate climbing cruise. If the total energy vario speed is close to zero, the displayed value is '—'.

GR average

GR Avg

The distance made in the configured period of time, divided by the altitude lost since then. Negative values are shown as ^^^ and indicate climbing cruise (height gain). Over 200 of GR the value is shown as +++ . You can configure the period of averaging. Suggested values are 60, 90 or 120. Lower values will be closed to GR inst., and higher values will be closed to GR cruise. Notice that the distance is *not* the straight line between your old and current position, it's exactly the distance you have made even in a zigzag glide. This value is not calculated while circling.

11.4 Variometer**Last Thermal Average**

TL Avg

Total altitude gain/loss in the last thermal divided by the time spent circling.

Last thermal gain

TL Gain

Total altitude gain/loss in the last thermal.

Last thermal time

TL Time

Time spent circling in the last thermal.

Thermal climb, last 30 s

TC 30s

A 30 second rolling average climb rate based of the reported GPS altitude, or vario if available.

Thermal average

TC Avg

Altitude gained/lost in the current thermal, divided by time spent thermalling.

Thermal gain

TC Gain

The altitude gained/lost in the current thermal.

Vario

Vario

Instantaneous vertical speed, as reported by the GPS, or the intelligent vario total energy vario value if connected to one.

Netto vario

Netto

Instantaneous vertical speed of air-mass, equal to vario value less the glider's estimated sink rate. Best used if airspeed, accelerometers and vario are connected, otherwise calculations are based on GPS measurements and wind estimates.

Vario trace

Vario Trace

Trace of vertical speed, as reported by the GPS, or the intelligent vario total energy vario value if connected to one.

Netto vario trace

Netto Trace

Trace of vertical speed of air-mass, equal to vario value less the glider's estimated sink rate.

Thermal climb trace

TC Trace

Trace of average climb rate each turn in circling, based of the reported GPS altitude, or vario if available.

Thermal average over all

T Avg

Time-average climb rate in all thermals.

Climb band

Climb Band

Graph of average circling climb rate (horizontal axis) as a function of altitude (vertical axis).

Thermal assistant

Thermal

A circular thermal assistant that shows the lift distribution over each part of the circle.

11.5 Atmosphere

Wind arrow

Wind

Wind speed		
Edit	Setup	Close
Speed	7	
Direction	240°	

Wind vector estimated by XCSoar. Manual adjustment is possible with the connected InfoBox dialogue. Pressing the up/down cursor keys to cycle through settings, adjust the values with left/right cursor keys.

Wind bearing

Wind Brng

Wind bearing estimated by XCSoar. Adjustable in the same manner as Wind arrow.

Wind speed

Wind V

Wind speed estimated by XCSoar. Adjustable in the same manner as Wind arrow.

Head wind component

Head Wind

The current head wind component. Head wind is calculated from TAS and GPS ground speed if airspeed is available from external device. Otherwise the estimated wind is used for the calculation.

Head wind component (simplified)

Head Wind *

The current head wind component. The simplified head wind is calculated by subtracting GPS ground speed from the TAS if airspeed is available from external device.

Outside air temperature

OAT

Outside air temperature measured by a probe if supported by a connected intelligent variometer.

Relative humidity

Rel Hum

Relative humidity of the air in percent as measured by a probe if supported by a connected intelligent variometer.

Forecast temperature

Max Temp

Forecast temperature of the ground at the home airfield, used in estimating convection height and cloud base in conjunction with outside air temperature and relative humidity probe. (Touch-screen/PC only) Pressing the up/down cursor keys adjusts this forecast temperature.

11.6 MacCready**MacCready Setting**

MC <mode>

The current MacCready setting, the current MacCready mode (manual or auto), and the recommended speed-to-fly. (Touch-screen/PC only) Also used to adjust the MacCready setting if the InfoBox is active, by using the up/down cursor keys. Pressing the enter cursor key toggles 'Auto MacCready' mode. An InfoBox dialogue is available

Speed MacCready

V MC

The MacCready speed-to-fly for optimal flight to the next waypoint. In cruise flight mode, this speed-to-fly is calculated for maintaining altitude. In final glide mode, this speed-to-fly is calculated for descent.

Percentage climb

% Climb

Percentage of time spent in climb mode. These statistics are reset upon starting the task.

Speed dolphin

V opt.

The instantaneous MacCready speed-to-fly, making use of netto vario calculations to determine dolphin cruise speed in the glider's current bearing. In cruise flight mode, this speed-to-fly is calculated for maintaining altitude. In final glide mode, this speed-to-fly is calculated for descent. In climb mode, this switches to the speed for minimum sink at the current load factor (if an accelerometer is connected). When 'Block' mode speed to fly is selected, this InfoBox displays the MacCready speed.

Thermal next leg equivalent

T Next Leg

The thermal rate of climb on next leg which is equivalent to a thermal equal to the MacCready setting on current leg.

Task cruise efficiency

Cruise Eff

Efficiency of cruise. 100 indicates perfect MacCready performance. This value estimates your cruise efficiency according to the current flight history with the set MC value. Calculation begins after task is started.

11.7 Navigation**Next Bearing**

Bearing

True bearing of the next waypoint. For AAT tasks, this is the true bearing to the target within the AAT sector.

Next radial

Radial

True bearing from the next waypoint to your position.

Next distance

WP Dist

The distance to the currently selected waypoint. For AAT tasks, this is the distance to the target within the AAT sector.

Next altitude difference

WP AltD

Arrival altitude at the next waypoint relative to the safety arrival height. For AAT tasks, the target within the AAT sector is used.

Next MC0 altitude difference

WP MC0 AltD

Arrival altitude at the next waypoint with MC 0 setting relative to the safety arrival height. For AAT tasks, the target within the AAT sector is used.

Next altitude arrival

WP AltA

Absolute arrival altitude at the next waypoint in final glide. For AAT tasks, the target within the AAT sector is used.

Next altitude required

WP AltR

Altitude required to reach the next turn point. For AAT tasks, the target within the AAT sector is used.

Final altitude difference

Fin AltD

Arrival altitude at the final task turn point relative to the safety arrival height.

Final altitude required

Fin AltR

Additional altitude required to finish the task.

Final distance

Final Dist

Distance to finish around remaining turn points.

Distance home

Home Dist

Distance to the home waypoint (if defined).

11.8 Competition and assigned area tasks**Speed task average**

V Task Avg

Average cross country speed while on current task, not compensated for altitude.

Speed task instantaneous

V Task Inst

Instantaneous cross country speed while on current task, compensated for altitude. Equivalent to instantaneous Pirker cross-country speed.

Speed task achieved

V Task Ach

Achieved cross country speed while on current task, compensated for altitude. Equivalent to Pirker cross-country speed remaining.

AAT time

AAT Time

'Assigned Area Task' time remaining. Goes red when time remaining has expired.

AAT delta time

AAT dT

Difference between estimated task time and AAT minimum time. Coloured red if negative (expected arrival too early), or blue if in sector and can turn now with estimated arrival time greater than AAT time plus 5 minutes.

AAT max. distance

AAT Dmax

'Assigned Area Task' maximum distance possible for remainder of task.

AAT min. distance

AA Dmin

'Assigned Area Task' minimum distance possible for remainder of task.

AAT speed max. distance

AAT Vmax

'Assigned Area Task' average speed achievable if flying maximum possible distance remaining in minimum AAT time.

AAT speed min. distance

AAT Vmin

'Assigned Area Task' average speed achievable if flying minimum possible distance remaining in minimum AAT time.

AAT distance around target

AAT Dtgt

'Assigned Area Task' distance around target points for remainder of task.

AAT speed around target

AAT Vtgt

'Assigned Area Task' average speed achievable around target points remaining in minimum AAT time.

On-Line Contest distance

OLC

Instantaneous evaluation of the flown distance according to the configured Online-Contest rule set.

Task progress

Progress

Clock-like display of distance remaining along task, showing achieved task points.

Start open/close countdown

Start open

Shows the time left until the start point opens or closes.

Start open/close countdown at reaching

Start reach

Shows the time left until the start point opens or closes, compared to the calculated time to reach it.

11.9 Waypoint

Next waypoint

Next WP

The name of the currently selected turn point. When this InfoBox is active, using the up/down cursor keys selects the next/previous waypoint in the task. (Touch-screen/PC only) Pressing the enter cursor key brings up the waypoint details.

Flight Duration Flt Duration	Time elapsed since take-off was detected.
Time local Time loc	GPS time expressed in local time zone.
Time UTC Time UTC	GPS time expressed in UTC.
Task time to go Fin ETE	Estimated time required to complete task, assuming performance of ideal MacCready cruise/climb cycle.
Task time to go (ground speed) Fin ETE VMG	Estimated time required to complete task, assuming current ground speed is maintained.
Next time to go WP ETE	Estimated time required to reach next waypoint, assuming performance of ideal MacCready cruise/climb cycle.
Next time to go (ground speed) WP ETE VMG	Estimated time required to reach next waypoint, assuming current ground speed is maintained.
Task arrival time Fin ETA	Estimated arrival local time at task completion, assuming performance of ideal MacCready cruise/climb cycle.
Next arrival time WP ETA	Estimated arrival local time at next waypoint, assuming performance of ideal MacCready cruise/climb cycle.
Task req. total height trend RH Trend	Trend (or neg. of the variation) of the total required height to complete the task.
Time under max. start height Start Height	The contiguous period the ship has been below the task start max. height.

11.10 Team code

Team code Team Code	The current Team code for this aircraft. Use this to report to other team members. The last team aircraft code entered is displayed underneath.
Team bearing Team Brng	The bearing to the team aircraft location at the last team code report.
Team bearing difference Team BrngD	The relative bearing to the team aircraft location at the last reported team code.
Team range Team Dist	The range to the team aircraft location at the last reported team code.

11.11 Device status

Battery voltage/percent

Battery

Displays percentage of device battery remaining (where applicable) and status/voltage of external power supply.

CPU load

CPU

CPU load consumed by XCSoar averaged over 5 seconds.

Free RAM

Free RAM

Free RAM as reported by the operating system.

11.12 Alternates

Alternate 1

Altn 1

Displays name and bearing to the best alternate landing location.

Alternate 2

Altn 2

Displays name and bearing to the second alternate landing location.

Alternate 1 GR

Altn1 GR

Geometric gradient to the arrival height above the best alternate. This is not adjusted for total energy.

11.13 Obstacles

Nearest airspace horizontal

Near AS H

The horizontal distance to the nearest airspace.

Nearest airspace vertical

Near AS V

The vertical distance to the nearest airspace. A positive value means the airspace is above you, and negative means the airspace is below you.

Terrain collision

Terr Coll

The distance to the next terrain collision along the current task leg. At this location, the altitude will be below the configured terrain clearance altitude.

12 Configuration

XCSoar is a highly configurable glide computer and can be customised to suit a wide variety of preferences and user requirements. This chapter describes the configuration settings and options.

 
12.1 Scope of configuration

There are several ways XCSoar can be customised:


- Modifying configuration settings. This is the sort of configuration most likely to be performed by users; and this is given the greatest attention in this document.
- Changing the language, or even just to change the wording of text in the user interface.
- Changing the button assignments and button menus. This allows the content and structure of the button menu to be changed.
- Changing or adding actions performed when glide computer events take place.
- Defining how long status messages appear and sounds to be played when those messages occur.

Describing all of these in a detail level like a reference manual would do is beyond the scope of this document. The user is referred to browse through the XCSoar Wiki for more details. <http://www.xcsoar.org/trac/wiki>

12.2 Modifying settings



There is a large set of configuration settings that may be customised from the Settings dialogue accessible from the menu. The configuration can be accessed through a two layer structured menu or just sequentially through the back and forward buttons.

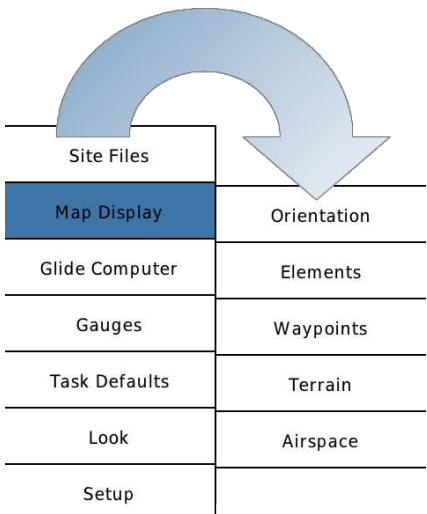

You are strongly discouraged from changing these settings during flight. All changes to the settings should be performed on the ground so that their desired effect on the programs behaviour can be verified.

The settings dialogue contains several pages. Once changes have been made, click the Close button on the screen or PWR/ESC on Altair to close the dialogue and return to the configuration menu. Another button press leads back to the normal map mode.



Once you are happy with your configuration settings, save the profile file and make a backup so that you can later restore the settings if your PDA's memory is accidentally erased.

See Chapter 13 for a description of the data formats of files referred to in the settings. Where no file is to be used, the field can be left blank. File name fields in forms show files that match a file extension filter. This makes it much easier to find and select the correct file.



The main configuration dialogue (Setup System) can be run in Basic or Expert user level, via a selectable field on the left of the dialogue. When in Basic mode, many of the less commonly used and advanced configuration settings are hidden. In the descriptions below, all of the parameters marked with an asterisk are only visible in expert user level.

12.3 Site Files / Site Files

The dialogue specifies most of the important files that must be configured when flying at a new site.

XCSoar data path : The location for all of your XCSoar data on your hard drive, SD card, or the PDA's static memory.

Map Database : The name of the map file (XCM) containing digital elevation terrain data, topography, and optionally waypoints, airspace etc. A good prepared database file covers all the needs for this page.

Waypoints : Primary waypoints file. If left blank, waypoints are loaded from the map file (if available).


More waypoints* : Secondary waypoints file. This may be used to add waypoints for a competition.

Watched waypoints* : Waypoint file containing special waypoints for which additional computations like calculation of arrival height in map display always takes place. Useful for waypoints like known reliable thermal sources (e.g. powerplants) or mountain passes.

Airspaces : The file name of the primary airspace file. If left blank, airspaces are loaded from the map file (if available).

More airspaces* : The file name of the secondary airspace file.

Waypoint details* : The airfields file may contain extracts from Enroute Supplements or other contributed information about individual airfields.

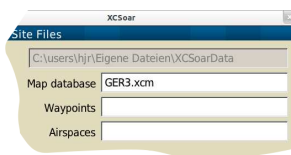

Airspace files define Special Use Airspace. Up to two files may be specified, the first for the main SUA file, and the second is intended for use with NOTAM airspace, and is referred to as the additional airspace file.

The XCM map database concept is the current way to setup a site to fly. XCSOar releases prior to v6.4 required each to be separate files and to be specified separately (as the '*Terrain file*' and '*Topography file*' respectively). This option has been dropped in favor to the XCM map database with XCSOar release v6.4.

The XCM map file, however, contains all these files: Terrain, topography and optionally waypoints and airspaces. If the latter are contained, the e.g. '*Primary waypoint file*' may be left blank and the system will load waypoints from the map file. However, the user can still specify other files and they will be used instead of the data in the map file.


See Section [13.2](#) for more details on map files.

12.4 Map Display / Orientation

This page let you specify the favoured map orientation and view.

Cruise/Circling orientation : This determines how the screen is rotated with the glider, depending on it's current display mode.

Track up: The moving map display will be rotated so the glider's track is oriented up. The north arrow symbol points

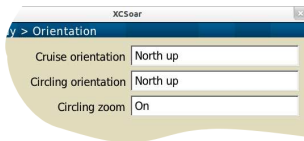

to true north. The glider symbol may be shown rotated according to the computed heading of the glider taking wind into account.

Heading up: The moving map display will be rotated so the glider's heading is oriented up.

North up: The moving map display will always be orientated true north to south and the glider icon will be rotated to show its course (corrected for wind).

Target up: The moving map display will be rotated so the current target direction is oriented up.

Wind up The moving map display will be rotated so the wind is always oriented top-down (might be useful for wave flying).

Circling zoom : This determines whether separate zoom levels will be maintained for circling and cruise modes. If enabled, then the map will zoom in automatically when entering circling mode and zoom out automatically when leaving circling mode.

Map shift reference : The direction according to the map will be displaced in order to present a meaningful map section.

None: Disable any adjustment.

Track: Use a recent average of the ground track as basis.

Target: Use the current target waypoint as basis.

Glider position offset : Defines the location of the glider drawn on the screen in percent from the screen edge.


Max. auto zoom distance : The upper limit for auto zoom distance.

12.5 Map Display / Elements

This page provides options relating to screen elements overlayed to the map display.

Ground track : Display the ground track (ground track projection) on the map. The setting "Auto" displays the ground track only if there is a significant difference to plane heading.

FLARM traffic : This enables the display of FLARM traffic on the map.

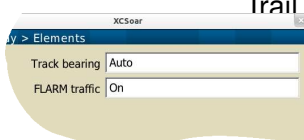

Trail length* : Determines whether and how long a snail trail is drawn behind the glider.

Off: No trail is drawn.

Long: A long trail is drawn (approx 60 minutes).

Short: A short trail is drawn (approx 10 minutes).

Full: A trail for the entire flight is drawn.

Trail drift* : Determines whether the snail trail is drifted with the wind when displayed in circling mode. Switched Off, the snail trail stays uncompensated for wind drift.

Trail type* : Sets the type of the snail trail display.

Vario #1: Within lift areas lines get displayed green and

thicker, while sinking lines are shown brown and thin. Zero lift is presented as a grey line.

Vario #1 (with dots): The same colour scheme as the previous, but with dotted lines while sinking.

Vario #2: The climb colour for this scheme is orange to red, sinking is displayed as light blue to dark blue. Zero lift is presented as a yellow line.

Vario #2 (with dots): The same colour scheme as the previous, but with dotted lines while sinking.

Altitude: The colour scheme corresponds to the altitude.

Trail scaled* : If set to ON the snail trail width is scaled according to the vario signal.

Detour cost markers* : If enabled this displays in cruise flight some figures projected in front of the nose of the glider icon. This is the additional distance in percent if you fly up the position of the figure and after that again straight towards the target, compared to the straight distance to target.

Aircraft symbol* : Sets the symbol used for the aircraft.

Simple: Simplified line graphics, a black glider shape with white contours.

Simple (large): Enlarged simple graphics for better visibility on a small display.

Detailed: Rendered aircraft graphics.

HangGlider: Simplified hang glider as line graphics, white with black contours.

ParaGlider: Simplified para glider as line graphics, white with black contours.

Wind arrow* : Determines the way the wind arrow is drawn on the map.

Off: No wind arrow is drawn.

Arrow head: Draws an arrow head only.

Full arrow: Draws an arrow head with a dashed arrow line.

FAI triangle areas : Whether to show FAI triangle areas on the map.

12.6 Map Display / Waypoints

This page provides options relating to the map display.


Label format : This setting determines the label format displayed with each waypoint. There are four different format options.

Full name: The full name of each waypoint is displayed.

First word of name: Only the first word (up to the first space) of the waypoint name is displayed.

First 3 letters: The first 3 letters of the waypoint name are displayed.

First 5 letters: The first 5 letters of the waypoint name are

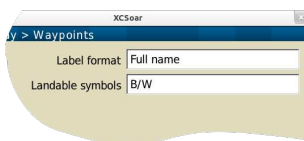

displayed.

None: No name is displayed with the waypoint.

Arrival height* : This enables the arrival height info shown additionally for landables.

None: No arrival height is displayed.

Straight glide: Straight glide arrival height (no terrain is considered).

Terrain avoidance glide: Arrival height considering terrain avoidance.

Straight & terrain glide: Both arrival heights are displayed.

Required glide ration: Show the glide ratio over ground that is required to reach the waypoint.

Label style* : Labels for landables can be shown on a rounded rectangle with white background, or with outlined letters.

Waypoint label visibility* : Controls which waypoints are displayed with names and arrival altitudes on the map:

All: All waypoint labels will be displayed.

Task waypoints and landables: All waypoints part of a task and all landables will be displayed.

Task waypoints: All waypoints part of a task will be displayed.

None: No waypoint labels will be displayed.

Landable symbols : Three styles are available: Purple circles (WinPilot style), a high contrast style with icons, and icons with a traffic light colour scheme. See Section 4.5 for details.

Detailed landables* : Enabling details on landables displays instead of fixed icons variable information like runway length and heading.

Landable size* : A percentage to select the size landables are displayed on the map.

Scale runway length* : Enabling this option will display for detailed landables additionally a scaled runway length based on real length.

12.7 Map Display / Terrain



This page sets how terrain and topography is drawn on the map window. The effect of the changed terrain settings are directly visible at the small preview below.

Terrain display : Draws digital elevation terrain on the map.

Topography display : Draws topographical features (roads, rivers, lakes etc.) on the map.

Terrain colours : Defines the colour ramp used in terrain rendering. Various schemes are available, which works best for you will depend on how mountainous your region is.

- Slope shading* : The terrain can be shaded among slopes to indicate either wind direction, sun position or a fixed shading from North-West. Slopes faced to the wind (or sun) get displayed brighter and the averted slopes get darker.
- Terrain contrast* : Defines the amount of Phong shading in the terrain rendering. Use large values to emphasise terrain slope, smaller values if flying in steep mountains.
- Terrain brightness* : Defines the brightness (whiteness) of the terrain rendering. This controls the average illumination of the terrain.

The available terrain colour schemes are illustrated in the table below.



12.8 Map Display / Airspace

This page is used to determine how the airspace information is displayed and how warnings are issued.

Airspace display : Controls how airspace display and warnings are filtered based on altitude. The airspace filter dialogue also allows filtering of display and warnings independently for each airspace class.

All on: All the airspace information is displayed at the same time.

Clip: Only airspace below a user determined altitude is shown.

Auto: Only airspace at the current altitude plus or minus a user definable margin is shown.

All below: Like auto plus every airspace below the glider is shown.



Clip altitude : For clip mode, this is the altitude below which airspace is displayed.

Margin : For auto and all below airspace mode, this is the height above/below which airspace is included.

Warnings : Determines whether warnings are enabled or disabled.

Warning time* : This is the time before an incursion is estimated at which the system will warn the pilot.

Acknowledge time* : This is the time period in which an acknowledged airspace warning will not be repeated.

Use black outline* : Draws a black outline around each airspace.

Airspace fill mode* : Specifies the mode for filling the airspace area.

Fill all: Transparently fills the airspace colour over the whole area.

Fill padding: Draws a solid outline with a half transparent border around the airspace.

Default: This selects the best performing option for your hardware. In fact it favours 'Fill padding' except for PPC 2000 system.

Airspace transparency* : If enabled, then airspaces are filled transparently.

This page also has a **Colours** and a **Filter** buttons which can be used to review or change the colours/patterns used by each airspace class, and whether each airspace class will be filtered out of warnings and/or display. Depending on the airspace transparency setting it is no longer needed to define patterns. The availability of transparency relies on the capabilities of the used hardware and may differ.

Colours

This function is used to determine the colours used to draw each class of airspace.

First select the airspace class you wish to change. Then select the colour and pattern you wish the selected airspace class to be drawn in.

Filters

The filter function is described in Section 8.3.

12.9 Glide Computer / Safety Factors

This page allows the safety heights and behaviour for the alternates mode to be defined.

Arrival height : The height above terrain that the glider should arrive at for a safe landing.

Terrain height : The height above terrain that the glider must clear during final glide.
See Section 6.8 for more details on the meanings of the safety heights.

Alternates mode : Determines sorting of alternates in the alternates dialogue.
Simple: The alternates will only be sorted by arrival height. The first waypoint in the list is therefore the most reachable waypoint.


Task: The sorting will also take the current task direction into account, such that the sort order is according to minimum extra distance travelled to the respective field and onwards to the task.

Home: The sorting will try to find landing options in the current direction to the configured home waypoint. Similar to 'task' but with the home field as the desired destination.

Polar degradation* : A permanent polar degradation. 0% means no degradation, 50% indicates the glider's sink rate is doubled.


Safety MC* : When safety MC is enabled, this MacCready setting is used for reach calculations, task abort, alternates and for determining arrival altitude at airfields.

STF risk factor* : The STF risk factor reduces the MacCready setting used to calculate speed to fly as the glider gets low, in order to compensate for risk. Set to 0.0 for no compensation, 1.0 scales MC linearly with height (with reference to height of the maximum climb). If considered, 0.3 is recommended. See Section 6.7 for more details.

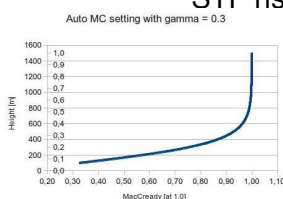

12.10 Glide Computer / Glide Computer

This page allows glide computer algorithms to be configured.

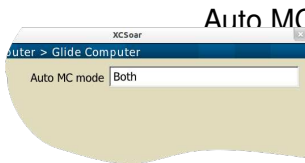

Auto MC mode : This option defines which auto MacCready algorithm is used. For more details see Section 6.13.

Final glide: Final glide adjusts MC for fastest arrival.

Trending average climb: Sets MC to the trending average climb rate based on all climbs.

Both: Uses trending average during task, then fastest arrival when in final glide mode.

Block speed to fly* : If enabled, the command speed in cruise is set to the MacCready speed to fly in no vertical air-mass movement. If disabled, the command speed in cruise is set to the dolphin speed to fly, equivalent to the MacCready speed with vertical air-mass movement.

Nav. by baro altitude* : When enabled and if connected to a barometric altimeter, barometric altitude is used for all navigation functions. Otherwise GPS altitude is used.

Flap forces cruise* : When this option is enabled, causes the flap switches in Vega to force cruise mode when the flap is not positive. This means that when departing a thermal, switching to neutral or negative flap will immediately switch XCSoar's mode to cruise mode. Similarly, for Borgelt B50 systems, the speed command switch forces XCSoar's climb or cruise mode.

GR Average period* : Average efficiency is always calculated in real-time. Here you can decide on how many seconds of flight this calculation must be done. The real distance covered second by second in this period is divided by the final difference of altitude. So if for example you go and return back to the same point after 2 minutes, and you have set 2 minutes as period, average GR will consider the total distance covered in those two minutes, and not the distance between your position 2 minutes before and your current position, that in this case could be almost zero! Normally for gliders a good value is 90-120 seconds, and for paragliders 15 seconds. Lower values will give as a result pretty much the same as GR Instant, while higher values will look like GR Cruise. Other commercial instruments and software use 2 minutes.

Predict wind drift* : Account for wind drift for the predicted circling duration. This reduces the arrival height for legs with head wind (on by default).

12.11 Glide Computer / Wind

This page sets the base for wind computations.

Auto wind : This allows switching on or off the automatic wind algorithm.

Manual: When the algorithm is switched off, the pilot is responsible for setting the wind estimate.

Circling: Circling mode requires only a GPS source.

ZigZag: ZigZag requires an intelligent vario with airspeed output.

Both: Uses Circling and ZigZag.

Prefer external wind : If enabled, the wind vector received from external devices overrides XCSOAR's internal wind calculation.

12.12 Glide Computer / Route

This page allows control over glide reach calculations and route optimisations.

Route mode : This controls which types of obstacles are used in route planning. Please have a look at Section 4.13 for a detailed description.

Route climb* : When enabled and MC is positive, route planning allows climbs between the aircraft location and destination.

Route ceiling* : When enabled, route planning climbs are limited to ceiling defined by greater of current aircraft altitude plus 500 m and the thermal ceiling. If disabled, climbs are unlimited.

Reach mode : How calculations are performed of the reach of the glider with respect to terrain.

Off: Reach calculations disabled.

Straight: The reach is from straight line paths from the glider.

Turning: The reach is calculated allowing turns around terrain obstacles.


Reach display : This determines whether the glide reach is drawn as a line resp. a shade on the map area.

Reach polar* : This determines the glide performance used in reach, landable arrival, abort and alternate calculations.

Task: Uses task MacCready value;

Safety MC: Uses safety MacCready value.

12.13 Gauges / FLARM, Other

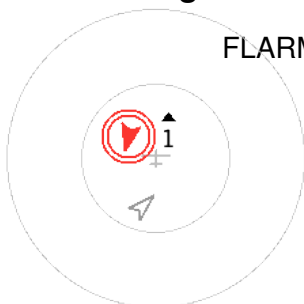

FLARM radar : This enables the display of the FLARM radar gauge. The track bearing of the target relative to the track bearing of the aircraft is displayed as an arrow head, and a triangle pointing up or down shows the relative altitude of the target relative to you.

- Auto close FLARM* : This will close the FLARM radar view when all FLARM traffic has gone.
- Thermal assistant : Enables the display of the ThermalAssistant gauge.
- Thermal band : Enables the display of the thermal profile (climb band) overlay on the map.
- Final glide bar MC0* : If set to ON the final glide bar will show a second arrow indicating the required altitude to reach the final waypoint at MC zero.

In all FLARM environment, the colour of the target indicates the threat level.

12.14 Gauges / Vario

This page bundles all details to the vario-gauge and is entirely classified as expert setup.

- Speed arrows* : Whether to show speed command arrows on the vario gauge. When shown, in cruise mode, arrows point up to command slow down; arrows point down to command speed up.
- Show average* : Whether to show the average climb rate. In cruise mode, this switches to showing the average net airmass rate.
- Show MacCready* : Whether to show the MacCready setting.
- Show bugs* : Whether to show the bugs percentage.
- Show ballast* : Whether to show the ballast percentage.
- Show gross* : Whether to show the gross vario value.
- Averager needle* : If true, the vario gauge will display a hollow averager needle. During cruise, this needle displays the average net value. During circling, this needle displays the average gross value.

12.15 Gauges / Audio Vario

This page bundles all details to the audio vario-gauge.

- Audio Vario : Enable/Disable the audio variometer.
- Volume : Set the volume of the variometer sounds.
- Enable Deadband : Enable/Disable the mute for audio output when the current lift is in a certain range around zero.
- Min. Frequency* : The tone frequency that is played at maximum sink rate.
- Zero Frequency* : The tone frequency that is played at zero climb rate.
- Max. Frequency* : The tone frequency that is played at maximum climb rate.

Deadband min. lift* : If the deadband feature is enabled the vario will play sounds when the climb rate is below this threshold.

Deadband max. lift* : If the deadband feature is enabled the vario will play sounds when the climb rate is above this threshold.

12.16 Task Defaults / Task Rules

Task rules may be defined to limit valid starts according to competition rules.

Start max. speed* : Maximum speed allowed in start observation zone. Set to 0 for no limit.

Start max. speed margin* : Maximum speed above maximum start speed to tolerate. Set to 0 for no tolerance.

Start max. height* : Maximum height above ground while starting the task. Set to 0 for no limit.

Start max. height margin* : Maximum height above maximum start height to tolerate. Set to 0 for no tolerance.

Start height ref.* : Reference used for start max. height rule.

MSL: Reference is altitude above mean sea level.

AGL: Reference is the height above the start point.

Finish min. height* : Minimum height based on finish height reference (AGL or MSL) while finishing the task. Set to 0 for no limit.

Finish height ref.* : Reference used for finish min. height rule, correspondingly to the start rule height reference.

On-Line Contest : Determines the rules used to optimize On-Line Contest paths. The implementation conforms to the official release 2010, Sept. 23.

OLC FAI: Conforms to FAI triangle rule. Three turns and common start and finish. For tasks longer than 500km, no leg less than 25% or larger than 45%; otherwise no leg less than 28% of total. Finish height must not be lower than start height less 1000 meters.

OLC Classic: Up to seven points including start and finish, finish height must not be lower than start height less 1000 meters.

OLC League: A contest on top of the classic task optimisation, cutting a 2.5 hours segment over max. 3 of the turns. Finish height must not be below start height.

OLC Plus: A combination of Classic and FAI rules. 30% of the FAI score are added to the Classic score.

DMSt: Deutsche Meisterschaft im Streckensegelflug.

XContest:

DHV-XC:

SIS-AT:

FFVV NetCoupe: The FFVV NetCoupe '*libre*' competition.

Predict Contest : If enabled, then the next task point is included in the score calculation, assuming that you will reach it.

12.17 Task Defaults / Turnpoint Types

This page allows to set default turnpoint types used by the task editor. All options are well described for the task manager in chapter 5.


12.18 Look / Language, Input

This page allows to customise the way the user controls and interacts with XCSoar.

- Auto Blank* :** This determines whether to blank the display after a long period of inactivity when operating on internal battery power (visible for some mobile devices only).
- Events* :** The Input Events file defines the menu system and how XCSoar responds to button presses and events from external devices.
- Language :** The language options selects translations for English texts to other languages. Select **English** for a native interface, **Automatic** to localise XCSoar according to the system settings; or you may select one of the two character language short cuts directly.
- Status message* :** The status message file can be used to define sounds to be played when certain events occur, and how long various status messages will appear on screen.
- Menu timeout* :** This determines how long menus will appear on screen if the user does not make any button presses or interacts with the computer.
- Text Input Style* :** Determines which style for text entries is used. See Section 3.6 for further information on textual input.
HighScore Style: For entering text you have to change the underlined character to the relevant letter.
Keyboard: Uses the on-screen keyboard for entering text.
Default: Uses the default input style for your platform.
- Haptic feedback* :** (Android devices only) Let you switch on or off the '*brrr*' when the device accepts your finger press as valid input on the touch-screen.

Press the Fonts button to adjust the fonts XCSoar uses.

Font Configuration

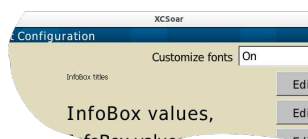

This page enables customisation of fonts in various fields of the program.

Once the customisation is enabled, the **Edit** buttons allow to change some parameters (font face, height, bold and italic) of the chosen font.

If customisation is disabled, default fonts will be used.

12.19 Look / Screen Layout

This page once more details the appearance of the graphical user interface of XCSoar.

InfoBox geometry : A list of possible InfoBox layouts. Do some trials to find the best for your screen size. The preceding number refer to the total number of InfoBoxes of this geometry.

FLARM display* : In case you enabled the FLARM display this is to configure the place on the screen, where the tiny radar window appears. As a default an 'Auto' setup is possible, which means that the radar window will overlay the InfoBoxes, and not the map part of the screen.

Tab dialogue style : Determines whether tabbed dialogues use text or icons.

Message display* : Defines the alignment of the status message box, either **Center** or in the **TopLeft** corner.

Dialogue size* : Determines the display size of dialogues.

Inverse InfoBoxes* : If **On**, the InfoBoxes are white on black, otherwise black on white.

Colour InfoBoxes* : If **On**, certain InfoBoxes will have coloured text. For example, the active waypoint InfoBox will turn blue when the glider is above final glide.

InfoBox border* : Two styles for InfoBox borders are available.

Box: Draws boxes around each InfoBox.

Tab: Draws a tab at the top of the InfoBox across the title.

12.20 Look / InfoBox Pages (or just Pages)

This page allows the definition of the screen page ensemble. A typical setup will contain three pages, the expert can pile up to eight possible pages.

A page is more or less a composition of map and InfoBox set. There are five predefined pages for circling, cruise, final glide, a

map only page and a page with automatic InfoBox set activation depending on your flight mode.

Additionally you can choose from up to five more pages that are composed from map and your custom InfoBox sets.

Page 1..3 : Select what you feel is appropriate for you to appear on page 1,2,3 etc. Selecting "- -" will let the page inactive.

Page 4..8* : Experts can configure up to eight pages in the already described manner.

12.21 Look / InfoBox Modes (or InfoBox Sets)

This page shows and let you customise the available InfoBox sets.

Circling, Cruise, ... : There are three predefined InfoBox sets (Circling, Cruise, Final Glide). Additionally you can define up to five more InfoBox sets and name them as you want. By default they are named AUX-1, AUX-2, and so on.

Selecting one of the sets starts a dialogue which provides all means to name and compose an InfoBox set up to your needs.

Use final glide mode : Controls whether the "final glide" InfoBox mode should be used on "auto" pages.

InfoBox Set Customisation

Name : Sets the name of the currently customized InfoBox set. The button starts the text input dialogue of XCSoar.

InfoBox : The number identifying the current box.

Content : Select the information you want to see at the current box.

The right side of the dialogue always gives the overview on the composed set. When composing at the PC you can use the mouse to select the individual boxes right from the overview.


See Section 11 for a description of the InfoBox types and their meanings.

To change a set press on one of the InfoBoxes labeled with it's current content. The InfoBoxes are numbered; the location of the InfoBoxes depends on the screen layout. The tables below shows the InfoBox enumeration scheme for the landscape and portait screen layout.

1	7
2	8
3	9
4	10
5	11
6	12

1	2	3	4
5	6	7	8

12.22 Setup / Devices

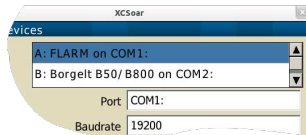

The Devices page is used to specify the ports used to communicate with the GPS and other serial devices. The default settings are COM1 and 4800 bits per second. When connected to the Vega intelligent variometer, the settings should be COM1 and 38400.

Four devices can be configured (device A through D). One, for example, can be connected to a GPS and another to a second device such as a variometer. If there is no further device, set the unused ports to 'Disabled'. XCSOar will then ignore those ports.

COM ports 0 to 10 may be used, including a TCP/IP connection. Which COM port is appropriate for you depends on what brand of PDA you use, and the communications medium (serial cable, Bluetooth, virtual COM port, SD card or CF based GPS, internal GPS). Detailing the various options for different devices is beyond the scope of this document. If you have trouble identifying which COM port to set, please refer to the XCSOar website and mailing lists.

Port : This setting maps an existing interface (port) of your glide computer to one of the available slots A to D.

Baudrate : Set this to the communication speed of the connected device.

TCP Port : This setting is useful to e.g. connect to the Condor flight simulator and do some XCSOar training in winter time.

Bulk baud rate : The baud rate used for bulk transfers, such as task declaration or flight download. The item is visible for those devices that support the feature.

Driver : The specific type of device can be selected from a list in order to enable support for devices with proprietary protocols or special functions.

Sync. from device* : This option lets you configure if XCSOar should use settings like the MacCready value, bugs and ballast from the device.

Sync. to device* : This option lets you configure if XCSOar should send settings like the MacCready value, bugs and ballast to the device.

DumpPort* : Enable this if you would like to log the communication with the device.

Ignore checksum* : If your GPS device outputs invalid NMEA checksums, this will allow it's data to be used anyway.

12.23 Setup / Polar

This page allows the glide polar to be defined. For a large variety of glider types XCSoar provides a predefined glide polar, they could be modified if needed, or you can load your own polar from a file. The file format is based on the WinPilot polar file format (see section 13.6).

To configure the glide computer to the performance of a glider type start with the selection of a type from the **List**. Choose **Import** when you want to load an external polar file. Customise the three V/W points defining the parable curve and the reference weight to your needs. Be aware that namely those four items are of crucial importance for every glide performance relevant computation of XCSoar. **Export** your efforts to a file is always a good idea.



Polar V/W : Three pairs of corresponding horizontal and vertical speed of the glider. A good choice for the point triplet is one at the top most area of the polar, the second at a still very curved area and the third far out where the curvature seems to disappear.

Reference mass : Reference weight at which the given polar is valid.

Dry mass : The complete weight of the rigged glider including the pilots weight except the loaded water ballast. In the absence of a configurable pilot weight XCSoar expect you to include your own weight to the dry mass.

Wing area : Optional specification of the wing area of the glider type.

V rough air : Optional the maximum manoeuvring speed can be entered on this page to prevent the glide computer from commanding unrealistic cruise speeds.

Handicap : The handicap factor used for the On-Line Contest scoring.

Max. ballast : Optional the amount of water ballast XCSoar refers to as 100% ballast. Set to zero if it does not apply.

Dump time : The time in seconds needed for dumping full ballast.

12.24 Setup / Logger

The internal software logger has adjustable time steps, separate for cruise and circling modes. Typically the circling time step is set to a smaller value than cruise in order to give good quality flight logs for replay purposes.

Time step cruise* : This is the time interval between logged points when not circling.

Time step circling* : This is the time interval between logged points when circling.

- Auto logger* : Enables the automatic starting and stopping of the logger on takeoff and landing respectively. Disable when flying paragliders to prevent the low ground speeds from triggering the automatic logger.
- NMEA logger* : Enable the NMEA logger on startup? If this option is disabled, the NMEA logger can still be started manually.
- Log book* : Logs each start and landing.

12.25 Setup / Logger info

This page allows you to set the pilot and aircraft details used for annotating XCSoar's IGC logger.

- Pilot name : This is the pilot name used in the internal software logger declaration.
- Aircraft type : This is the aircraft type used in the internal software logger declaration.
- Aircraft reg. : This is the aircraft registration used in the internal software logger declaration.
- Competition ID : This is the aircraft competition ID.
- Logger ID : This is the logger registration.

12.26 Setup / Units

This page allows you to set the units preferences used in all displays, InfoBoxes, dialogues and input fields. For most users hopefully one of the presets will match the needs. The presets include unit sets for **American**, **Australian**, **British**, and **European**.

Separate selections are available for all items. Once you changed a given preset it will be referenced as 'Custom' set and will also be stored in your profile.

- Aircraft/Wind speed* : Units used for airspeed and ground speed: mph, knots, km/h. A separate unit is available for task speeds.
- Distance* : Units used for horizontal distances e.g. range to waypoint, distance to go: sm, nm, km.
- Lift* : Units used for vertical speeds (variometer): knots, m/s, ft/min.
- Altitude* : Units used for altitude and heights: foot/meter.
- Temperature* : Units used for temperature: °C, °F.
- Task speed* : Units used for task speed: mph, knots, km/h.
- Pressure* : Units used for pressures: hPa, mb, inHg.

Lat./Lon.* : Units, or better formats used for latitude and longitude. Supported are several 'degree/minutes/seconds' formats, respectively their decimal fraction, and the UTM WGS 84 format.

12.27 Setup / Time

Set the local time offset with respect to UTC.

UTC offset : The field allows the UTC local time offset to be specified.

Local time : The local time is displayed below in order to make it easier to verify the correct offset has been entered. Offsets to the half-hour may be set.

Use GPS time* : This option, if enabled sets the clock of the computer to the GPS time once a fix is set. This is only necessary if your computer does not have a real-time clock with battery backup or your computer frequently runs out of battery power or otherwise loses time.

12.28 Setup / Tracking

'Live'-Tracking means using a GPS to determine your position and a mobile network to send this position in real-time to a server, other people can see your exact position and track presented in a map just in time. The tracking option needs the capability to connect to mobile networking as offered by your glide computer.

Currently there are two tracking protocols implemented. 'SkyLines' as a spin off project from XCSoar itself; for details on this service have a look at <http://skylines.xcsoar.org>. And also the 'LiveTrack24' protocol used e.g. by the tracking portal on <http://www.livetrack24.com>. Please consult the web pages of the service provider listed under 'Server' for details on this setup.

SkyLines : Switch this **On** to enable the live stream of your position to 'SkyLines'.

Tracking Interval : The time interval for which one position is send to the tracking service. 'SkyLines' implements a very lean protocol, so that even a 30 sec. interval does not exhaust a plain GPRS connection (ca. 12kbit/sec).

Key : Create a key on the page <http://skylines.xcsoar.org/tracking/info> and enter it here, to identify your positions at the tracking service.

LiveTrack24 : Switch this **On** to enable the live stream of your position to 'LiveTrack24'.

Tracking Interval : The time interval for which one position is send to the tracking service.

Vehicle Type : Type of vehicle used.

Server : The service's web address to stream your position to. There is currently a choice of some predefined.

Username : If you created an account you can enter those credentials here. Otherwise the track will be logged as *'guest'* and thus be anonymous.

Password : The password to your tracking account.

13 Data Files

Data files used by XCSoar fall into two categories:

Flight data files : These files contain data relating to the aircraft type, airspace and maps, waypoints etc. These are the files that are most likely to be modified or set by normal users.

Program data files : These files contain data relating to the 'look and feel' of the program, button assignments, input events.

This chapter focuses on flight data files; see the *XCSoar Advanced Configuration Guide* for details on program data files.

13.1 File management

File names must correspond to the name extensions specified below. It is good practice to make sure that the file names are recognisable so that when making configuration changes there is less risk of confusion between different files and different file types.

Regarding older Pocket PC devices it is a good idea to have data files located in nonvolatile memory, the use of SD cards and other removable media in PDAs can cause performance issues; for smaller files, and files that are only accessed at start-up (waypoints, airspace, glide polars, configuration files), this is acceptable. However, terrain and topography files are accessed continuously while XCSoar is running, so these should be located in faster storage memory. For newer Windows Mobile or Android devices this is not an issue any more. The access to modern memory cards usually meets the required performance.

Many PDAs provide a 'file store' which is nonvolatile; the same arguments above apply regarding their use and performance.

All data files should be copied into the directory:

My Documents/XCSoarData

On PDAs data can also be stored on the operating system file store, on Compact Flash cards or SD cards under the directory XCSoarData.

For example:

SD Card/XCSoarData

IPAQ File Store/XCSoarData

If unsure, just start the newly installed XCSoar and it creates the XCSoarData directory at the right place.

13.2 Map Database

A map database (extension `.xcm`) contains terrain, topography and optional contents like waypoints and airspaces.

Terrain is a raster digital elevation model represented as an array of elevations in meters on a latitude/longitude grid. The internal file format is GeoJPEG2000.

The topography is vector data such as roads, railway lines, large built-up areas (cities), miscellaneous populated areas (towns and villages), lakes and rivers. The topography is stored in ESRI Shape files which are generated from OpenStreetMap.

Map files can be downloaded from the XCSoar web site:

<http://www.xcsoar.org/download/maps/>

To generate a custom map database with different settings and bounds, you may use the map generator:

<http://mapgen.xcsoar.org/>

As far as waypoints or airspaces are included in the map database CXSoar defaults to them. An e.g. separately configured waypoint file will replace all the waypoints given by the map database.

13.3 Waypoints

XCSoar understands the following waypoint file formats:

- WinPilot/Cambridge (`.dat`)
- SeeYou (`.cup`)
- Zander (`.wpz`)
- OziExplorer (`.wpt`)
- GPSDump/FS, GEO and UTM (`.wpt`)

Files are available from the Soaring Turn-points section of the Soaring Server¹: <http://soaringweb.org/TP>

Several commercial and freely distributable programs exist for converting between different waypoint formats.

If the elevation of any waypoints is set to zero in the waypoint file, then XCSoar estimates the waypoint elevation from the terrain database if available.

¹ Mirrors to this website exist, google search for “worldwide soaring turnpoint exchange” if the main server is inaccessible.

13.4 Airspace

XCSoar supports airspace files (extension `.txt`) using a sub set of the widely distributed OpenAir format, as well as the Tim Newport-Pearce file format (extension `.sua`). Files are available from the Special Use Airspace section of the soaring web site:

<http://soaringweb.org/Airspace>

The following is the list of supported airspace types: Class A-G, Prohibited, Danger Areas, Restricted, Task Area, CTR, No Gliders, Wave, Transponder Mandatory, and Other. All other airspace types will be drawn as type "Other". In addition to the OpenAir standard the AR command is recognized as the airspace radio frequency.

13.5 Airfield details

The airfield details file (extension `.txt`) is a simple text format file containing entries for each airfield, marked in square brackets, followed by the text to be displayed on the Waypoint Details Dialogue for that particular waypoint. The text should have a narrow margin because the waypoint details dialogue cannot currently handle word wrapping.

The text may also specify images for airfields or waypoints. To show an image directly in XCSoar use `image=` followed by the file name (this is currently not supported on PC/Windows). Be sure to avoid any additional whitespaces around the equal sign or in front of the keyword. Which files are supported depends on your operating system and the applications that are installed. Android supports JPEG files and other file types, others mostly BMP images.

The names of airfields used in the file must correspond exactly to the names in the waypoints file, with the exception that converting to uppercase is allowed.

The XCSoar website provides airfield details files for several countries and includes tools to convert from various Enroute Supplement sources to this file format.

Users are free to edit these files to add their own notes for airfields that may not otherwise be included in the Enroute Supplement sources.

An example (extract from the Australian airfields file):

```
[BENALLA]
RUNWAYS:
    08 (RL1,7) 17 (RL53) 26
    (R) 35 (R)
```

COMMUNICATIONS:

CTAF - 122.5 REMARKS: Nstd
10 NM rad to 5000'

REMARKS:

CAUTION - Animal haz. Rwy
08L-26R and 17L-35R for
glider ops and tailskidacft
only, SR-SS. TFC PAT - Rgt
circuits Rwy 08R-26L. NS
ABTMT - Rwy 17R-35L fly wide

ICAO: YBLA

image=Benalla_sat.bmp

[GROOTE EYLANDT]

Blah blah blah blah

...

13.6 Glide polar

Many polars of common gliders are built into XCSoar. If your glider model is not listed, you can use a polar file in the WinPilot polar format (extension .plr).

The WinPilot and XCSoar websites provide several glide polar files. Files for other gliders may be created upon request to the XCSoar team.

The format of the file is simple. Lines beginning with * are ignored and so may be used to document how the polar was calculated or if there are restrictions on its use. Other than comments, the file must contain a single row of numbers separated with commas:

- Mass dry gross weight in kg: this is the weight of the glider plus a 'standard' pilot without ballast.
- Max water ballast in liters (kg).
- Speed in km/h for first measurement point, (usually minimum sink speed).
- Sink rate in m/s for first measurement point.
- Speed in km/h for second measurement point, (usually best glide speed).
- Sink rate in m/s for second measurement point.
- Speed in km/h for third measurement point, (usually max manoeuvring speed).

- Sink rate in m/s for third measurement point.

The following is an extension to the existing polare file format and thus optional.

- The wing area in m^2 to allow the wing load computation (could be zero if unknown).
- The max. manoeuvring speed in km/h to enable simple checks for the cruise speed command.

An example, for the LS-3 glider, is given below:

```
*LS-3 WinPilot POLAR file: MassDryGross[kg],
* MaxWaterBallast[liters], Speed1[km/h], Sink1[m/s],
* Speed2, Sink2, Speed3, Sink3
373,121,74.1,-0.65,102.0,-0.67,167.0,-1.85
```



Don't be too optimistic when entering your polar data. It is all too easy to set your LD too high and you will rapidly see yourself undershooting on final glide.

13.7 Profiles

Profile files (extension .prf) can be used to store configuration settings used by XCSoar. The format is a simple text file containing <label>=<value> pairs. Certain values are text strings delimited by double quotes, for example:

```
PilotName="Baron Richtoffen"
```

All other values are numeric, including ones that represent boolean values (true= 1, false= 0), for example:

```
StartDistance=1000
```

All values that have physical dimensions are expressed in SI units (meters, meters/second, seconds etc).

When a profile file is saved, it contains all configuration settings. Profile files may be edited with a text editor to produce a smaller set of configuration settings that can be given to other pilots to load.

When a profile file is loaded, only the settings present in that file overwrite the configuration settings in XCSoar; all other settings are unaffected.

The default profile file is generated automatically when configuration settings are changed or when the program exits; this has the file name xcsoar-registry.prf.

The easiest way to create a new profile is to copy a previous one, such as the default profile. Copy the file, give it a logical name, and then when XCSoar starts next time the new profile can be selected and customised through the configuration settings dialogs.

13.8 Checklist

The checklist file (`xcsoar-checklist.txt`) uses a similar format to the airfield details file. Each page in the checklist is preceded by the name of the list in square brackets. Multiple pages can be defined (up to 20).

An example (extract):

```
[Preflight]
Controls
Harness, secure objects
Airbrakes and flaps
Outside
Trim and ballast
Instruments
Canopy

[Derigging]
Remove tape from wings and tail
...
```

13.9 Tasks

Task files (extension `.tsk`) are stored in a XCSoar own XML format, whereas SeeYou tasks can also be loaded from file (extension `.cup`).

13.10 Flight logs

The software flight logger generates IGC files (extension `.igc`) according to the long naming convention described in the FAI document *Technical Specification for IGC-Approved GNSS Flight Recorders*.

Log-files are stored in the 'logs' subdirectory of the XCSoarData directory. These files can be imported into other programs for analysis after flight.

13.11 FLARM Identification

The FLARM identification file `xcsoar-flarm.txt` defines a table of aircraft registrations or pilot names against the ICAO IDs that are optionally broadcast by FLARM equipped aircraft. These names are displayed on the map next to FLARM traffic symbols, for matching ICAO IDs.

The format of this file is a list of entries, one for each aircraft, of the form `icao id=name`, where `icao id` is the six-digit hex value of

the ICAO aircraft ID, and *name* is free text (limited to 20 characters), describing the aircraft and/or pilot name. Short names are preferred in order to reduce clutter on the map display.

Example:

```
DD8F12=WUS  
DA8B06=Chuck Yeager
```

Currently this file is limited to a maximum of 200 entries.

Additionally the FlarmNet file `data.fln` is supported. It contains all the FLARM identifications distributed by the FlarmNet community. The file can be downloaded from the web site:

<http://www.flarmnet.org>

The file must reside in the XCSoarData directory.

13.12 Input events

The input event file (extension `.xci`) is a plain text file designed to control the input and events in your glide computer.

You do not require access to the source code or understanding of programming to write your own input event files but you do require some advanced understanding of XCSoar and of gliding.

Some reasons why you might like to use xci:

- Modify the layout of button labels
- Support a new set or layout of buttons (organiser hardware buttons)
- Support an external device such as a bluetooth keyboard or gamepad
- Customise any button/key event
- Do multiple events from one key or glide computer triggered process

For more information on editing or writing your own input event file the *XCSoar Developer Manual* is a good starting point.

13.13 Status

Status files are text of the form *label=value*, arranged in blocks of text where each block corresponds to an individual status message. These are delimited by double spaces. Each block can contain the following fields:

key : This is the text of the status message.

sound : Location of a WAV audio file to play when the status message appears. This is optional.

delay : Duration in milliseconds the status message is to be displayed. This is optional.

hide : A boolean (yes/no) that dictates whether the message is to be hidden (that is, not displayed).

Example:

```
key=Simulation\r\nNothing is real!  
sound=\\My Documents\\XCSoarData\\Start_Real.wav  
delay=1500
```

```
key=Task started  
delay=1500  
hide=yes
```

14 History and Development

14.1 Product history

XCSoar started as a commercial product developed by Mike Roberts (UK), where it enjoyed a successful share of the market for several years and going through several releases, the last being **Version 2**. Personal reasons prevented him from being able to continue supporting the product and so in late 2004 he announced the licensing of the source code to the GNU public license, as XCSoar **Version 3**. A support website on Yahoo Groups was set up and the open source project started to gain interest and input by developers.

In March 2005 the program was substantially enhanced and this resulted in **Version 4.0** being released. By this time, coordination of the various development efforts on the source code became difficult and time-consuming, so it was decided to move the project to SourceForge, whereby all the software work could be managed by a concurrent version management system.

In July 2005, **Version 4.2** was released which addressed some compatibility issues that were experienced with certain PDA and GPS hardware configurations.

In September 2005, **Version 4.5** was released. This contained major enhancements to the user interface including the introduction of the 'input event' system and language translation files.

In April 2006, **Version 4.7** was released to Altair customers. This contained stability and performance enhancements as well as many bug fixes; and a new method for handling dialogs based on XML files.

In September 2006, **Version 5.0** was released on all platforms, Altair, PC, PDA. This version contains many improvements and new features and is based on extensive testing in flight and in simulation.

In September 2007, **Version 5.1.2** was released on all platforms, Altair, PC, PDA. This version contains many improvements and new features and is based on extensive testing in flight and in simulation. Major improvements include a new map file format incorporating JPG2000 compression, online contest support, additional supported devices, FLARM radar screen, and overall improved stability, reliability and accuracy of task calculations. Many

feature requests from users have been incorporated into this release.

In February 2008, **Version 5.1.6** was released. This contained numerous bugfixes and user interface enhancements, notably expanding the RASP and AAT functionality.

In March 2009, **Version 5.2.2** was released. As well as user interface improvements, several major features were introduced: IGC files were digitally signed for validation in online contests such as OLC. Windows CE-based PNA navigation devices were supported for the first time. FLARM was integrated with the map display with support for the flarmnet ID database. Developers could now easily compile XCSoar from Linux desktop computers.

In August 2009, **Version 5.2.4** was released with internal fixes and enhancements.

In December 2010, **Version 6.0** was released. Following an extensive rewrite of much of the program, many stability and performance enhancements were made and startup times were dramatically reduced. A great many features were added including a vastly expanded task engine and editor, AAT support, new FLARM and thermal-assistant displays. Many new languages were introduced, and new translations could now be easily generated by users.

Significantly, the rewrite allowed XCSoar to run on UNIX-like systems and Android devices, and the use of modern compiling tools enhanced the performance of the program on the current generation of devices.

In March 2011, **Version 6.0.7b** was released, the first release to officially support Android.

Early 2013: With **Version 6.4.5**, first results of a German and French manual translation got published on the XCSoar home page.

February 2012: XCSoar **is world champion** in Argentina! Tobias did a interview with Santi on IRC (the modern way), read on here: http://www.xcsoar.org/discover/2013/02/05/WGC_Argentina.html.

April 2013: **Version 6.6** was released. Six years after starting the version 6 rework of the XCSoar engine the final outcome get visible on user interface level. A remarkable pile of usability convenience condensed the XCSoar value, including the cross section map view.

May 2013: The Android XCSoar installation counter for the stable release crossed the 30.000 mark.

14.2 Get involved

The success of the project is the result of many kinds of contributions. You do not have to be a software developer to help.

In general, there are perhaps five major ways of contributing, other than working on the software itself:

- Give feedback : Ideas, suggestions, bug reports, encouragement and constructive criticism are all very welcome and helpful.
- Setup suggestions : Because XCSoar is so configurable, we rely to some extent on users to think about how they would like the program to be set up. Selection of infobox layouts, button menus and button assignments require some design thought, and making these available to the developers and other users will help us provide good default settings.
- Data integrity : Airspace and waypoint files need to be kept up to date, and it often takes people with local knowledge to do this.
- Promotion : The more users the software has, the better the product will be. As more people use the software and give feedback, bugs are found more easily and improvements can occur at a greater pace. You can help here, for example, by showing the software to others and by conducting demonstration and training sessions in your club.
- Documentation : Naturally, the manual is always outdated, and we need help with maintaining it.

14.3 Open source philosophy

There are several benefits to having software like XCSoar open source.

- Firstly, it is free so pilots can try out the software at no cost and decide if it is suitable for their needs; and pilots are free to copy the program onto whatever Pocket PC device, PC or EFIS they like without charge.
- You have access to the source code so you are free to change the software or use pieces of it in new free programs.
- Having the source code available on the Internet means that it is subject to wide scrutiny and therefore bugs are easily and quickly fixed.
- A large group of developers are available to help in troubleshooting and quickly implement new features upon request.
- Open source software under the GNU public license cannot at a later date be made closed-source; so by using this soft-

ware you will not be locked in to unspecified software costs in the future.

The full terms of the licensing agreement for XCSoar is given in Appendix [A](#).

The development of XCSoar since its open source release has been entirely a volunteer effort. This does not preclude individual developers or organisations from offering commercial support services. The spirit of the project however suggests that in such cases the commercial services are encouraged to produce some flow-on benefit back to the wider community of users.

14.4 Development process

We try to incorporate new features as quickly as possible. This has to be balanced by the needs to not change substantially the interface without appropriate warnings so users that upgrade do not get a shock. This means that when we introduced the new button menu system in version 4.5, it was necessary to also distribute a file that allowed users to have the buttons assigned to their 'legacy' function.

XCSoar, being used in flight, is a special kind of software because it can be regarded as 'mission-critical', and is a real-time system. This has placed a very high emphasis on developers to perform a great deal of testing before releasing changes to the public.

Flight testing is certainly the best sort of test, but we have also been able to conduct the bulk of testing by using XCSoar in a car, and more recently, by replaying IGC flight logs.

In general, we don't want the program to crash or hang, ever, and if it does so during testing, then whatever bug caused the problem has to be fixed as top priority.

The software developers all keep in contact with each other through the SourceForge developer's mailing list

xcsoar-devel@lists.sourceforge.net

We try to coordinate our activities to avoid conflict and duplicated effort, and to work together as a team. If you would like to get involved in the software development, send the developers an email.

14.5 User base

Who is using XCSoar? Good question, and hard to answer. Since no-one pays for the product — most people download the program anonymously — it is hard for anyone to keep track of how many users are out there.

Statistics from the main website indicate there has been an average of approximately twenty downloads per day between June 2005 and June 2006, and eighty downloads per day between June 2006 and September 2007. Looking at how many people download the terrain and topography data packs from the website indicates that it is used in many countries and in nearly every continent.

XCSOar is used by a wide cross section of pilots, including early post-solo through to experienced competition pilots. There are many 'armchair' pilots who use XCSOar with gliding simulators, such as Condor.

14.6 Credits

Software developers:

- Santiago Berca santiberca@yahoo.com.ar
- Tobias Bieniek tobias.bieniek@gmx.de
- Robin Birch robinb@ruffnready.co.uk
- Damiano Bortolato damiano@damib.net
- Rob Dunning rob@raspberryridgesheepfarm.com
- Samuel Gisiger samuel.gisiger@triadis.ch
- Jeff Goodenough jeff@enborne.f2s.com
- Lars H lars_hn@hotmail.com
- Alastair Harrison aharrison@magic.force9.co.uk
- Olaf Hartmann olaf.hartmann@s1998.tu-chemnitz.de
- Mirek Jezek mjezek@ipplc.cz
- Max Kellermann max@duempel.org
- Russell King rmk@arm.linux.org.uk
- Gabor Liptak liptakgabor@freemail.hu
- Tobias Lohner tobias@lohner-net.de
- Christophe Mutricy xtophe@chewa.net
- Scott Penrose scottp@dd.com.au
- Andreas Pfaller pfaller@gmail.com
- Mateusz Pusz mateusz.pusz@gmail.com
- Florian Reuter flo.reuter@web.de
- Mike Roberts
- Matthew Scutter yellowplantain@gmail.com

- Winfried Simon winfried.simon@gmail.com
- Google Inc., incl. Tom Stepleton stepleton@google.com
- Simon Taylor simon.taylor.uk@gmail.com
- Matthew Turnbull matthewt@talk21.com
- Paolo Ventafridda coolwind@email.it
- James Ward jamesward22@gmail.com
- John Wharington jwharington@gmail.com

Documentation:

- Daniel Audier osteocool@yahoo.fr
- Monika Brinkert moni@sunpig.de
- Kevin Ford ford@math.uiuc.edu
- Claus-W. Häbel c-wh@online.de
- Stefan Murry smurry@ao-inc.com
- Helmut J. Rohs helmut.j.rohs@web.de

Translators:

- Milan Havlik
- *Zdenek Sebesta
- Tobias Bieniek tobias.bieniek@gmx.de
- Niklas Fischer nf@nordthermik.de
- Peter Hanhart peter.hanhart@schoensleben.ch
- Max Kellermann max@duempel.org
- Helmut J. Rohs helmut.j.rohs@web.de
- Philipp Wollschlegel folken@kabelsalat.ch
- *Thomas Manousis
- Miguel Valdiri Badillo catastro1@tutopia.com
- Alexander Caldwell alcald3000@yahoo.com
- Diego Guerrero iccarod@hotmail.com
- *Hector Martin
- Andres Miramontes amiramon@gmail.com
- *Romaric Boucher
- Sylvain Burger sylvain.burger@wanadoo.fr
- *Dany Demarck
- *Zoran Milicic

- *Sasa Mihajlovic
- Gabor Liptak liptakgabor@freemail.hu
- *Kalman Rozsahegyi
- *Enrico Girardi
- *Lucas Marchesini
- *Rick Boerma
- Joop Gooden joop.gooden@nlr.nl
- Hans van 't Spijker
- Michal Jezierski m.jezierski@finke.pl
- *Mateusz Pusz
- Luke Szczepaniak luke@silentflight.ca
- Mateusz Zakrzewski
- *Tales Maschio
- Luis Fernando Rigato Vasconcellos fernando.rigato@gmail.com
- Monika Brinkert moni@sunpig.de
- Nikolay Dikiy
- Brtko Peter p.brtko@facc.co.at
- Roman Stoklasa rstoki@gmail.com
- *Aleksandar Cirkovic
- *Patrick Pagden
- 'zeugma'
- Morten Jensen
- Kostas Hellas kostas.hellas@gmail.com
- Alexander Caldwell alcalld3000@yahoo.com
- Xavi Domingo xavi@santmodest.net
- Arnaud Talon
- Adrien Ott adrien.ott@gmail.com
- Matthieu Gaulon
- Filip Novkoski f1novkoski@gmail.com
- Szombathelyi Zoltán szombathelyi.zoltan@main.hu
- Úr Balázs urbalazs@gmail.com
- Paolo Pelloni paolo@paolopelloni.it

- Piero Missa pieromissa@virgilio.it
- Masahiro Mori mron@n08.itscom.net
- Jinichi Nakazawa jin-nakazawa@wkk.co.jp
- Mike Myungha Kuh
- Rob Hazes
- Thomas Amland thomas.amland@gmail.com
- Quint Segers
- Wil Crielaars kawa1998@home.nl
- Krzysztof Kajda
- Michał Tworek
- Tiago Silva
- Mario Souza
- Júlio Cezar Santos Pires juliocspires@gmail.com
- Wladimir Kummer de Paula
- Pop Paul poppali1@yahoo.com
- Dobrovolsky Ilya ilya_42@inbox.ru
- Mats Larsson mats.a.larsson@gmail.com

*Contributions attributed to the LK8000 project (<http://www.lk8000.it/>)

Other code and algorithms contributions come from:

Ephemeris : Jarmo Lammi

Shapelib : Frank Warmerdam
<http://shapelib.maptools.org>

Least squares : Curtis Olson
<http://www.flightgear.org/~curt>

Aviation Formulary : Ed Williams
<http://williams.best.vwh.net/avform.htm>

JasPer : Michael D. Adams
<http://www.ece.uvic.ca/~mdadams/jasper/>

Volkslogger support : Garrecht Ingenieurgesellschaft

Circling wind analyser : André Somers
<http://www.kflog.org/cumulus/>

Appendix A GNU General Public License

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will

individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

1. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

2. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

3. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
 - (a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
 - (b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
 - (c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else,

saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

4. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
 - (a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - (b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
 - (c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

5. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
6. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
7. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
8. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to dis-

tribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

9. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
10. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.
11. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

No warranty

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA

OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.